



INE.#	OEM.#	Description
FUBT01	HSA6000A	Push Button, Installation Hole Size: $\Phi 38$
FUBT02	KAIH	Push Button, Installation Hole Size: 30 X 30
FUBT03	Y817HRII	Push Button, Installation Hole Size: 30 X 30

INE.#	OEM.#	Description
FUWR01		Door Roller, $\Phi 68 \times 14 \times 6202$
FUWR02		Door Lock Roller (Small), $\Phi 30 \times 16 \times \Phi 14$
FUWR03		Door Lock Roller (Large), $\Phi 38 \times 16 \times \Phi 14$
FUWR04		Sheave Components, $\Phi 66 \times 9.5$

INE.#	OEM.#	Description
FUGS01		Guide Shoe Insert, One 120 X 24 X 6, Two 120 X 28 X 6
FUGS02		Guide Shoe Insert, One 120 X 28 X 6, Two 120 X 24 X 9
FUGS03		Guide Shoe Insert, 200 X 40 X 17
FUGS04		Guide Shoe Assembly, 120 X 16/10, Mounting Hole: 68

INE.#	OEM.#	Description
FUDS01		Door Slider (Rubber), 68 X 43 X 12
FUDS02		Door Slider (Plastic), 68 X 43 X 12

INE.#	OEM.#	Description
FULO01	5245AN2	Door Lock (Left)
FULO02	5245AD3	Door Lock (Left)
FULO03	5245AS3	Door Lock Box (Left)
FULO04	FSD-13	Door Lock Contact
FULO05		Door Closer Device


INE.#	OEM.#	Description
FUSS01	PE-U25NTF	Leveling Sensor
FUSS02	GS01	Limited Switch, 250V
FUSS03	PSMO-25G1	Leveling Sensor
FUSS04	IF12B-03-NO-C3	Limited Switch, Blue

INE.#	OEM.#	Description
FUIB01	SSXK-5	Car Top Inspection Box

INE.#	OEM.#	Description
FUEN01	TS5246N585	Encoder, OIH48-8192C/T-L3-5V
FUEN02	PG16	Door Encoder

INE.#	OEM.#	Description
FUCT01	SH-5H	Contactor, Z209A
FUCT02	N40E	Contactor, 230-240V 50Hz

 FUGS01

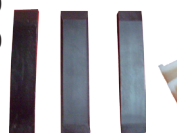


FUGS03



FUGS02



 
FUDS01



FUDS02



 FULO01

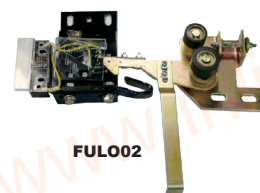

FULO02



FULO03



FULO04



FULO05



FUSS01



FUSS02



FUSS03



FUSS04



FUIB01



FUEN01



FUEN02



FUCT01




FUCT02






 FUDI01




FUDI02

 

FUDI03



 FUDI04

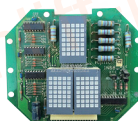

FUDI05



FUDI06



FUDI07




FUPCB01



FUPCB03



 FUPCB05

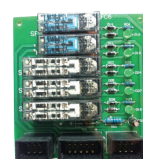

FUPCB07



FUPCB09



FUPCB12



FUPCB15



FUPCB17




FUPCB20



FUPCB23



 FUPCB02

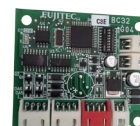

FUPCB04



FUPCB06




FUPCB08



FUPCB10



 FUPCB13

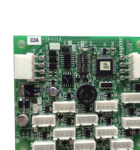

FUPCB18




FUPCB21



FUPCB24



 FUPCB11

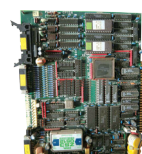

FUPCB14



FUPCB16



FUPCB19



FUPCB22

INE.#	OEM.#	Description
FUDI01	BC34	Display Board
FUDI02	IN83	Display Board
FUDI03	IN-103C	Display Board
FUDI04	INC03	Display Board
FUDI05	IN68	Display Board
FUDI06	IN87B	Display Board
FUDI07	IN104A	Display Board

INE.#	OEM.#	Description
FUPCB01	IF118	PC Board
FUPCB02	CR7A	PC Board
FUPCB03	IF61E	PC Board
FUPCB04	BC32	PC Board
FUPCB05	IF68	PC Board
FUPCB06	IF82D	PC Board
FUPCB07	IFC6	PC Board
FUPCB08	CP38A	PC Board
FUPCB09	DR13	PC Board
FUPCB10	MC15	PC Board
FUPCB11	IF67	PC Board
FUPCB12	BC20A	PC Board
FUPCB13	DR4B	PC Board
FUPCB14	CP15A	PC Board
FUPCB15	CP16A	PC Board
FUPCB16	CP38B	PC Board
FUPCB17	IF107B	PC Board
FUPCB18	IF111A	PC Board
FUPCB19	IF78A	PC Board
FUPCB20	IF75A	PC Board
FUPCB21	CP28B	PC Board
FUPCB22	IN86A	PC Board
FUPCB23	VS20	PC Board
FUPCB24	BC11	PC Board