

User Manual of SP5040 Series IPC iComputer

Preface

Product introduction

SP series IPC iComputer is a series of PC-based industrial intelligent universal controllers based on X86 architecture, launched by Sinsegye. This series of iComputer integrates many functions such as logic control, motion control, industrial vision, and HMI. It has the characteristics of localization, integrated control and computation, high real-time performance and expandability. In addition to the abundant interfaces provided by the product body, some products support body I/O and PCIE interface expansion to meet various complex industrial field application requirements.

Manual user and scope

This manual is intended for the assembly, operation and maintenance of the equipment by technicians who have received the necessary training and obtained qualifications. Only professionals or trained and qualified personnel can assemble, replace and repair this equipment.

Version change record

Version No.	Revision date	Change content
V1.0	2024-05	First version of basic information
V2.0	2024-10	Integration Summary Notes of Revision 1
V3.0	2025-03	1.Proofread some details 2.Optimize the document layout
V4.0	2025-07	1.Proofread some details 2.Exterior Design Revision of iComputer

Access to this manual and resources

This manual is not shipped with the product. If you need an electronic version or a paper version, you can obtain it through the following channels:

- Log in to the official website of Sinsegye (<https://www.sinsegye.com.cn>) for download.
- Contact with the front technical support or sales agent to get it.
- Search and follow the WeChat official account of Sinsegye to obtain it from the official account.

Safety Precautions

Safety requirements

Please follow the instructions in this manual.

Power supply requirements

- 1、Power on AC220V and start the equipment.
- 2、Before you supply power to the equipment, please confirm that the power supply voltage meets the equipment requirements.

Routine maintenance

1. Do not open or disassemble the equipment by yourself. For safety reasons, this equipment can only be opened by professional service personnel.
2. Before cleaning the equipment with a damp cloth, the power cord must be unplugged from the outlet. Do not use any liquid or decontamination sprayer to clean the equipment.
3. If the equipment is not used for a long time, the power cord must be disconnected to prevent the equipment from being damaged by transient voltage.
4. Do not allow any liquid to flow into or spill into the equipment to avoid short circuit or fire.

Working environment


1. Please ensure that the equipment is placed on a secure flat surface before assembly. Accidental dropping or tipping over may cause damage to the equipment.
2. Do not cover or seal the openings in the equipment housing, which are used for air convection to prevent overheating of the equipment.
3. Do not use the equipment in a wet environment.

Table of Contents

Preface	1
Safety Precautions	1
1. Product information	3
1.1. Controller appearance	3
1.2. Controller interface	4
2. Product specifications	6
3. Mechanical assembly	7
3.1. Assembly precautions	7
3.2. Preparation before assembly	7
3.3. Assembly dimensions	8
4. Electrical installation	9
4.1. Wiring recommendations	9
4.2. Communication interface wiring	11
4.3. Display interface specifications	18
4.4. USB interface	20
4.5. PCI and PCIE interfaces	21
5. Operating instructions	23
5.1. Operating system	23
5.2. Power on	24
5.3. Power off	24
5.4. Programming and debugging	24


1. Product information

1.1. Controller appearance

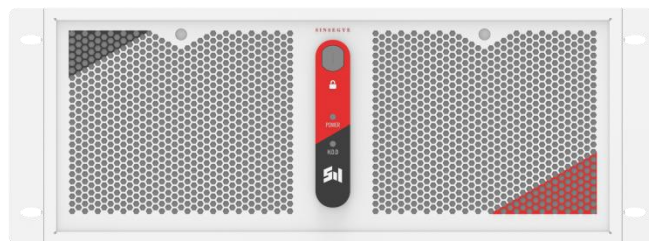


1.2. Controller interface

- SP5040 front panel

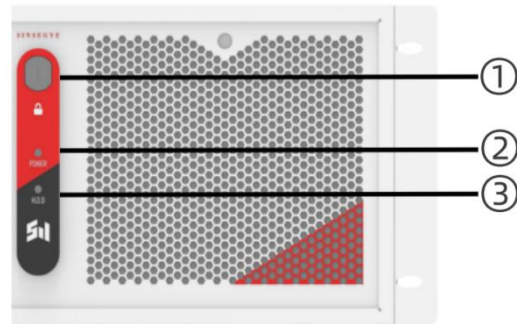


No.	Interface name	Description
①	Keyhole	The opening and closing of the front panel cover can be controlled by the key
②	POWER	Power indicator
③	HDD	HDD indicator

- SP5040-3331 rear panel

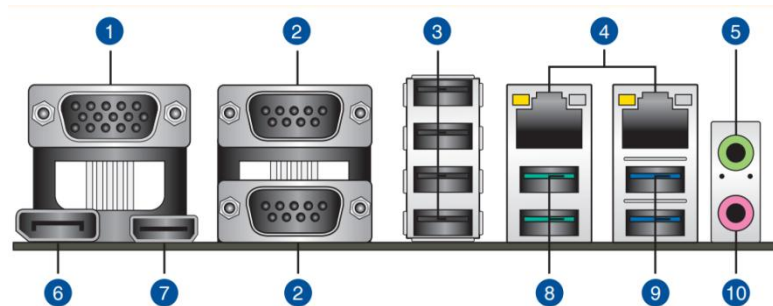

No.	Interface name	Description
①	VGA port	VGA display interface
②	COM port	RS232/422/485 serial port
③	USB port	Type-A interface, USB2.0 protocol
④	LAN port	Gigabit Ethernet port
⑤	Line Out	Audio signal output
⑥	DP port	DP display interface
⑦	HDMI port	HDMI display interface
⑧	USB port	Type-A interface, USB3.0 protocol
⑨	USB port	Type-A interface, USB3.0 protocol
⑩	Mic In	Audio signal input

- SP5040-4331 rear panel

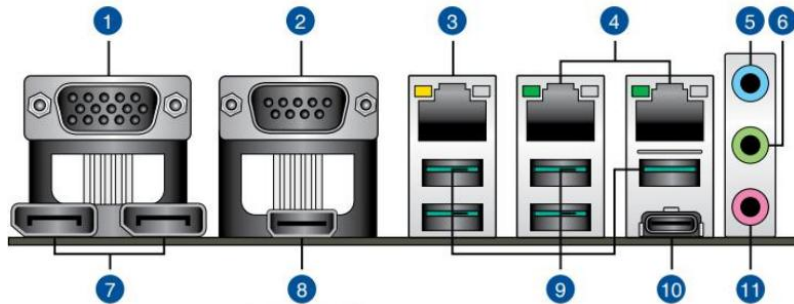

No.	Interface name	Description
①	VGA port	VGA display interface
②	COM port	RS232/422/485 serial port
③	LAN port	Gigabit Ethernet port
④	LAN port	Gigabit Ethernet port
⑤	Line In	Audio signal input
⑥	Line Out	Audio signal output
⑦	DP port	DP display interface
⑧	HDMI port	HDMI display interface
⑨	USB port	Type-A interface, USB3.0 protocol
⑩	USB port	Type-C interface, USB3.0 protocol
⑪	Mic In	Audio signal input

2. Product specifications

Product model	SP5040-3331	SP5040-4331
Operating system	Linux+Windows10	
Processor	Intel Core i7-13700	Intel Core i9-12900K
Memory	32GB, up to 64GB	32GB, up to 128GB
System hard drive	256G SATA SSD +M.2 NVME 512GB SSD	
Motion control capability	256 axes	
Axis capacity	8 axes/250us 64 axes/500us	
LAN Ethernet	2-way onboard + 4-way PCIe expansion	3-way onboard + 4-way PCIe expansion
COM serial port	2*COM(RS232/RS422/RS485)	
USB interface	4*USB 3.0+6*USB 2.0	6*USB 3.0+2*USB 2.0
DIDO interface	Not supported	
Display interface	1*HDMI+1*DP+1*VGA	1*HDMI+2*DP+1*VGA
Audio interface	1*Mic in + 1*Line out	1*Mic in + 1*Line in+ 1*Line out
Expansion slot	1*PCIex16+1*PCIex16 (x4 mode) 1*PCIex1+4*PCI	1*PCIex16+1*PCIex16 (x8 mode) 3*PCIex4+2*PCI
Indicators	Front panel: power indicator and HDD indicator	
Switch	Button switch	
Power supply	AC220V/AC10V	
Power	Standard 650W	Standard 1000W
Mounting mode	Rack-mounted	
Dimensions	430 (W)*471 (D)*176 (H) mm	
Storage temperature	-20~70°C	
Operating temperature	0~40°C	

3. Mechanical assembly

3.1. Assembly precautions

Precautions for iComputer assembly:

- Please ensure that the product is in power-off state before assembly;
- Do not let the housing, terminal strip and connector of the iComputer fall or be impacted to avoid damaging the controller;
- Do not disassemble any module. Otherwise, the machine may be damaged;
- The openings of iComputer housing is used for air convection. Do not block or cover the openings;
- The iComputer shall be equipped with air inlet and outlet, and wire materials shall not pass through the air inlet and outlet;
- When the heat dissipation temperature at the air outlet of iComputer is too high, please pay attention to safety during operation.

3.2. Preparation before assembly


3.2.1. Requirements for assembly environment

The iComputer shall be assembled on the basis of full consideration of operability, maintainability and environmental resistance. Do not assemble the module in the following locations.

- Places where the ambient temperature exceeds 0°C-40°C;
- Places where the ambient humidity exceeds 10%RH~95%RH;
- Places with severe temperature change and condensation;
- Places with corrosive gas and combustible gas;
- Places with dust and iron powder and other conductive powder, oil mist, salt and organic solvents;
- Places under direct sunlight;
- Places with strong electric field and strong magnetic field;
- Places where the machine body may generate direct vibration and be subjected to conductive impact.

3.3. Assembly dimensions

- Assembly dimensions (unit: mm)

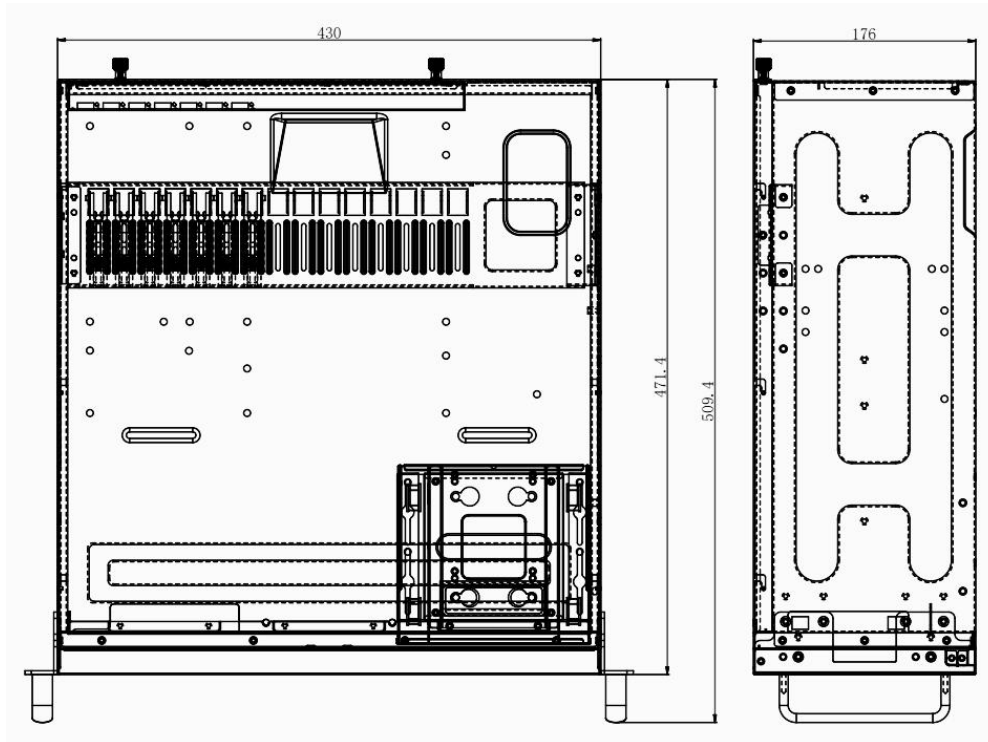

4. Electrical installation

4.1. Wiring recommendations


4.1.1. Grounding requirements

iComputer is equipped with a three-pin power plug, one of which is dedicated to grounding. In such a way, the metal housing of the iComputer can be connected to the ground. The power outlet must also be a three-hole socket and properly connected to the ground in the electrical system of the building.

- **Shielded cable grounding**

The cable for communication signals must be a shielded cable. The cable shall be grounded as close to the module as possible so that the grounded cable is not affected by the electromagnetic induction of the cable before grounding. The exposed shielded part of the shielded cable after partial sheath stripping shall be grounded with a large area with the grounding point as far as possible to ensure good contact.

For welding PVC wires to the shielded part of the shielded cable, the method of grounding through the front end will increase the high-frequency impedance and weaken the shielding effect. Care should be taken to avoid using this method. The shielded wire of communication signal cables shall be grounded at both ends.

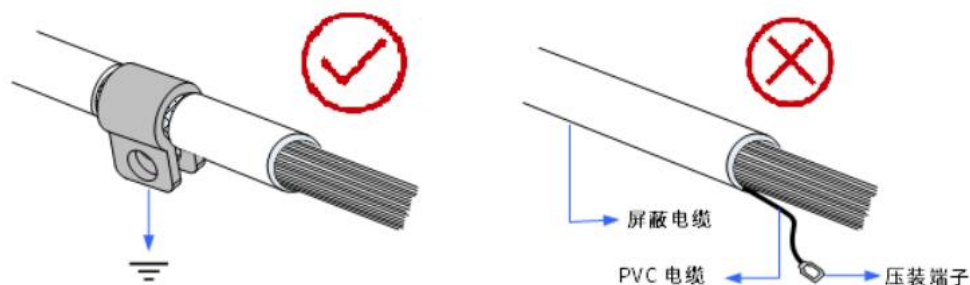


Schematic Diagram 1 of Grounding Requirements for Shielded Cables

4.1.2. Wiring requirements

Low-voltage cables (<1KV) are generally divided into four categories. Only the same category of cables can be put together to form a cable bundle. Different categories of cables shall be routed separately and shall not be crossed or overlapped generally. When crossing is unavoidable, right-angle crossing shall be adopted.

No.	Category	Application object
1	Category I	Ethernet port and EtherCAT port
2	Category II	Low-speed digital communication signals (RS232, RS485, etc.) and digital I/O signals
3	Category III	Low-voltage AC distribution wire or DC power cable (e.g. DC 24V power cable for SMPS output)
4	Category IV	Input and output cables, welding machine cables, and power converter power cables

Certain spacing is required between different categories of cables. For cables with a length of less than 30m, the minimum allowable spacing is as shown in the diagram below

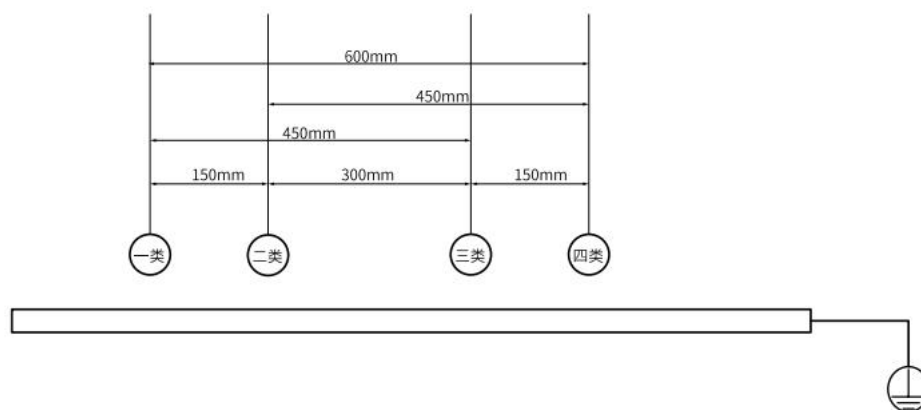

Schematic Diagram of Wiring Requirements for Various Cables 1

Description

- When the length of parallel cable runs is increased, the spacing shall be increased appropriately.
- In addition to keeping the spacing, a plurality of spliced shielding plates can be additionally arranged between different categories of cables to realize shielding. To reduce cross interference, all cables shall be routed as close as possible to structural parts (grounded) that are connected to the ground wire of the cabinet, such as the panel or rack parts of the cabinet.

4.2. Communication interface wiring

 
4.2.1. Serial communication specifications

COM1 and COM2 support RS232, RS485 and RS422 protocols, and their modes can be configured via Bios.

- **Description**

- 1) The serial ports are all on the real-time side by default, and virtualization is not supported for them temporarily.

- **Communication Interface Diagram**



- **COM1/COM2 communication interface definition**

COM1、COM2 PIN Assignments			
Pin	RS-232	RS-422	RS-485
	Signal Name	Signal Name	Signal Name
1	DCD	Tx-	DATA-
2	RxD	Tx+	DATA+
3	TxD	Rx+	NC
4	DTR	Rx-	NC
5	GND	GND	GND
6	DSR	NC	NC
7	RST	NC	NC
8	CTS	NC	NC
9	RI	NC	NC

● **RS485 communication specification**

Item	Specification
Baud rate	4.8K, 9.6K, 19.2K, 38.4K, 57.6K, 115.2K
Maximum number of slave stations	31
Support protocol	Modbus RTU protocol and free protocol
Isolation mode	Isolated

● **RS485 bus wiring instructions**

Wiring precautions:

When extending the cable wiring, avoid binding with the power line (high voltage, large current) and other cables transmitting strong interference signals. The cables shall be routed separately and parallel wiring shall be avoided. Recommended cable and adapter plate shall be selected for connection, and shielded cable shall be recommended for extension cable to improve anti-interference capability.

The RS485 bus is recommended to use shielded twisted-pair cables for connection, with 485+ and 485- wired as twisted pairs. Only the two ends of the bus are respectively connected with a 120Ω terminal matching resistor to prevent signal reflection; The reference grounds of all node 485 signals are connected together; Up to 32 nodes can be connected, and the distance of each node branch shall be less than 3m.

● **RS232 communication specification**


Item	Specification
Baud rate	4.8K, 9.6K, 19.2K, 38.4K, 57.6K, 115.2K
Maximum number of slave stations	1
Support protocol	Modbus RTU protocol and free protocol
Isolation mode	Isolated

4.2.2.Modification of serial communication mode


COM1 and COM2 can be adjusted to RS-232 mode, RS-422 mode or RS-485 mode in BIOS.

● Operating procedure


- 1) Connect the USB keyboard and press the Delete key to enter the BIOS. Move the cursor key to select “Advanced” and enter “Super IO Configuration”.

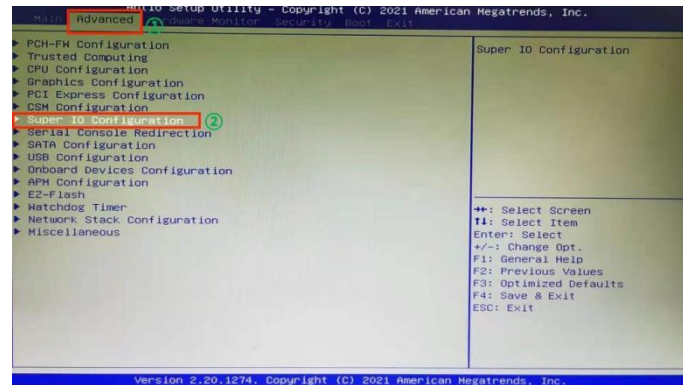


- 2) Enter “NCT6116D Super IO Configuration” option.

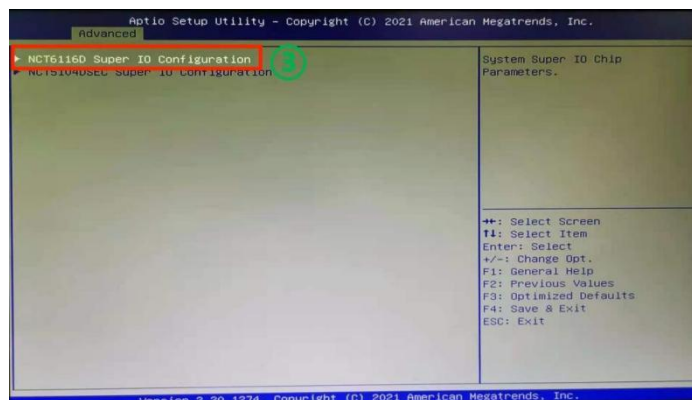


- 3) Enter “Serial Port 1 Configuration”. (Note: Serial Port 1 Configuration is the COM1 interface on the mainboard, and Serial Port 2 Configuration is the COM2 interface on the mainboard).

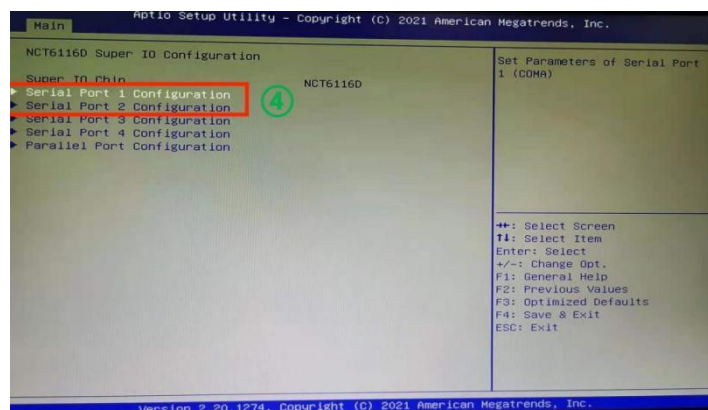

- 4) Find (COM1 Control) and select the required serial port mode (RS232, RS422, or RS485).

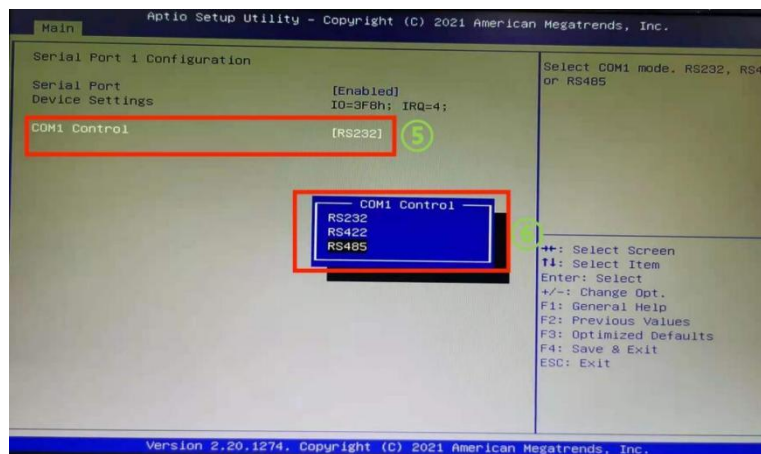

- 5) After selecting the appropriate serial port mode, press F4 to select YES and press Enter to save.

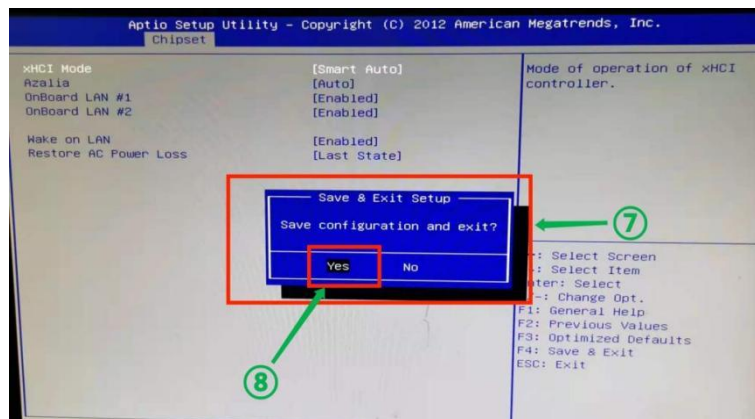



4.2.3. Communication specification of network port

The network ports in this series can be configured via software for Linux/Windows allocation and ring network setup.

Network port	Function	
	SP5040-3331	SP5040-4331
LAN1	Debug the network port, default IP: 192.168.1.200	Debug the network port, default IP: 192.168.1.200
LAN2	Ethernet port of Ethercat master station	Network ports in Windows
LAN3	Network ports in Windows	Ethernet port of Ethercat master station
LAN4	Network ports in Windows	Network ports in Windows
LAN5	Network ports in Windows	Network ports in Windows

LAN6	Network ports in Windows	Network ports in Windows
LAN7	-	Network ports in Windows

 ● Definition of network port indicators

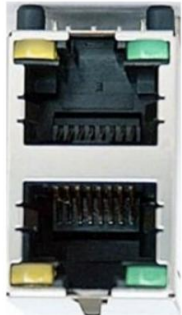Indicator	Function	Color	Status	Description
	A:Link/Act	Yellow		Always Off: Not Connected
				Flashing: Connected and Data Transmitting/Receiving
				Always On: Connected
	B:Speed	Green		Always Off: Not Connected
				Flashing: 100/1000Mbps Connection
				Always On: 1000Mbps Connection

4.2.4. EtherCAT communication specifications

● EtherCAT specifications


Network port	Function
Number of channels	1
Communication protocol	EtherCAT protocol
Support services	COE (PDO、SDO)
Synchronization mode	Servo: DC-Distributed clock IO: input/output synchronization
Physical layer	100BASE-TX
Baud rate	100Mbit/s
Duplex mode	Full duplex
Topology	Linear topology
Transmission medium	RJ45 network cable
Transmission distance	Distance between adjacent nodes under 100 meters
EtherCAT frame length	44 bytes to 1486 bytes

Process data	Maximum 1486 bytes for a single Ethernet frame
Jitter between two slave stations	<1μs
Automatic scanning function	Support

4.2.5. Communication cable connection requirements

Communication has strict requirements for cables, and Cat5e or higher shielded network cables must be used. The specific requirements are as follows:

● Cable requirements

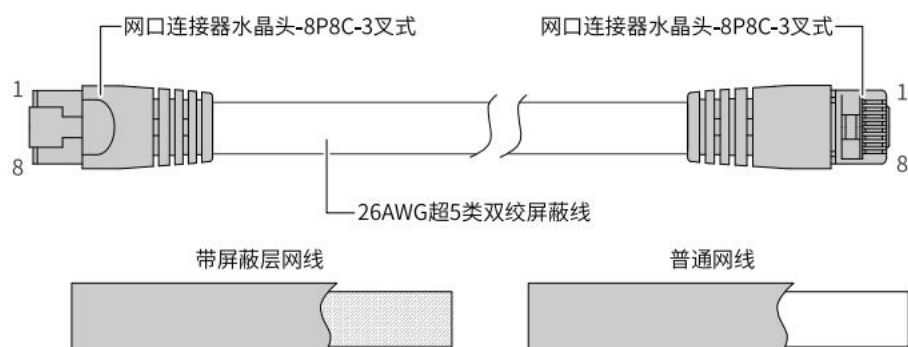

Pin	Signal (Ethernet 1000Mbps)	Signal direction	Signal description
1	TD+	Output	Data transmission +
2	TD-	Output	Data transmission -
3	RD+	Input	Data reception +
4	-(DC+) *	- (two-way)	Not used (data C+)
5	-(DC-)	- (two-way)	Not used (data C-)
6	RD-	Input	Data reception -
7	-(DD+)	- (two-way)	Not used (data D+)
8	-(DD-)	- (two-way)	Not used (data D-)

● Description

* When Ethernet baud rate is 1000Mbps and 100Mbps, the definitions of pins 4, 5, 7, and 8 are different.

● Length requirements

FastEthernet technology confirms that when the EtherCAT bus is used, the length of the cable between devices cannot exceed 100 m. If it exceeds 100 m, it will attenuate the signal and affect normal communication.

- **Technical requirements**

It shall pass the 100% continuity test, with no short circuit, open circuit, dislocation or poor contact. The Ethernet CAT bus adopts shielded cable for network data transmission. The following specifications of network cable are recommended:

Item	Specification
Cable type	Elastic crossover cable, S-FTP, Cat5e
Criteria	EIA/TIA568A, EN50173, ISO/IEC11801 EIA/TIA Abulletin TSB, EIA/TIA SB40-A&TSB36
Conductor cross-section	26AWG
Conductor type	Twisted pair
Wire pair	4

- **The relationship between the number of EtherCAT bus nodes, cable impedance and transmission distance is shown in the table below:**

Maximum number of nodes	Cable impedance	16	32	64
Transmission distance	88 Ω /km	215m	200m	170m
	93 Ω /km	205m	185m	160m
	157 Ω /km	120m	110m	95m


4.3. Display interface specifications

4.3.1. DP interface specification

- The iComputer adopts standard DP display interface, and the main specifications are as follows:

Item	Specification
Signal type	Digital DP1.2
Maximum resolution	1920x1080@60Hz
Whether hot plug is supported	Support

- DP terminal pins are defined as follows:

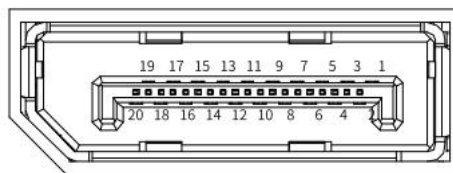


S/N	Description	Function
1	ML_Lane 0 (p)	Main link channel 0: differential signal
2	GND	-
3	ML_Lane 0 (n)	Main link channel 0: differential signal
4	ML_Lane 1 (p)	Main link channel 1: differential signal
5	GND	-
6	ML_Lane 1 (n)	Main link channel 1: differential signal
7	ML_Lane 2 (p)	Main link channel 2: differential signal
8	GND	-
9	ML_Lane 2 (n)	Main link channel 2: differential signal
10	ML_Lane 3 (p)	Main link channel 3: differential signal
11	GND	-
12	ML_Lane 3 (n)	Main link channel 3: differential signal
13	GND	-
14	GND	-
15	AUX_CH (p)	Auxiliary channel: differential signal
16	GND	-
17	AUX_CH (n)	Auxiliary channel: differential signal
18	Hot Plug	Hot plug detection
19	DP_PWR Return	Interface power feedback signal
20	DP_PWR	Power supply: +3.3V

4.3.2.HDMI interface specifications

- The iComputer adopts standard HDMI display interface, and the main specifications are as follows:

Item	Specification
Signal type	Digital HDMI
Maximum resolution	1080P
Whether hot plug is supported	Support

- The HDMI terminal pins are defined as follows:

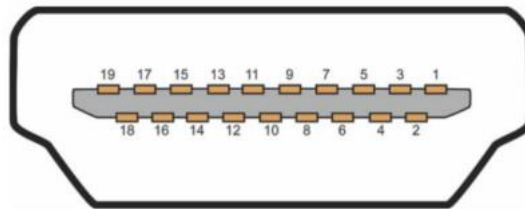


S/N	Signal
1	IDS Data 2+
2	TMDS Data 2 shield
3	TMDS Data 2-
4	TMDS Data 1+
5	TMDS Data 1 Shield
6	TMDS Data 1-
7	TMDS Data 0+
8	TMDS Data 0 Shield
9	TMDS Data 0-
10	TMDS Clock+
11	TMDS Clock Shield
12	TMDS Clock-
13	Ground
14	HEC Data
15	SCL (DDC Serial Clock)
16	SDA (DDC Serial Data Line)
17	DDC/CEC/HEC Ground
18	+5V Power (Max 50mA)
19	Hot Plug Detect (1.3)/HEC Data+ (1.4)

4.4. USB interface

- The iComputer adopts standard USB interface, and the main specifications are as follows:

Item	USB3.0	USB2.0
Maximum communication rate	5.0Gbps	480Mbps
Maximum output current at 5V	1000mA	500mA
Maximum communication distance	3m	5m
Isolated or not	No	No

- The interface forms are shown in the diagram below:

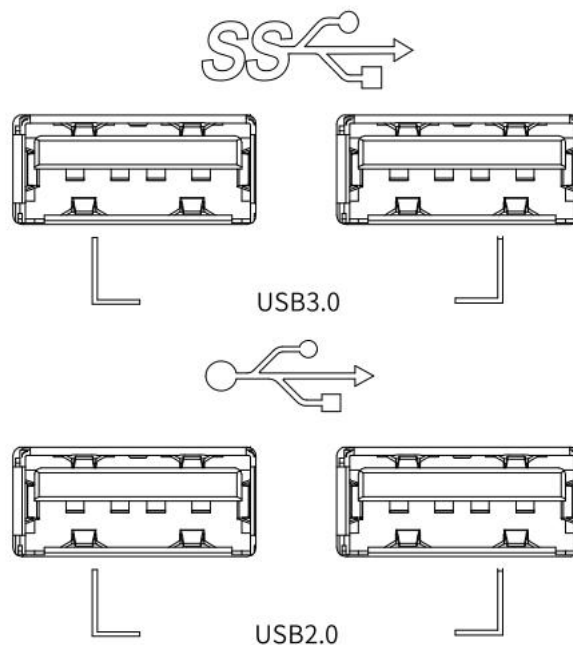


- **Description**

- 1) For industrial applications, industrial-grade USB devices shall be selected to ensure the reliability of use.
- 2) USB devices should avoid long - cable connections, and proper wiring practices must be followed to prevent communication performance degradation due to interference.
- 3) When the interference cannot be eliminated, magnetic rings can be added at both ends of the communication cable for filtering, so as to improve the anti-interference performance.


4.5. PCI and PCIE interfaces

4.5.1.SP5040-3331 interface specification

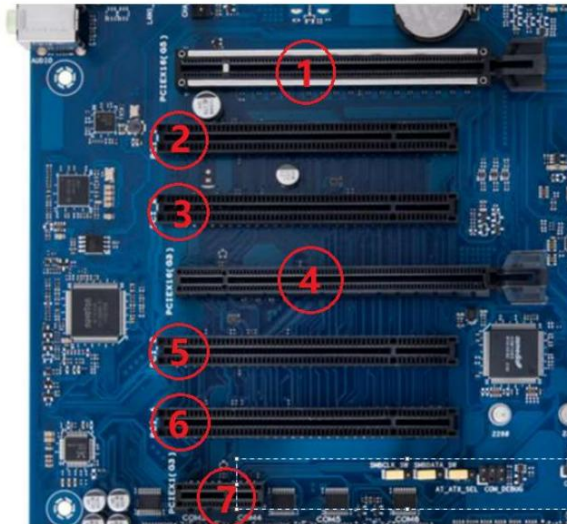

S/N	Slot	Specification
1	PCIe5.0x16	One-way 512GB/s (two-way 1024GB/s)
2	PCI	-
3	PCI	-
4	PCIe3.0/2.0x16	The actual use of x4 lane communication, PCIe3.0 unidirectional about 4GB/s (bidirectional 8GB/s), and default configuration of quad-port network card
5	PCI	-
6	PCI	-
7	PCIe3.0/2.0x1	PCIe3.0, one-way ~1GB/s and two-way ~2GB/s

4.5.2.SP5040-4331 interface specification

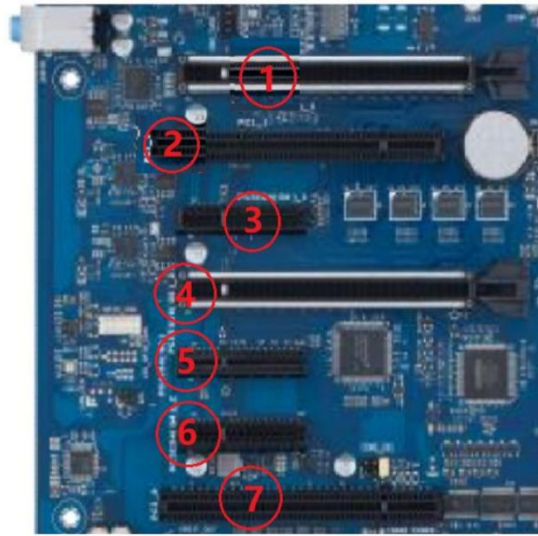


S/N	Slot	Specification
1	PCIe5.0x16	One-way 512GB/s (two-way 1024GB/s)
2	PCI	-
3	PCIe4.0x4	-
4	PCIe5.0x16	Actual use of x8 lane communication
5	PCIe3.0x4	Default configuration of quad-port network card
6	PCIe4.0x4	-
7	PCI	-

5. Operating instructions

5.1. Operating system

● MetaOS

In MetaOS dual operating system, a real-time kernel is embedded in Linux kernel, forming a stable and isolated dual-kernel architecture, that's, constructing a real-time domain based on real-time kernel, and constructing a non-real-time domain based on Linux kernel. The real-time domain is dedicated to processing the event response time tasks that need to be determined, realizes hard real-time and provides strict real-time guarantee for the tasks; meanwhile, the non-real-time domain provides rich operating system services for other tasks. The two domains operate independently and do not interfere with each other. SP5000 series iComputer integrates the traditional upper industrial computer and lower PLC into one. It can run a real-time control task and a data acquisition task in the real-time domain of the iComputer, and deploy and apply the upper program in the non-real-time domain.

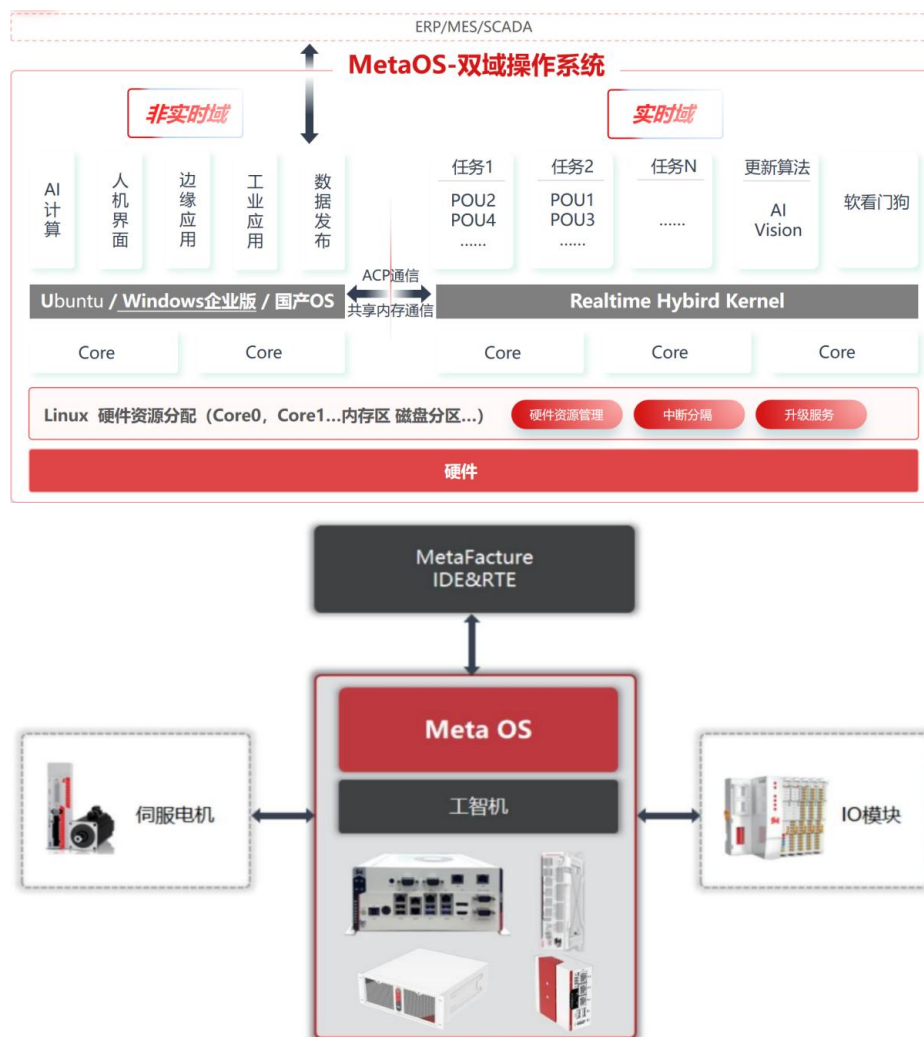


5.2. Power on

Before turning on the iComputer, make sure the iComputer is fully configured. From power - on, the iComputer enters the operating mode after 50 to 60 seconds.

- **Follow these steps to power on the first time:**

- 1) After assembling the iComputer and connecting the display device, power on the system.
- 2) Log in automatically for the first time and enter the operating system desktop, as shown in

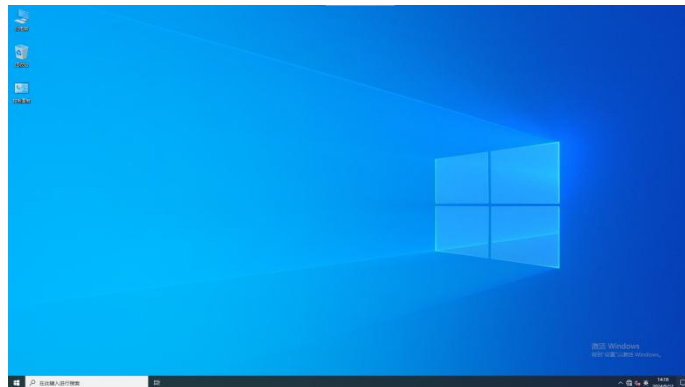

the following diagram

- **Description**

- 6) The default factory enterprise version in windows system is not activated.

5.3. Power off


- **Please turn off the iComputer as follows**

- 1) Stop all running programs correctly.
- 2) Shut down the operating system.
- 3) Turn off the external power supply to turn off the iComputer.


5.4. Programming and debugging

5.4.1. Add Device


- 1) Download the corresponding Sinsegge device description file locally.
- 2) In MetaFacture, click the menu bar Tools > Device Repository...

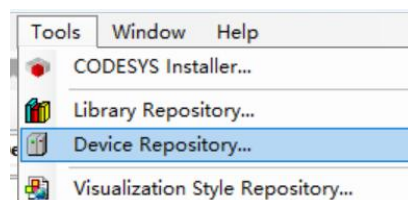


- 3) Click [Install (1)...]

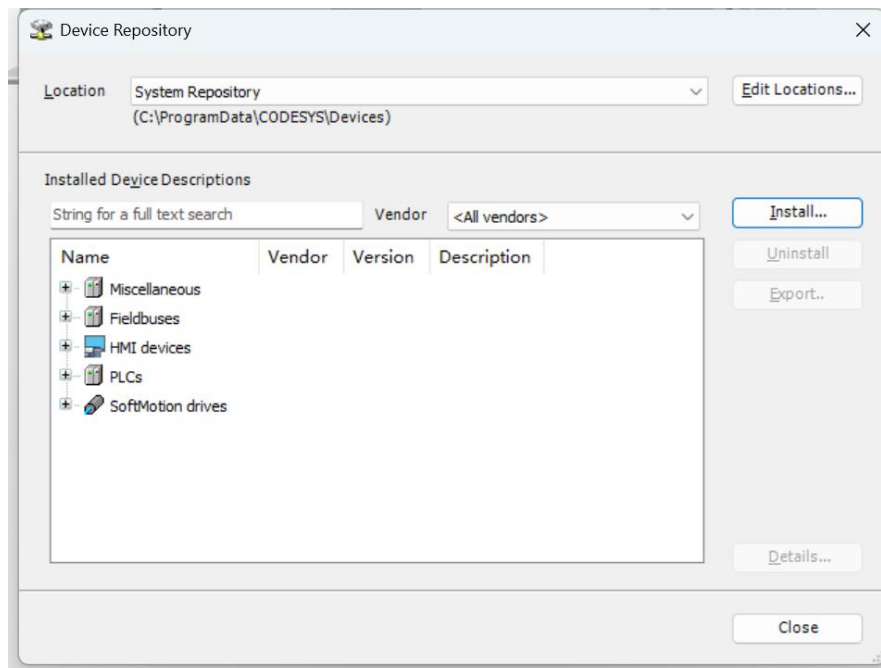

- 4) Find the directory where the device description file is stored, select [Automatic Detection] for the file detection type at the lower right corner, select SP5040 iComputer device description file "Sinsegye-x86_64-Linux-SM-CNC.devdesc.xml" and SRC8200 device description file "EcatTerminal-SRC_V1.09_ENUM_2.xml", and click [Open] to complete the installation.

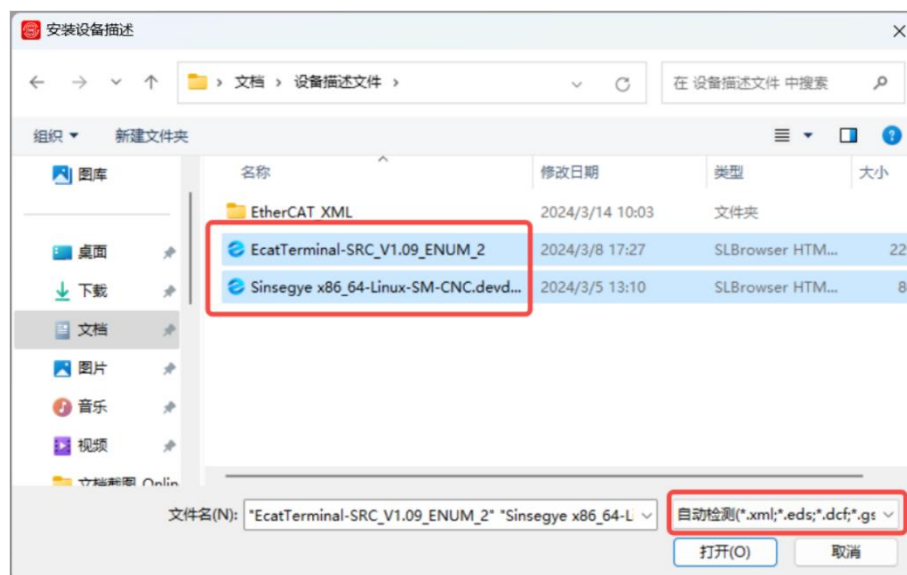


- 5) Click [Close] to close the dialog box.

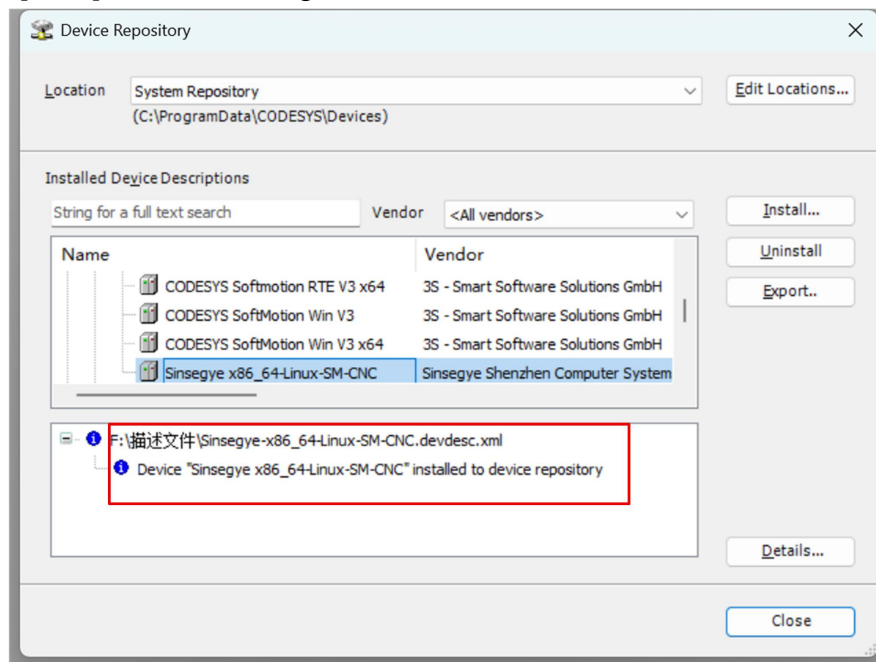


5.4.2. Connect Device

- 1) Open the [New Project] panel, select [Project] for the category and [Standard Project] for the template, and enter the custom project name and the location where the project is saved, click [OK].

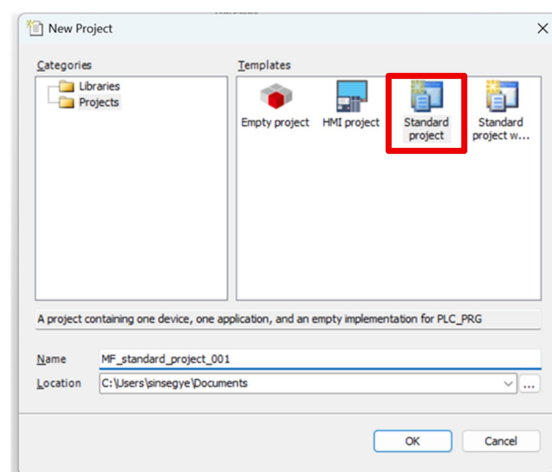


- 2) Select a PLC in the [Device (D)] list (if the corresponding PLC is not found, please confirm that the device has been installed correctly, and please refer to “Add Device” for specific steps). Select a common programming language in the [PLC_PRG in (P)] drop-down list, and click [OK].

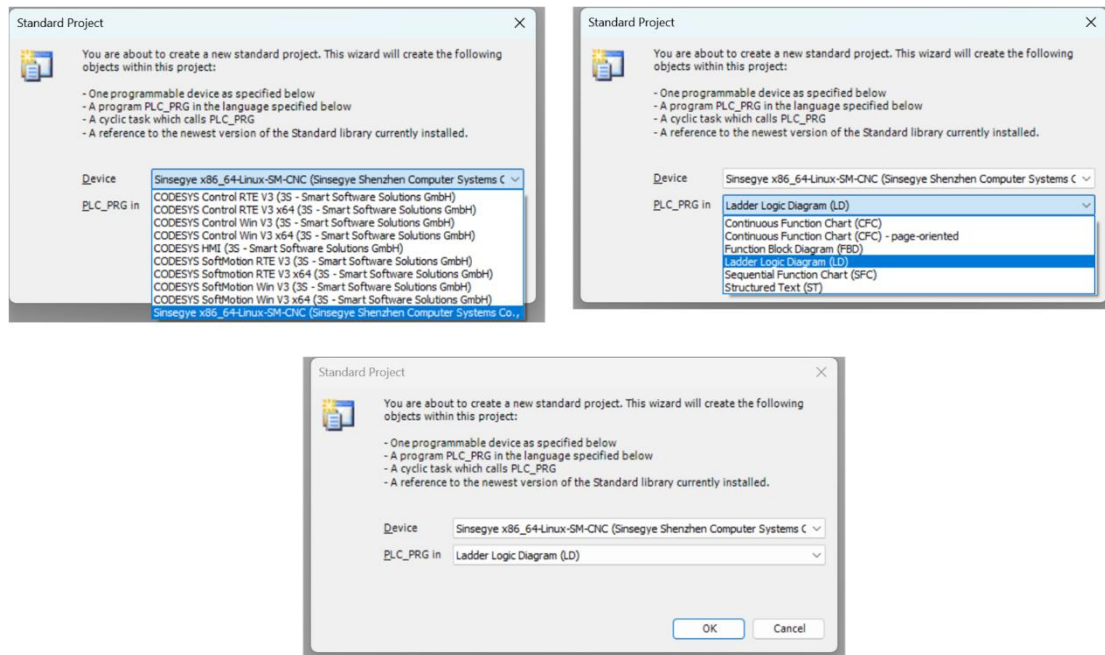

- 3) In MetaFactory, double-click [Device] in the device window to open the Device page. Make sure the iComputer has been connected to the network and it is in the same network segment as the computer where MetaFactory has been installed.

Method 1: Input the IP address of the PLC and press “Enter”


Method 2: Click [Scan Network] and select the corresponding device in the pop-up scanning results.

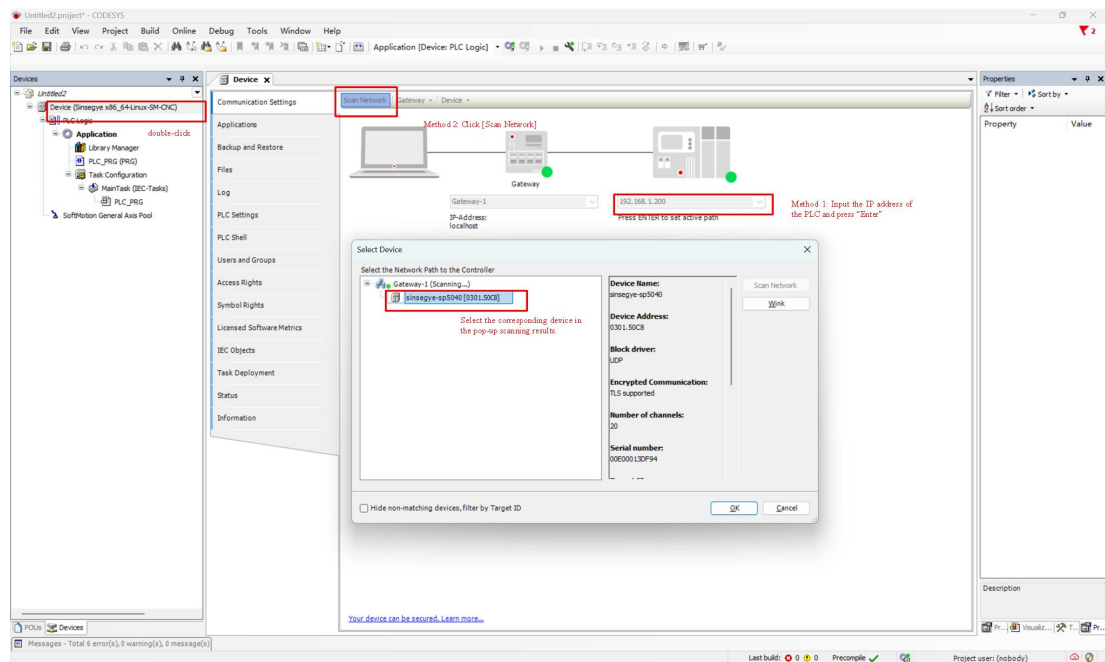

● Description

Default IP of iComputer debugging port: 192.168.1.200

- 4) (Optional) After the PLC is successfully connected, the device can be renamed in order to scan the device in the future. Click [Device] > [Rename Active Device], enter the user-defined device name, and click [OK].

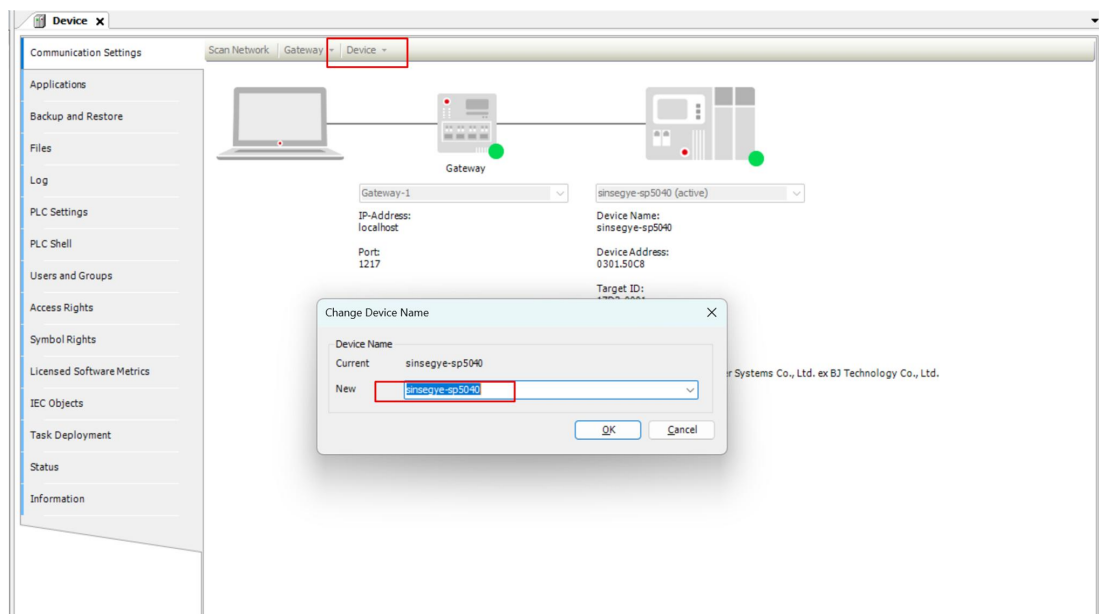

5.4.3. Programming

For the programming and debugging process, please refer to Basic Operation of MetaFacture for details.