







Hardware installation demonstration


NOTE: Please make sure "A"hardware tightened and can't be pulled out!

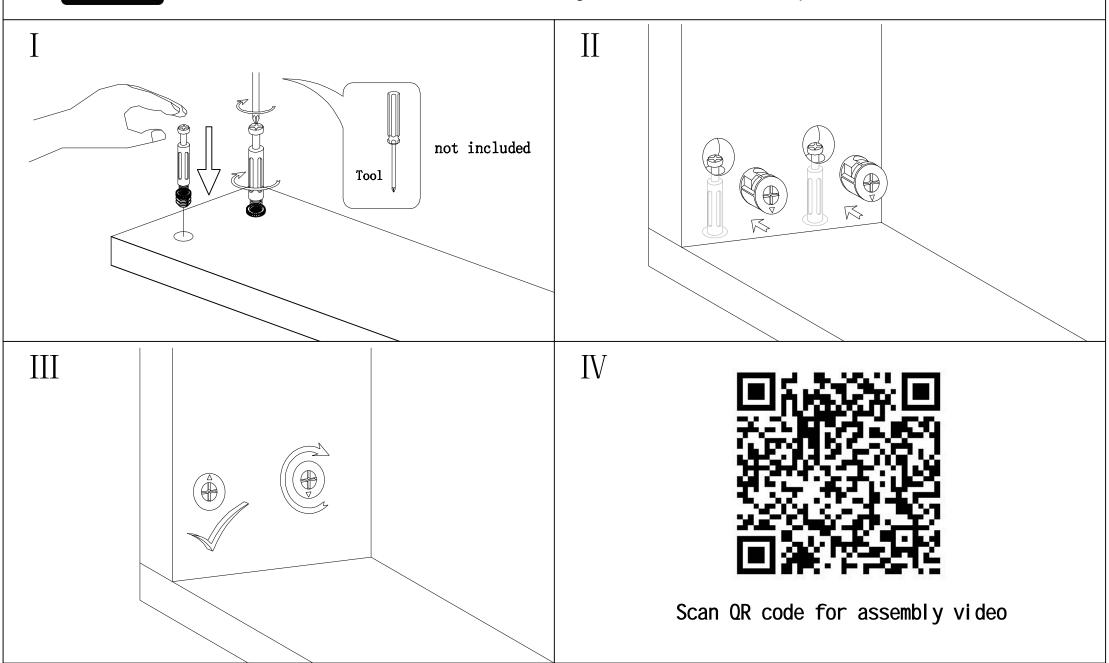


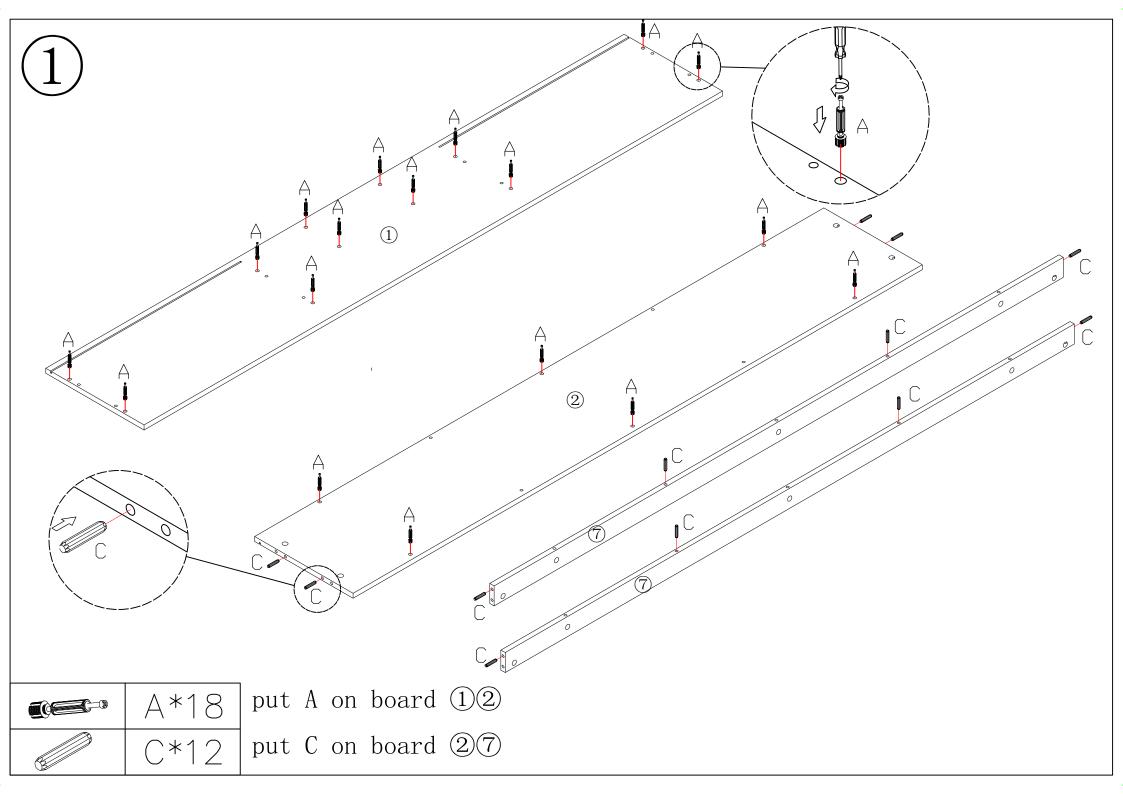

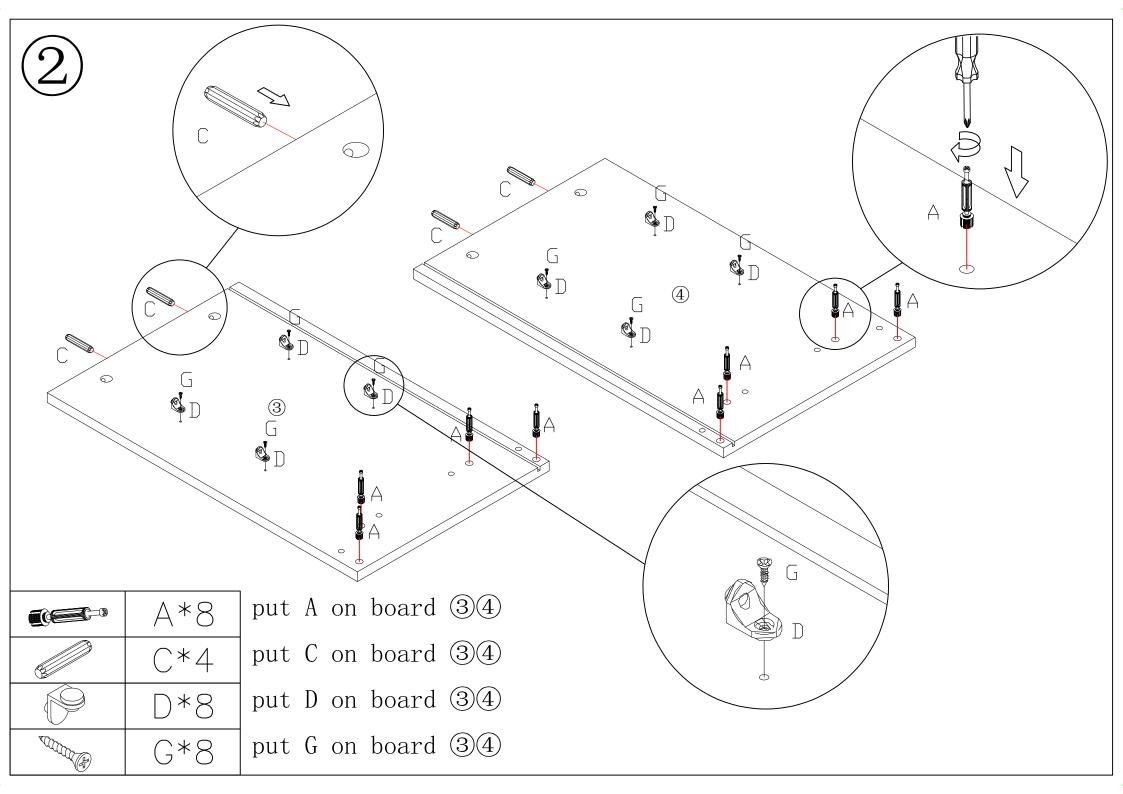


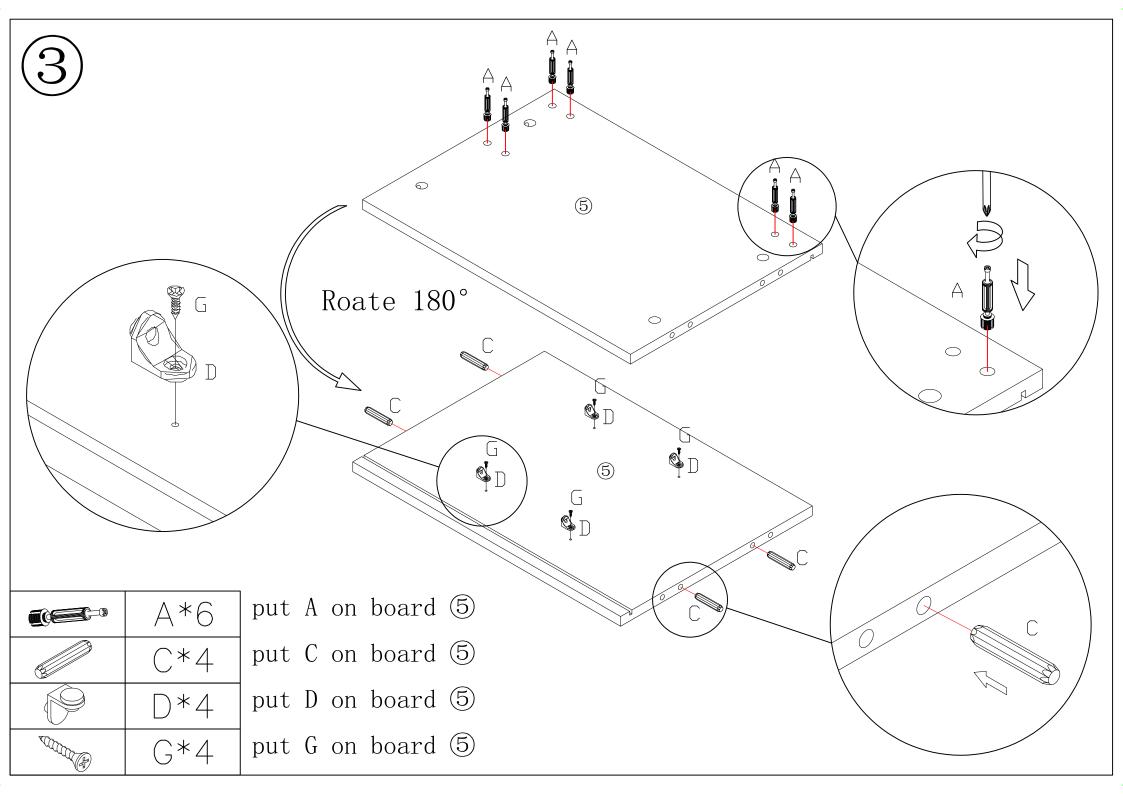

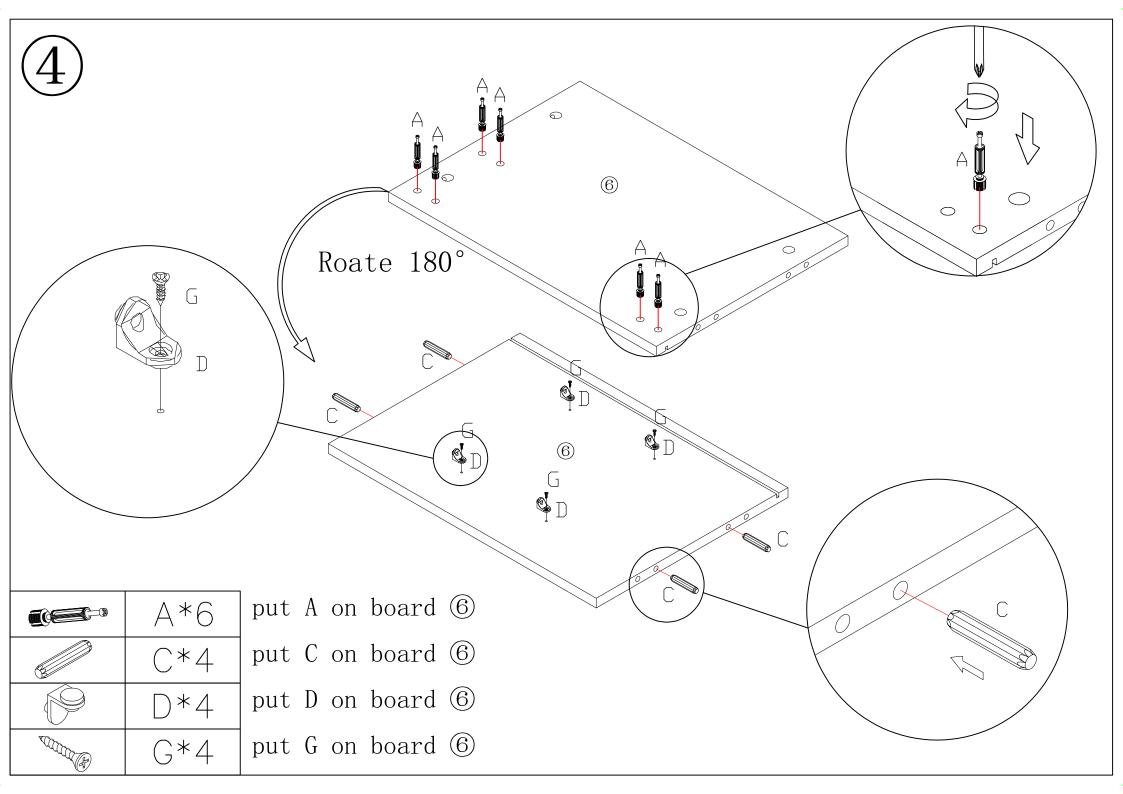

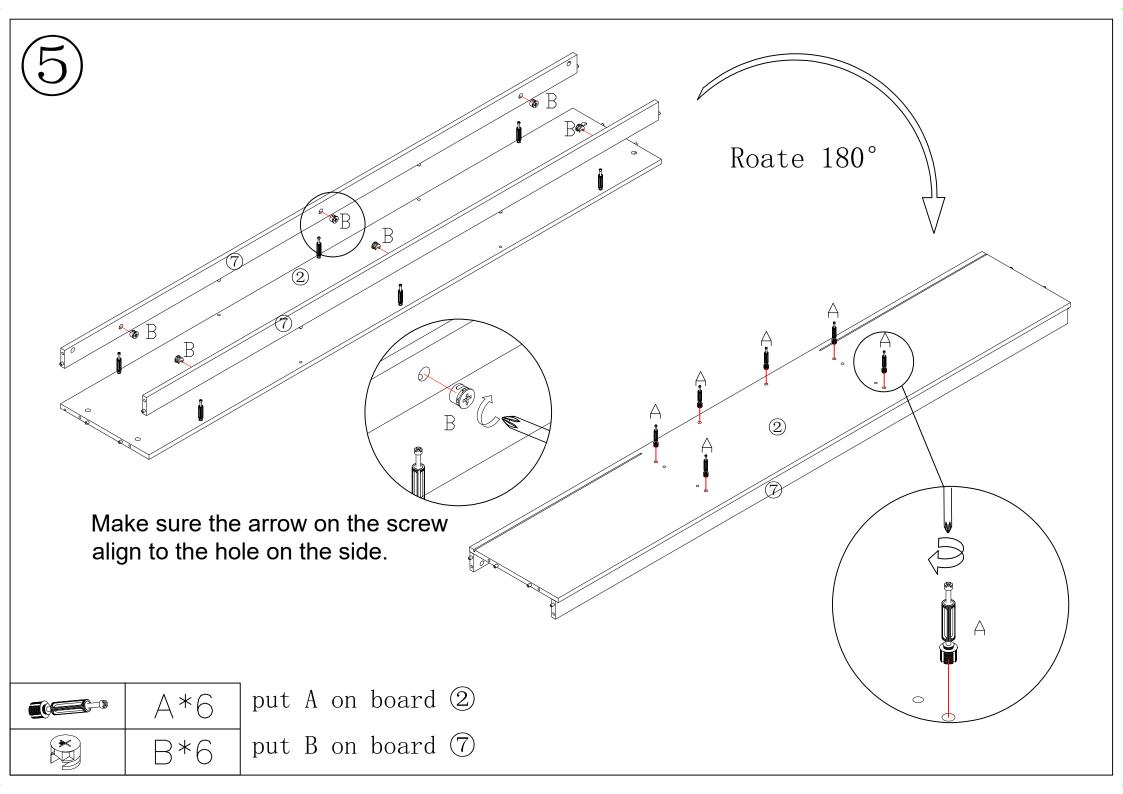




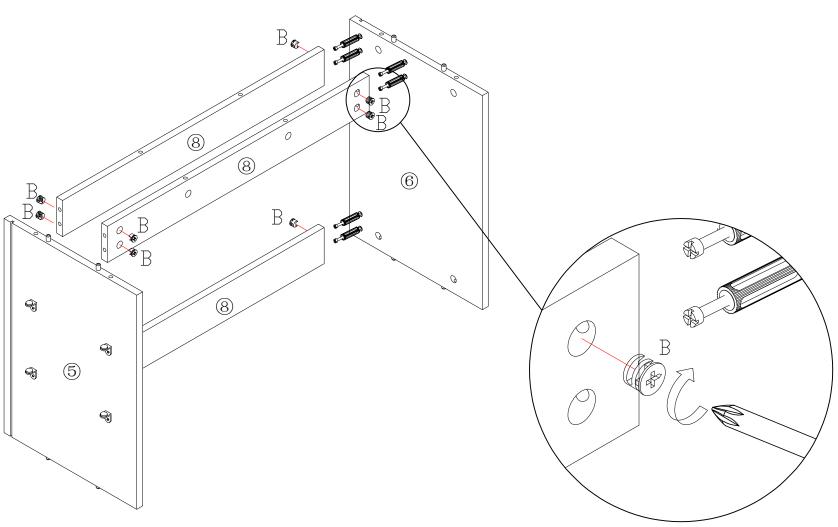



Make sure the arrow on the screw align to the hole on the side.





put B on board (8)

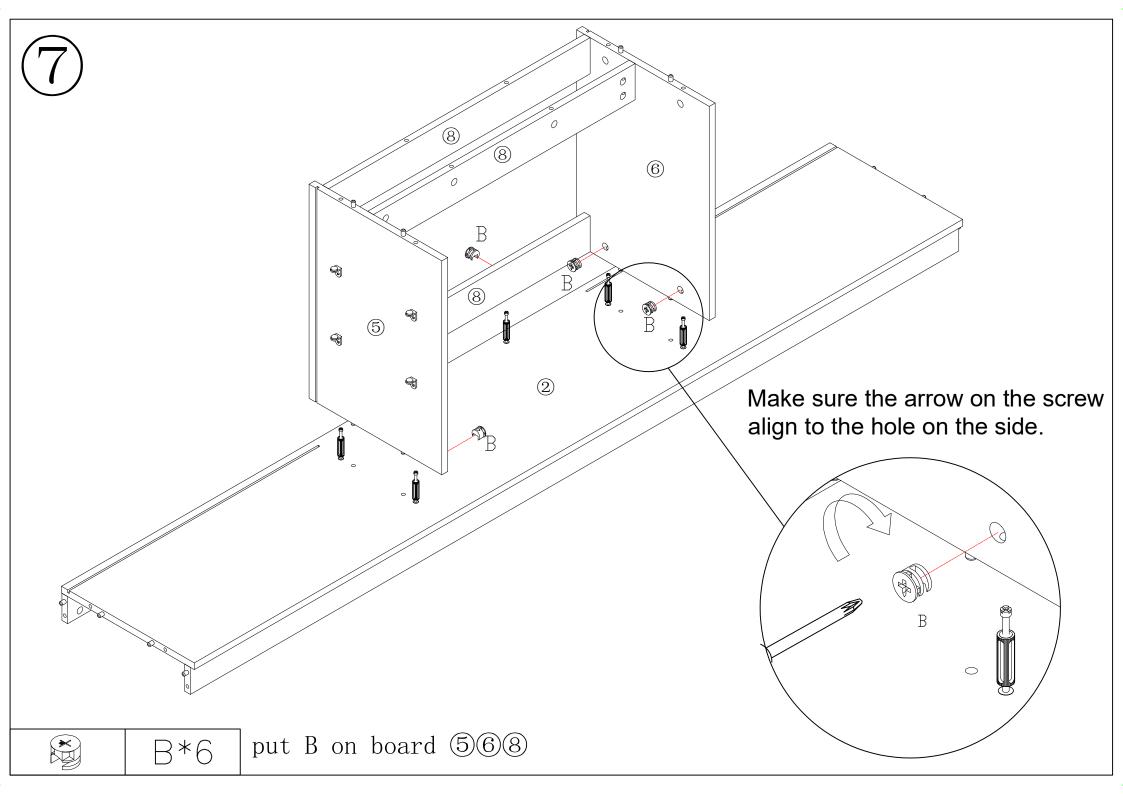

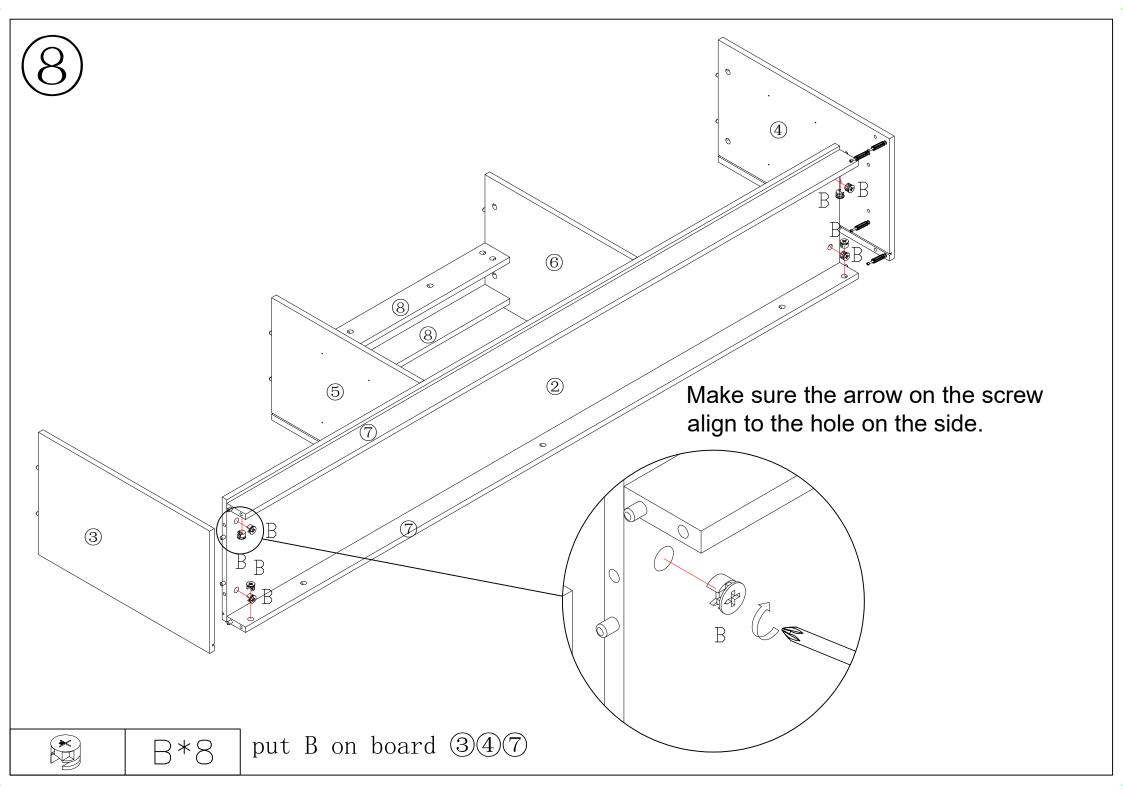

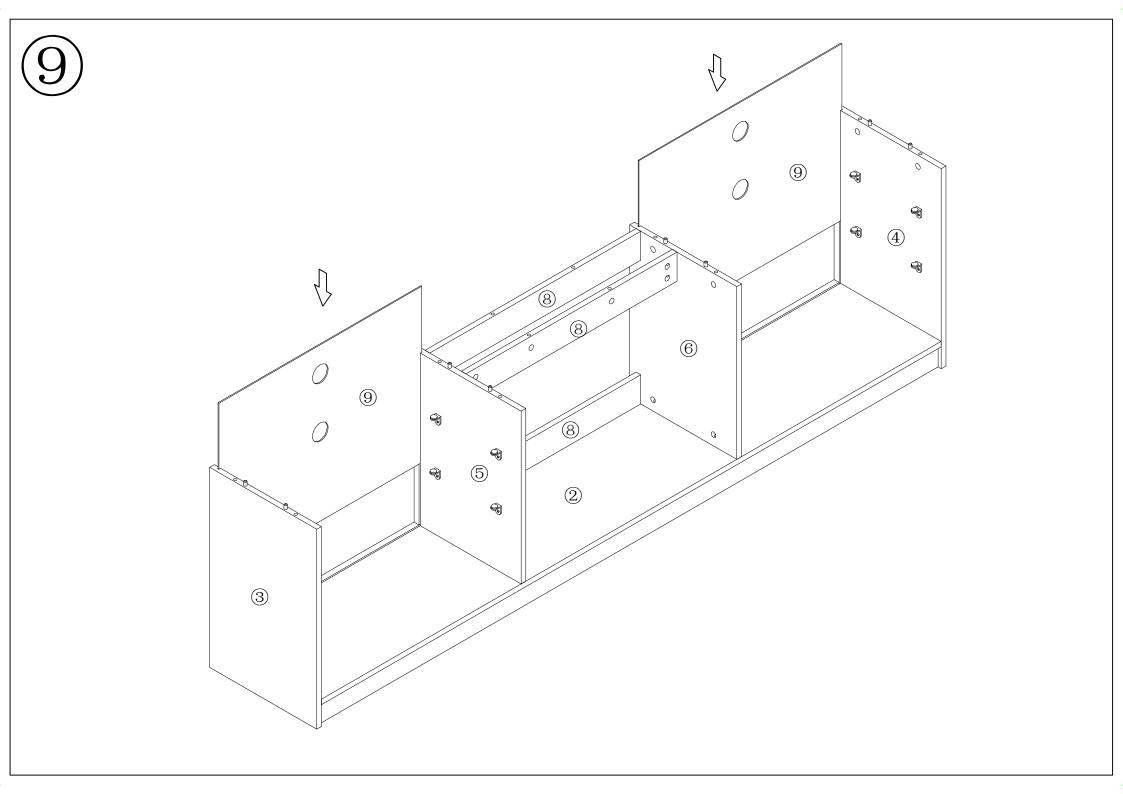

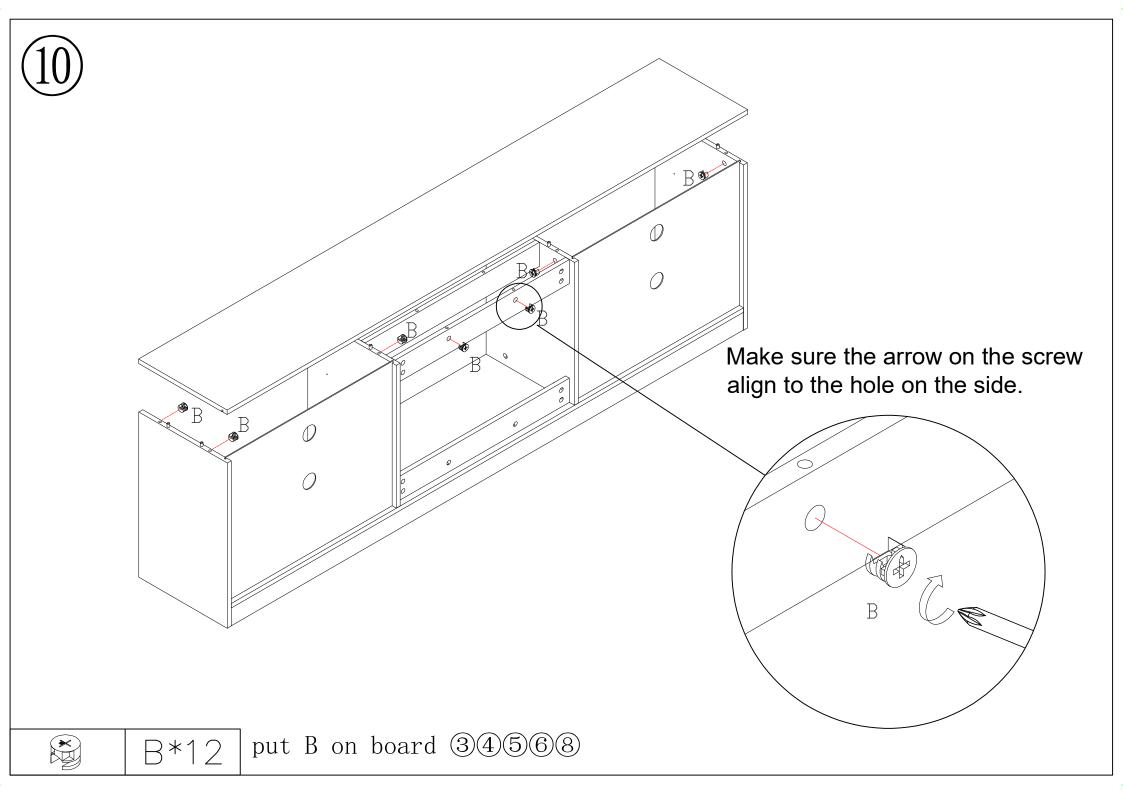


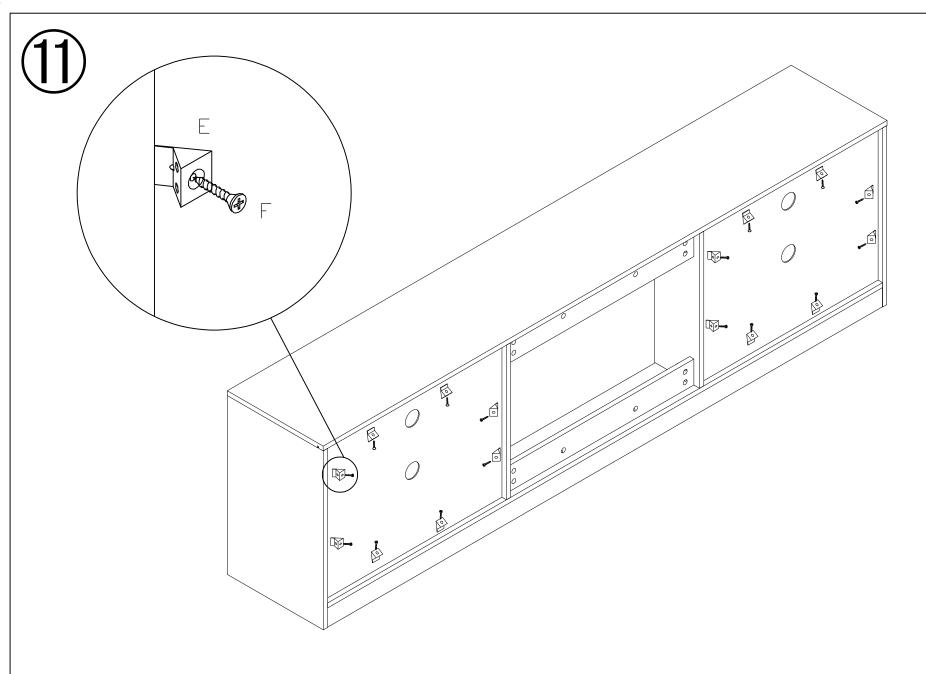


E*16
F*16


put E on board 9


put F on board 9

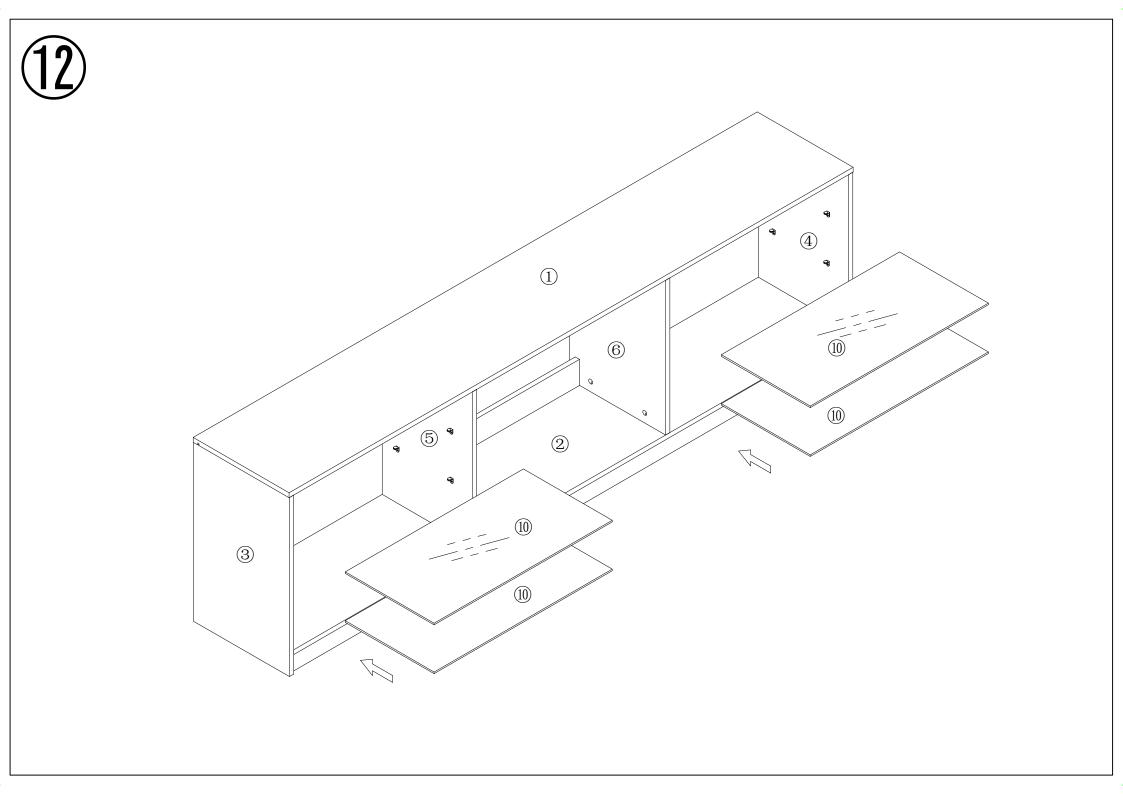




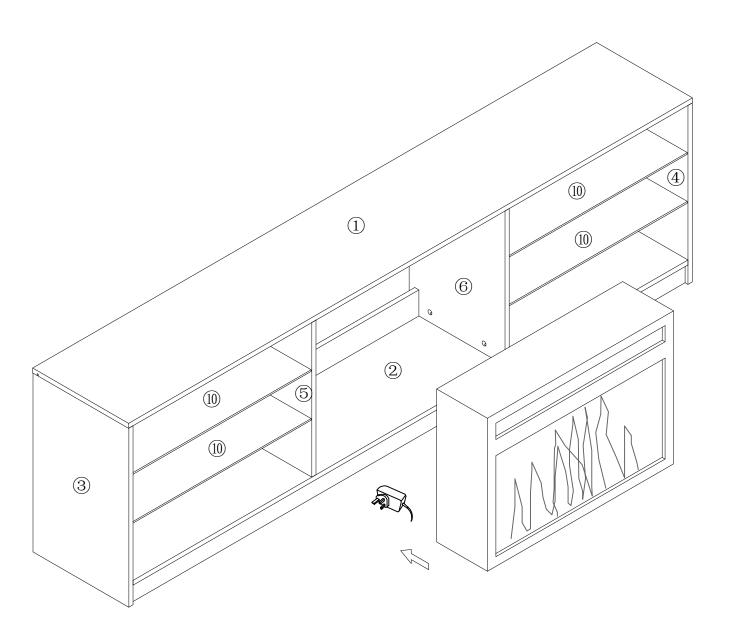

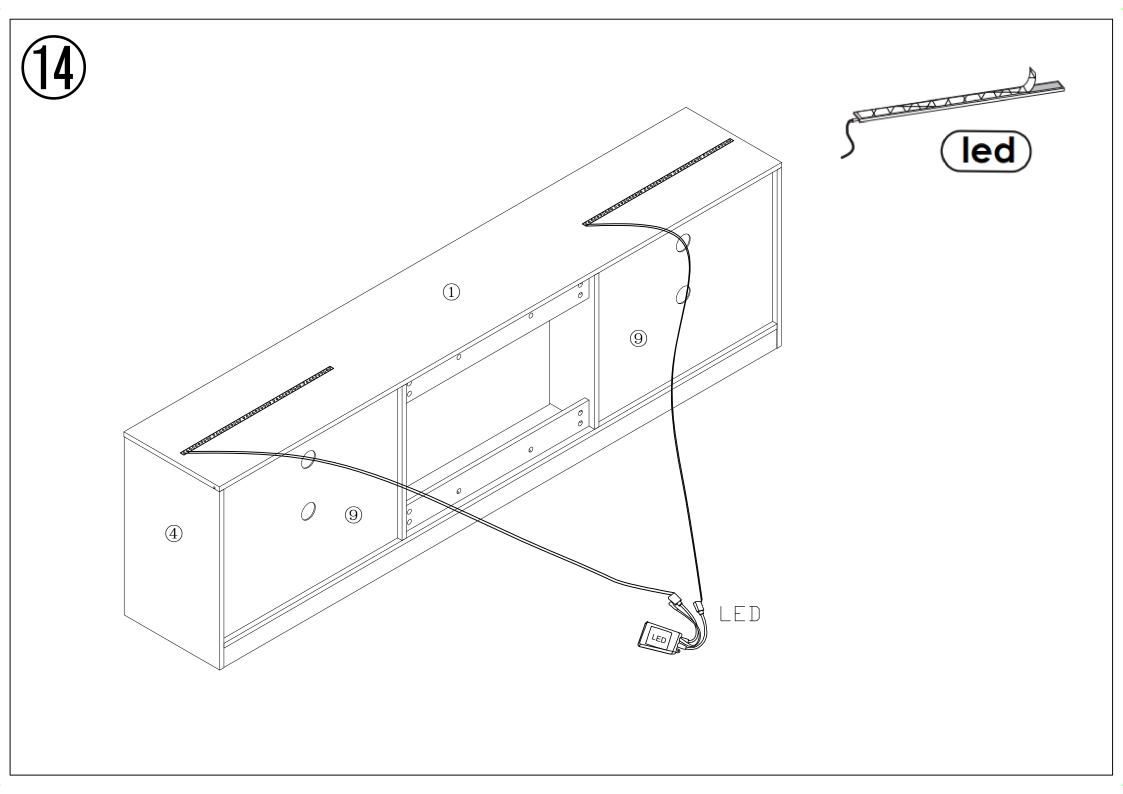

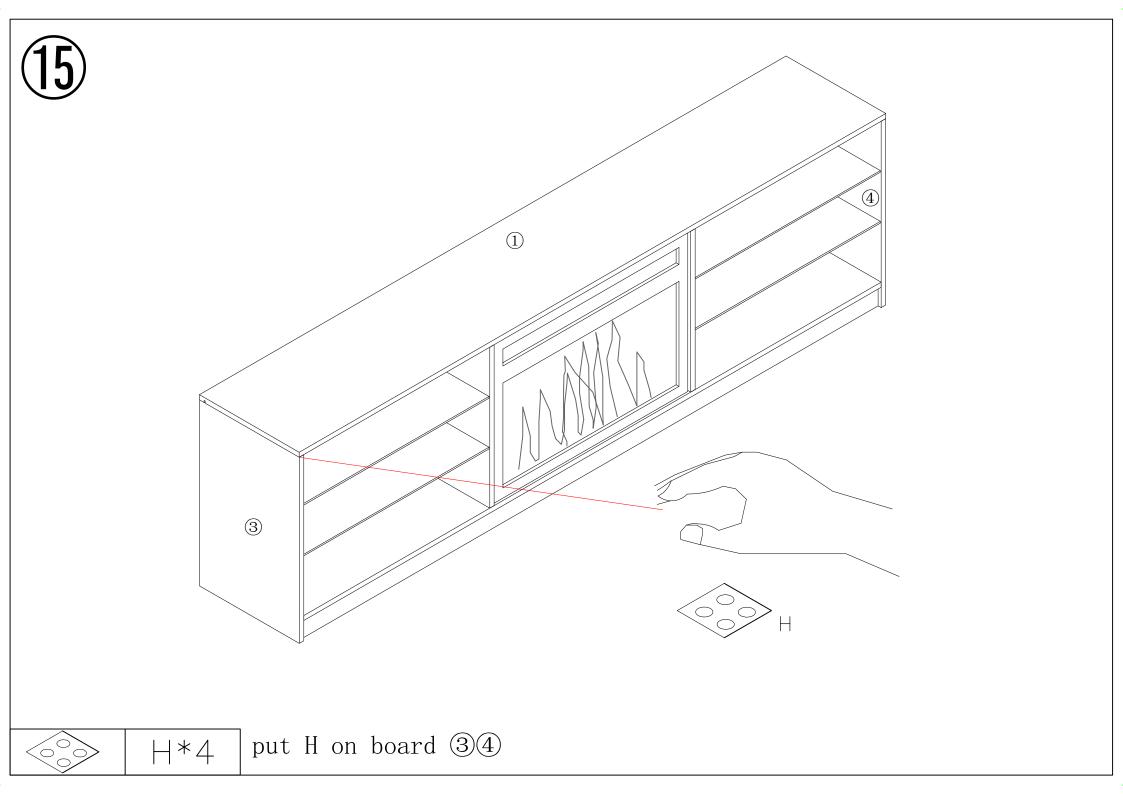

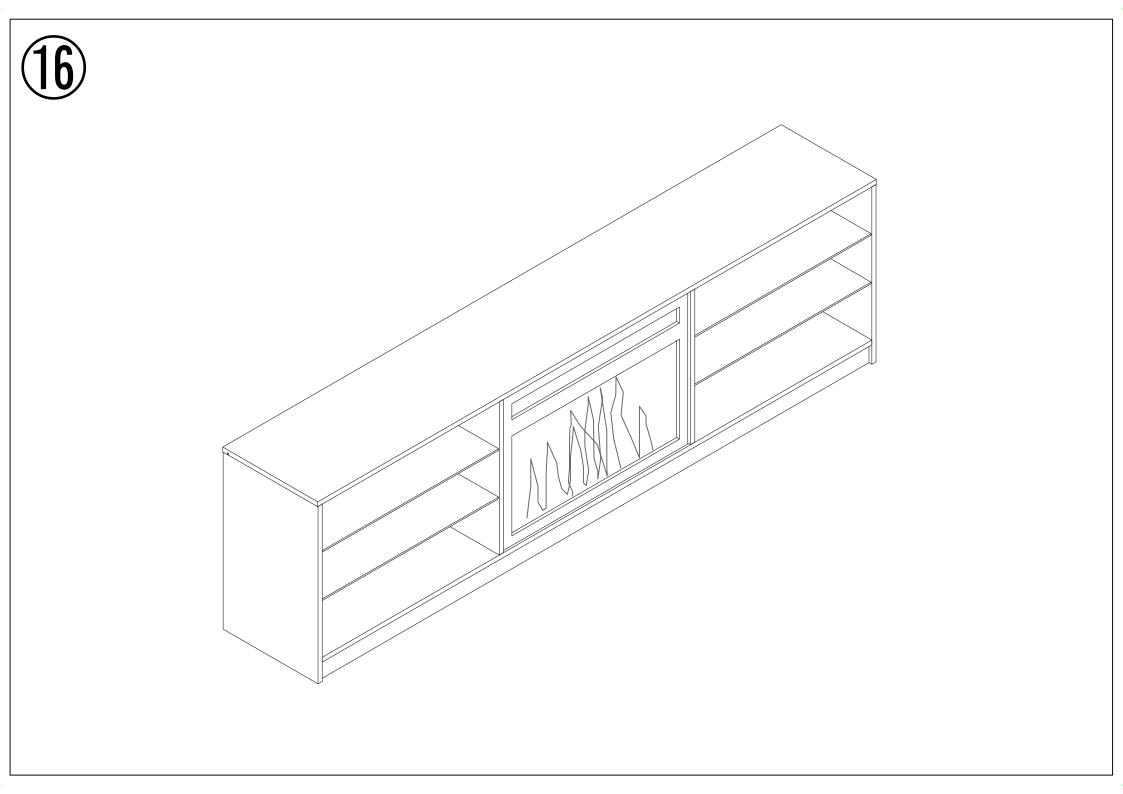

LED Light

If you can't let the lights work successfully, please check the following:

- 1. Please check the direction of the connect, try it in the opposite direction, according to the following picture.
- 2. Please check the remote control, it need you to tear down the plastic septum before use it.
- 3. Don't let the remote control too far from the receiver, make sure there is no obstruction between them.

