

# Roll Up Piano For Kids USER MANUAL

### Introduction

Thank you sincerely for buying our brand rolling piano. This hand rolling piano is a portable product with sophisticate structure design. So to avoid damage, please pay attention to the operation. For your normal use and maintenance, please read carefully the below user manual, especially the part for children, you must pay more attention.

### I. Products Specification

- Keyboard: 37/49 standard key
- LED indicate
- 128 tones, 128 rhythms and 14 demo songs
- Tone, rhythms select button
- Record, play function
- Demo song
- Star/Stop
- Sustain
- main volume control function
- Microphone function
- Keyboard drum function
- Earphone/Speaker output
- Power supply: 1. USB 5V power supply  
2. 4\*AAA battery


### II. Products feature

- This piano is a small size and is portable and convenient to play by students.
- It can cover the needs of children and primary school and it can be more suitable for the music performance and the music training.
- Using the tone adjustment keys, 128 kinds of tones can be selected
- Use 4AAA battery economical and practical.
- Won't disturb others while use earphone, support external speaker.

### III. Appearance of the structure

#### 1. Tone

- 128 tones

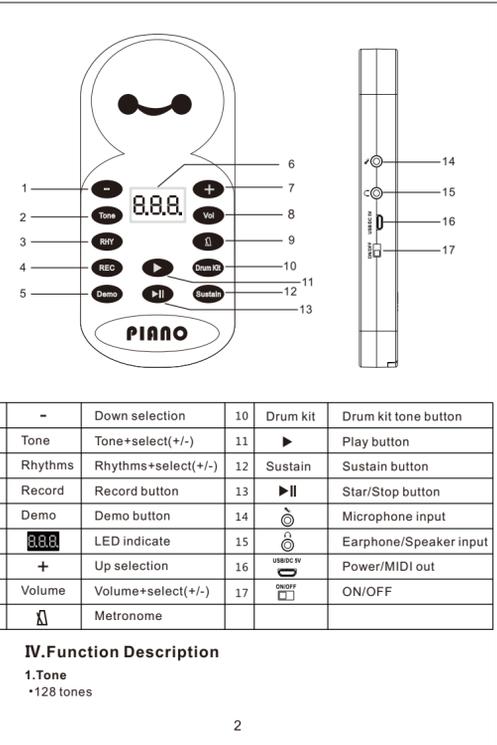

### IV. Function Description

#### 1. Tone

- 128 tones

•The initial tone is 000 when open. Chose the tone, press the "tone" button firstly then press "+/-" to select.

### 2. Rhythms

- 128 rhythms
- Press "Rhythms", enter into rhythms model, LED with number "000", press "▶||" again, rhythms stop playing.
- Under rhythms model, press "+/-" to select different rhythms

### 3. Demo song

- 14 demo songs
- Press "demo" to play demo songs, LED with number "001", press "demo" button again, it will be cycle to play, press "▶||" stop playing
- Can play the piano under demo model

### 4. Record/Play

- Press "Record" button enter into record model, LED with "REC". Press "Play" button, LED with "REP", can play the songs you recorded, If you record nothing then play function is not effective, during play function, press "Record" again, the song you recorded will miss, over playing, will return to the initial.
- During playing, can select different tone, press "▶||" to stop playing
- Under record model, you can play any key you like, system will record down what you play. When it is full, LED with "FUL" to remind you can not record, it is full.

### 5. Volume

- Press "Volume" button and then select "+/-", can increase and decrease the sound, LED will display the volume level. Open will be 12 level, the biggest is 15 level.

### 6. Sustain

- Press "Sustain" button, LED with "SUS" then the sustain function is effective, the sounds will be sustain under this function, press this button again, LED with "OFF" then close this function

### 7. Drum kit

- Press "Drum kit", LED with "ON", all keys change the drum sound, press this button again, LED with "OFF", then close this function.

### 8. Metronome

- Press " " button, it is metronome sound, it will play basis on the present speeding, press it again then close this function

### 9. Sleeping Function

•During using, three minutes without any action, LED close, into sleeping function, press any keys of piano to start, not the function button.

### 10. LED indicate

- Red LED is power indicate

### V. List of Tone

Tone Number	Name	Tone Number	Name
T00	Piano 1	T24	Acoustic Guitar (nylon)
T01	Piano 2	T25	Acoustic Guitar (steel)
T02	Piano 3	T26	Electric Guitar (jazz)
T03	Honky-Tonk Piano	T27	Electric Guitar (clean)
T04	Rhodes Piano	T28	Electric Guitar (muted)
T05	Chorused Piano	T29	Overdriven Guitar
T06	Harpichord	T30	Distortion Guitar
T07	Clavinet	T31	Guitar Harmonics
T08	Celesta	T32	Acoustic Bass
T09	Glockenspiel	T33	Electric Bass (finger)
T10	Music Box	T34	Electric Bass (pick)
T11	Vibraphone	T35	Fretless Bass
T12	Marimba	T36	Slap Bass 1
T13	Xylophone	T37	Slap Bass 2
T14	Tubular Bells	T38	Synth Bass 1
T15	Santur	T39	Synth Bass 2
T16	Hammond Organ	T40	Violin
T17	Percussive Organ	T41	Viola
T18	Rock Organ	T42	Cello
T19	Church Organ	T43	Contrabass
T20	Reed Organ	T44	Tremolo Strings
T21	Accordion	T45	Pizzicato Strings
T22	Harmonica	T46	Orchestral Harp
T23	Bandoneon	T47	Timpani

Tone Number	Name	Tone Number	Name
T48	String Ensemble 1	T76	Bottle Blow
T49	String Ensemble 2	T77	Skakuhachi
T50	SynthStrings 1	T78	Whistle
T51	SynthStrings 2	T79	Ocarina
T52	Choir Aahs	T80	Lead 1 (square)
T53	Voice Oohs	T81	Lead 2 (sawtooth)
T54	Synth Voice	T82	Lead 3 (calliope lead)
T55	Orchestra Hit	T83	Lead 4 (chiff lead)
T56	Trumpet	T84	Lead 5 (charang)
T57	Trombone	T85	Lead 6 (voice)
T58	Tuba	T86	Lead 7 (fifths)
T59	Muted Trumpet	T87	Lead 8 (bass+lead)
T60	French Horn	T88	Pad 1 (new age)
T61	Brass Section	T89	Pad 2 (warm)
T62	Synth Brass 1	T90	Pad 3 (polysynth)
T63	Synth Brass 2	T91	Pad 4 (choir)
T64	Soprano Sax	T92	Pad 5 (bowed)
T65	Alto Sax	T93	Pad 6 (metallic)
T66	Tenor Sax	T94	Pad 7 (halo)
T67	Baritone Sax	T95	Pad 8 (sweep)
T68	Oboe	T96	FX 1 (rain)
T69	English Horn	T97	FX 2 (soundtrack)
T70	Bassoon	T98	FX 3 (crystal)
T71	Clarinet	T99	FX 4 (atmosphere)
T72	Piccolo	T100	FX 5 (brightness)
T73	Flute	T101	FX 6 (goblins)
T74	Recorder	T102	FX 7 (echoes)
T75	Pan Flute	T103	FX 8 (sci-fi)

Tone Number	Name	Tone Number	Name
T104	Sitar	T116	Taiko Drum
T105	Banjo	T117	Melodic Tom
T106	Shamisen	T118	Synth Drum
T107	Koto	T119	Reverse Cymbal
T108	Alimba	T120	Guitar Fret Noise
T109	Bagpipe	T121	Breath Noise
T110	Fiddle	T122	Seashore
T111	Shanai	T123	Bird Tweet
T112	Tinkle Bell	T124	Telephone Ring
T113	Agogo	T125	Helicopter
T114	Steel Drums	T126	Applause
T115	Woodblock	T127	Gun shot

### VI. List of Rhythms

Rhythm Number	Name	Rhythm Number	Name
R000	Beguineswing	R012	Trueballadwaltz
R001	Beguine1	R013	Bossawaltz
R002	Beguine2	R014	Easywaltz
R003	Pophit	R015	Shuffiewaltz
R004	Pop	R016	Reggaewaltz
R005	Popmalay	R017	Rhumbawaltz
R006	Bossanova	R018	March 1
R007	Disco 1	R019	March 2
R008	Disco 2	R020	Rhumba1
R009	Bluegrassdisco	R021	Rhumba2
R010	Waltz1 1	R022	Slow1
R011	Waltz1 2	R023	Slow2

Rhythm Number	Name	Rhythm Number	Name
R024	Discocha	R052	C. Ballad
R025	Guaracha	R053	4J. Ballad
R026	Charl	R054	60Slowballad
R027	Samba1	R055	PianoBallad
R028	Samba2	R056	50Sballad
R029	Ubminimal	R057	Snakebase
R030	8Bit1	R058	Happyblues
R031	8Bit2	R059	Oldblues
R032	16Bit1	R060	Bluegrass
R033	16Bit2	R061	Boodie 1
R034	Ballad16T	R062	Boodie2
R035	Country16T	R063	Boodie3
R036	Tango1	R064	Shuffle 1
R037	Tango2	R065	Shuffle 2
R038	Polka 1	R066	Dreamshuffle
R039	Polka 2	R067	Countrysuffle
R040	Popswing	R068	Quickshuffle
R041	Easyswing	R069	Reggae1
R042	Softswing	R070	R&B
R043	Rock 1	R071	1Reggae1
R044	Rock 2	R072	Reggae1
R045	Rock 3	R073	Reggae2
R046	Airyrock	R074	Salsa1
R047	Hearrock	R075	Salsa2
R048	Rock&roll	R076	Salsa3
R049	Urban	R077	Tecno 1
R050	Ballad	R078	Tecno 2
R051	Jazzballad	R079	Funky 1

Rhythm Number	Name	Rhythm Number	Name
R080	Funky 2	R104	Destiny
R081	Dixie 1	R105	Comedy
R082	Dixie 2	R106	Drive
R083	Foxtrot 1	R107	Liquidnova
R084	Foxtrot 2	R108	Kindustrialfolk
R085	R. roll 1	R109	Slowpure
R086	R. roll 2	R110	SimpleJam
R087	Fastbeat	R111	Synthethix
R088	Quickbeat	R112	Feel
R089	Smoothbeat	R113	Accelerate
R090	Squarebeat	R114	Beachnight
R091	Eurobeat	R115	Irish
R092	Alphadance	R116	Tarantella
R093	Betadance	R117	Bigband
R094	Dreamdance	R118	Dandut
R095	Dance1	R119	Fusion
R096	Dance2	R120	House
R097	Dance3	R121	Keron
R098	Rap	R122	Latin
R099	Thevillage	R123	Mambo
R100	Countrysuffle	R124	Newage
R101	Electrickeys	R125	Slowrc
R102	Darkkeys	R126	Soul
R103	Easywalk	R127	Twist

### VII. List of Demo

Demo Number	Name	Demo Number	Name
D00	Lily.mid	D07	Milk Song
D01	Winter Sonata	D08	Childhood Memory
D02	Kiyomi_Cutie Song	D09	Come into my dream
D03	Beautiful Jazz	D10	Violin HumorseQue
D04	Foreat Mist-Neptun	D11	Snowdreams
D05	Destiny	D12	Dance of fireflie
D06	Poety of the Bird	D13	My Soul

### VIII. Protection of roll up piano

1. Can use the cleanly towel to clean it
2. It should be rolled well after using
3. Do not put the piano in hot and humid place

### IX. Roll up piano using details

- You should take out the battery while not using piano, in order to avoid the damage cause by batteries leak.
- In order to make sure every function is available, please put the unexpected damage will happened.
- You should not roll too tight after using it, or the key function will affected and the products lifetime will reduce.
- Do not put piano in high temperature or drippy place.
- In order to protect piano function, please do not set piano in strong radio wave place.

### X. Simple trouble shooting

- If piano stops working or abnormal sound come out while using it may the battery run out, please change another new battery.
- If the sound is abnormal, may the key function is unavailable, please turn off the power, restart the machine, then restore the original settings.