



press "\$" or "\$" to select the tone. Press "\$" or "\$" over one second, can select the tone quickly.

In other function selection modes press the tone button can return the tone selection mode

*Start"."Stop"or Rhythm",into rhythm play mode automatically,repress "start" or "stop"

any rhythm, press "full fingered" button into single & finger mode. The LED will displa

Chord function:Bass area,61 keys (from C-f# area totally 19 keys),88 keys (from A2-f# area total ______ 2 _____

34 keys) play chords that match the rhythm, and the pitch of the chord changes with the pitch of the keys different chord styles at different rhythms. Finger (major triads chord and minor triads chord), single 20.Blue-tooth APP function(Bluetooth 5.0) only have major triads chord. In the chord mode, press the "full fingered" to turn off the chord.

.Press"record"button into record mode.digital screen displays REC The recording function is taken a multi-channel real-time recording method to record notes. Into record mode, user can press the keyboard freely, the system will automatically record the

Turn on the Bluetooth in your phone then open the Pop piano APP, select any song start keys played by the user. When it is full, digital screen displays "full" to remind. Press "Play" to play the recording notes, must have notes recorded, this function is considered 3. Click on the top left of the phone screen w ,select after opening: Bluetooth connectionvalid. It will return to the original state automatically when finishing. Next-confirm to connect with the Bluetooth; .Can select the tone during playing the record notes will refresh automatically when re-record 4. Confirming Bluetooth connection, this icon is blue ...

.Total 13 levels: -6, -5, -4, -3, -2, -1, 0, 1, 2, 3, 4, 5, 6 .Playing mode,press"Trans"button into trans function,through"☆"or"∨"trans

9.Adjust the playing speed .Playing mode, press"Tempo"into playing adjust function, through "☆" or" ∨ "button to control the

10.USB-MIDI-IN-OUT function .Connect the computer or table through USB cable to work

.Metronome assist function.press the " 🔏 " can select the metronome cyclically.will be 4 changes. it is:b01(2/4 beat),b02(3/4 beat),b03(4/4 beat),b04(1/4 beat).

.Press"Drum kit"button can switch the sound of piano and drum directly

.Step sustain pedal has sustain effect -----With one pedal

sustain effect when releasing the keyboard ----Optional one set pedal

n USB 5V adapter to charge,the red LED light is on;when full,the green LED light is on.

.Press the "Dual Keyboard"button,the LED will display "ON,"28 keys on the left bass area fixed bass.can select your favorite tone on 29-88 keys area on the light,re-press "Dual Keyboard" button,this function is

.Press the reset button to restore the product to the power-on default state.

.Complex sustain pedal using:press the keyboard then step the complex sustain pedal, with

ed LED for power light,red/green double colors LED light for charging light,not full power in Li-battery,plug

______ 3 _____

Select the tone when opening the initial number is: 000, the digital screen displays "000 Press"Sustain"or"Vibrato"button to turn on or turn off sustain and vibrato function 14.Pedal sustain.complex sustain function

ess the "volume"button,repress "☆"or" ▽"to increase or decrease the sound,the digital

creen will display the corresponding level number nitial number is 12 when opening, the highest is 15.

ver one second, can select the rhythm quickly, will play the corresponding

ncho"button, can press the piano button to start the rhythm playing. ss "Insert" button, can insert the new rhythm into the basis rhythm.

Press"Demo"button will play all the demos, press"start or "Stop" to start or stop playing den .Press"☆"or"∨"to select demo

.Press"☆"or"∨"over one second, can select the demo quickly, will play the corresponding demo when releasing 5.Dynamic control function

.Press"Dynamic"button to turn on or turn off dynamic, it is dynamic when opening

.Press "+" or "-" to select the favorite tone (the first tone) when opening then press "Dual voice" button to open this function, the LED will display ON, and re-press "+" or "-"to select the second favorite tone, low, the mixed sound of two selected two tones. Re-press this button, turn off this function, and the LED will display OFF (Remark: Will not retain the previously selected tone when turn off)

turn off,the LED will display OFF.

19.Dual voice function:

3 Open the Pop piano select any song start playing after entering 4. Click on the top left of the phone screen w ,select after opening: Bluetooth connection-Next-confirm to connect with the Bluetooth: 5.Confirming Bluetooth connection, this icon is blue 21.Blue-tooth MIDI light

.Play the piano according the light, more suitable for newer to play. (only suit for blue-tooth light version) .The operation steps for connecting the Bluetooth APP are the same as 20 items, different lights

an the QR code to download the Pop piano;
furn on the Bluetooth in your phone,some phone need to turn on the phone positioning;

ne connection method:

2. Turn on the Bluetooth in your phone:

Android connection method:

can the QR code to download the Pop piano:

pen the GarageBand in your phone,if not,please download by yourself;

4.Song setting-advanced-Bluetooth device to connect the piano Bluetooth.

To download the perfect piano APP in your phone firstly;

3. Open the GarageBand, click the setting icon on the top right of the phone screen;

Connecting the GarageBand at first, after connection, then open perfect piano APP to use

for left and right hands in Pop APP. uring using, no any action withinthree minutes, the LED and power light will off, into sleeping mode automatically, press any keys to wake up.

IV Accessory one: lists of tone

Bright Acoustic Piano T36 Slap Bass 1 Electric Grand Piano T37 Slap Bass 2 Honky-tonk Piano T38 Synth Bass 1 Clavichord T42 Cello T43 Contrabass Glockenspiel T44 Tremolo Strings Music box T45 Pizzicato Strings T46 Orchestral Harp Vibraphone Marimba T47 Timpani Xylophone T48 String Ensemble Dulcimer T50 Synth Strings 1 Hammond Organ T51 Synth Strings 2 Percussive Organ T52 Choir Aahs Rock Organ T53 Voice Oohs Reed Organ T55 Orchestra Hit Accordian T56 Trumpet Harmonica T57 Trombone Tango Accordian T58 Tuba Acoustic Guitar (nylon) T59 Muted Trumpet T94 Pad 7 (halo) T123 Bird Tweet Acoustic Guitar (steel) T60 French Horn T95 Pad 8 (sweep) T124 Telephone Ring T96 FX 1 (rain) T125 Helicopter Electric Guitar (jazz) T61 Brass Section T97 FX 2 (soundtrack) T126 Applause Electric Guitar (clean) T62 Synth Brass 1 Electric Guitar (muted) T63 Synth Brass 2 T29 Overdriven Guitar T64 Soprano Sax

T30 Distortion Guitar T65 Alto Sax

Electric Bass(finger) T68 Oboe

T34 Electric Bass (pick) T69 English Horn

T31 Guitar Harmonics T66 Tenor Sax

Acoustic Bass T67 Baritone Sax

T101 FX 6 (goblins) T102 FX 7 (echoes) T74 Recorder T103 FX 8 (sci-fi) T75 Pan Flute T104 Sitar Bottle Blow Shakuhachi T78 Whistle T107 Koto T79 Ocarina T108 Kalimba T80 Lead 1 (square) T109 Bagpipe T81 Lead 2 (sawtooth) T110 Fiddle T82 Lead 3 (caliope lead) T111 Shanai T83 Lead 4 (chiff lead) T112 Tinkle Bell T84 Lead 5 (charang) T113 Agogo T85 Lead 6 (voice) T114 Steel Drums T86 Lead 7 (fifths) T115 Woodblock T87 Lead 8 (bass+lead) T116 Taiko Drum T88 Pad 1 (new age) T117 Melodic Tom T89 Pad 2 (warm) T118 Synth Drum T90 Pad 3 (polysynth) T119 Reverse Cymbal T91 Pad 4 (choir) T120 Guitar Fret Noise T92 Pad 5 (bowed) T121 Breath Noise T93 Pad 6 (metallic) T122 Seashore

> T127 Gunshot T128 Drum kit

V Accessory two:lists of rhythm

R000	80sPop	R035	American march	
R001	16Beat pop	R036	March style	
R002	8Ballad	R037	Tarante	
R003	8Beat soul	R038	Funk soul	
R004	70sRock	R039	Rock waltz	
R005	Afro pop	R040	Piano bar	
R006	Rappop	R041	Jazz waltz1	
R007	60sSoul	R042	Jazz waltz2	
R008	70sSoul	R043	16Beat tune	
R009	Funky soul	R044	Poka dance	
R010	16Beat slide	R045	Waltz	
R011	The twist	R046	Cha-cha	
R012	British pop	R047	Rumba	
R013	Hard rock	R048	Rock rap	
R014	Fusion jazz	R049	Bullfight dance	
R015	Funk slide	R050	Samba1	
R016	Fusion slide	R051	Samba2	
R017	Brisk rock1	R052	Tango1	
R018	Brisk rock2	R053	Tango2	
R019	Passionate rock	R054	Fox step	
R020	Jazz rock	R055	Jazz waltz	
R021	Fast gospel	R056	Argentine Tango	
R022	Poka rock	R057	Italian Tango Bossanoval	
R023	Rock billie	R058		
R024	Rock roll	R059	Shuffle1	
R025	Rock cha-cha	R060	Shuffle2	
R026	Rock classic	R061	House	
R027	Rock slide	R062	Merengue	
R028	Rock pop	R063	Salsa	
R029	Early boca	R064	Disco Latin	
R030	Poca pop	R065	Thailand	
R031	Blues1	R066	Reggae1	
R032	Blues2	R067	Salsa	
R033	Blues3	R068	Indian improvisation	
R034	Donular waltz	R069	Merengue	

R001	16Beat pop	R036	March style	
R002	8Ballad	R037	Tarante	
R003	8Beat soul	R038	Funk soul Punk soul	
R004	70sRock	R039	Rock waltz	
R005	Afro pop	R040	Piano bar	
R006	Rappop	R041	Jazz waltz1	
R007	60sSoul	R042	Jazz waltz2	
R008	70sSoul	R043	16Beat tune	
R009	Funky soul	R044	Poka dance	
R010	16Beat slide	R045	Waltz	
R011	The twist	R046	Cha-cha	
R012	British pop	R047	Rumba	
R013	Hard rock	R048	Rock rap	
R014	Fusion jazz	R049	Bullfight dance	
R015	Funk slide	R050	Samba1	
R016	Fusion slide	R051	Samba2	
R017	Brisk rock1	R052	Tango1	
R018	Brisk rock2	R053	Tango2	
R019	Passionate rock	R054	Fox step	
R020	Jazz rock	R055	Jazz waltz	
R021	Fast gospel	R056	Argentine Tango	
R022	Poka rock	R057	Italian Tango	
R023	Rock billie	R058	Bossanoval	
R024	Rock roll	R059	Shuffle1	
R025	Rock cha-cha	R060	Shuffle2	
R026	Rock classic	R061	House	
R027	Rock slide	R062	Merengue	
R028	Rock pop	R063	Salsa	
R029	Early boca	R064	Disco Latin	
R030	Poca pop	R065	Thailand	
R031	Blues1	R066	Reggae1	
R032	Blues2	R067	Salsa	
R033	Blues3	R068	Indian improvisation	
R034	Popular waltz	R069	Merengue	

16Beat pop	R036	March style
8Ballad	R037	Tarante
8Beat soul	R038	Funk soul
70sRock	R039	Rock waltz
Afro pop	R040	Piano bar
Rappop	R041	Jazz waltz1
60sSoul	R042	Jazz waltz2
70sSoul	R043	16Beat tune
Funky soul	R044	Poka dance
16Beat slide	R045	Waltz
The twist	R046	Cha-cha
British pop	R047	Rumba
Hard rock	R048	Rock rap
Fusion jazz	R049	Bullfight dance
Funk slide	R050	Samba1
Fusion slide	R051	Samba2
Brisk rock1	R052	Tango1
Brisk rock2	R053	Tango2
Passionate rock	R054	Fox step
Jazz rock	R055	Jazz waltz
Fast gospel	R056	Argentine Tango
Poka rock	R057	Italian Tango
Rock billie	R058	Bossanoval
Rock roll	R059	Shuffle1
Rock cha-cha	R060	Shuffle2
Rock classic	R061	House
Rock slide	R062	Merengue
Rock pop	R063	Salsa
Early boca	R064	Disco Latin
Poca pop	R065	Thailand
Blues1	R066	Reggae1
Blues2	R067	Salsa
Blues3	R068	Indian improvisation
Popular waltz	Rn69	Merengue

		R071
		R072
		R073
		R074
		R075
		R076
		R077
		R078
		R079
		R080
		R081
		R082
		R083
		R084
		R085
		R086
		R087
		R088
		R089
		R090
		R091
		R092
		R093
		R094
		R095
		R096
		R097
		R098
	'	

0	Polka	R099	Disco f
1	16Reggae	R100	Euro so
2	Slow rock1	R101	Disco f
3	Slow rock2	R102	Disco f
4	Slow soul5	R103	Jazzsa
5	Jorpo	R104	Disco F
6	Lambada	R105	Popula
7	Love ballad	R106	Club d
8	Plena	R107	Moder
9	China	R108	Meland
0	Acid	R109	Mambo
1	8Beat modern	R110	Discos
2	Country folk	R111	Disco
3	Love songs	R112	Cobmo
4	City pop	R113	Swing
5	Electronic pop	R114	Krump
6	Auditory folk	R115	Band r
7	Piano Ballads	R116	Band r
8	soul8.mid	R117	Band r
9	Rock folk	R118	Big ba
0	Slow and light	R119	Big ba
1	Similar ballad	R120	Wild p
2	Majestic pop	R121	South
3	Kinetic1	R122	Popula
4	Kinetic2	R123	Jazz ba
5	Funk disco	R124	Jazz cl

D02 Butterfly Lovers D17 Do-Re-Mi
 D03
 Entering a new era
 D18
 Moon River

 D04
 Girl of Alishan
 D19
 Mary has a little sheep

 D05
 Qinghai Tibet Plateau
 D20
 Hotels in the Pacific

D15 Sweet honey

VI Accessory three:name lists of demo

InThePlace PeachBlossom D21 Crazy 1900

D13 Night of grassland D28 Short song
D14 Radiant D29 Jingle bells

VIII. Precautions for using an electric piano: .Do not split any part of the electronic piano

2.N.W: 88keys 4.8KG

61keys 3.5KG

3.Input voltage:USB DC5V

Do not put the piano in the humid and hot place .Do not put the piano in the the place with strong wave, in order not to effect the function of

.If the sound is abnormal or the key is invalid, please re-open the piano, restore the original

X.Product specifications

1.Product size: 88keys 1282MMx176MMx61MM 61keys 915MMx176MMx61MM

4. Power by 1100mAh li-ion battery.