

http://kohoxo.com/en-piano.zip





Dear Customer:

Rhythm function

·Metronome function

·Knob button function

II. Function button description:


·Blue-tooth MIDI/Blue-tooth audio function

00 00 00 00 00 00 00

·Power supply:1.Built-in battery 7.4V/1800mAh

2.DC 9V/2A supply



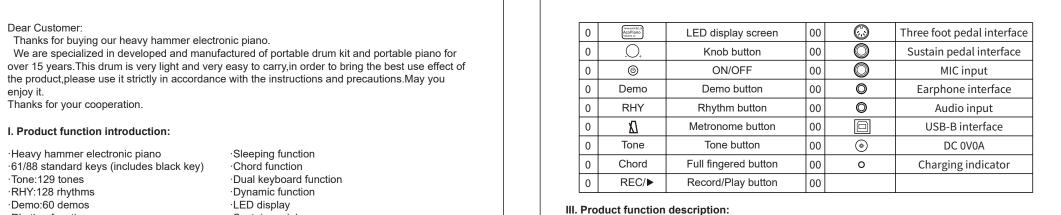

1.ON/OFF button

Press this button about 0.5 seconds will turn on,repress will turn of.

2.Knob button(Volume adjust)

1. The power-on defaults is the volume adjustment mode, rotate left and right to select the 2. The volume can be selected from 0-15 level, the default is 12 level. 3.Press "Knob" button to enter the menu, rotate "Knob" button left and right to enter the selection

Press for 0.5 seconds to return the upper menu. Return to volume mold without any operation for 3 seconds. 4. Under volume mold, press" Knob" button for 2 seconds, the system restores to the default

time,only for the version with light.

6.Demo button

With 129 tones, press "Tone" button, the screen will display the tone number "Timbre000", rotate the "Knob" left and right to select the tone, tone number changes, return to volume mold without any operation for 3 seconds.

function, firstly press to enter the menu setting, repress to enter the function confirmation.

With 128 rhythms, press "RHY" button automatically enter playing, the screen will display "Rhythm000", rotate the "Knob" left and right to select the rhythm, repress "RHY" button to stop.Return to volume mold without any operation for 3 seconds.

Remark: Turn on or turn off the reverb effect through press "Demo" for long time.

5. ∑ button Press " \(\lambda \) "button to play,rotate "Knob"left and right to select the beat,repress " \(\lambda \) "to stop.Return to volume mold without any operation for 3 seconds. Remark:To turn on or turn off the MIDI keyboard light through press " 1 "button for long

Press "Knob" button, rotate "Knob" button to select keyboard drum, after press "Knob" button, ro-With 60 demos, press "Demo" button to play, rotate "Knob" left and right to select the demo, repress "Demo" to stop, return to volume mold without any operation for 3 seconds.

7. REC/▶button

Press "REC/▶" for 3 seconds to record,the screen will display"Record ON",repress stop recording,the screen will display "Record OFF",repress" REC/▶" can play what you record,the screen will display "Playback ON", repress to stop, the screen will display "Playback OFF".

Press "Knob"button,rotate "Knob"button to select the tempo speed. Press "Knob"button,tempo speed can be selected from 40 to 280, the default is 120, return to volume mold without any operation for 3 seconds.

Press "Knob"button,rotate "Knob"button to select transpose.Press "Knob"button,transposition can be selected from -6 to +6,the default is 0,return to volume mold without any operation for 3 The red indicator light is the charging indicator. When the built-in lithium battery is not fully

10.Dual keyboard

Press "Knob"button,rotate "Knob"button to select Split key. Press "Knob"button, rotate "Knob"left and right to select dual keyboard open or close the dual keyboard has the same pitch of the left and right three octaves.Return to volume mold without any operation for 3 seconds. Through Bluetooth, you can wirelessly connect to piano learning apps on iPhone or ipads,



After split:A0-B0

Press "Full fingered "button,can open or close the chord function.

11.Full fingered button

Press "Knob"button,rotate "knob"button to select the learn mode,after press "Knob",rotate "Knob"left and right to select the learn mode (A-mode,B-mode,teaching off),return to volume After booting, the Bluetooth function is automatically turned on and there is a prompt tone. mold without any operation for 3 seconds.

Press "Knob" button, rotate "Knob" button to select vibrato, after press "Knob" button, rotate left and right to select vibrato open or close, return to volume mold without any operation for 3

14.Keyboard drum

tate left and right to select the keyboard drum open or close, When the keyboard drum is turned on, all keys are turned on to become the percussion sound. When the keyboard drum is turned off, the percussion sound is turned off.Return to volume mold without any operation for

Press "Knob"button,rotate "Knob"to select dynamic,after press "Knob"button,rotate left and right to select the dynamic open or close, when the dynamic switch is selected to be on, the keys are pressed harder, and the sound played out is louder. The default is on.Return to volume mold without any operation for 3 seconds.

Press "Knob" button, rotate "Knob" to select the sleep-mode.

Press "Knob" button, rotate "Knob" left and right to select sleep-mode open or close. After the sleep mode is turned on, there is no action for ten minutes, and it enters the shutdown state. At this time, you need to press the power button to restart.

charged, plug in the DC9V power supply to charge. The red LED indicator light is off when the

such as GarageBand, Singing Bar and Perfect Piano and other professional apps. Specific

connection (take GarageBand as an example): Download GarageBand software on your

iPhone or tablet, Open the software, select the "Settings" icon on the top right to enter the column, select "Advanced", select the Bluetooth MIDI device, select MIDI-Piano in the

Bluetooth MIDI device, and click connect and you can use it normally (if it fails to connect,

battery is fully charged. 18.Blue-tooth MIDI function

please Restart the electric organ)



After booting, the Bluetooth function is automatically turned on and there is a prompt tone

(Only applicable to the version with Bluetooth MIDI)

(Only applicable to the version with Bluetooth audio)

Bluetooth is turned on and waiting for the connected mobile phone to play accompaniment or music. The mobile phone searches for Music-Piano to connect. After the connection is successful, there will be a prompt tone. Volume increase or decrease or music selection needs to be performed on the mobile phone.

20.Blue-tooth audio function

Bluetooth is turned on and waiting for the connected mobile phone to play accompaniment or 029 Croatian Rhapsody music. The mobile phone searches for Music-Piano to connect. After the connection is successful, there will be a prompt tone. Volume increase or decrease or music selection needs to be performed on the mobile phone. (Only applicable to the version with Bluetooth audio)

Accessory one:lists of demo

Clementine sonata

Dream of Love Minuet From LArlesienne Mary had a little lamb The River of Babylon American patro MARIAGE D' AMOUR Beethoven Piano Sonatas Cancan cuckoo waltz Russian dance music Merry widow waltz Schubert Serenade Ballade pour Adeline Four Seasons Spring March

Spain Matador March

Hungarian Dance

Edelweiss

ino	033	Electric Bass(linger)	
Acoustic Grand Piano	034	Electric Bass (pick)	
Bright Acoustic Piano	035	Fretless Bass	
Electric Grand Piano	036	Slap Bass 1	
Honky-tonk Piano	037	Slap Bass 2	
Rhodes Piano	038	Synth Bass 1	
Chorused Piano	039	Synth Bass 2	
Harpsichord	Strings		
Clavichord	040	Violin	
r percussion	041	Viola	
Celesta	042	Cello	
Glockenspiel	043	Contrabass	
Music box	044	Tremolo Strings	
Vibraphone	045	Pizzicato Strings	
Marimba	046	Orchestral Harp	
Xylophone	047	Timpani	
Tubular Bells	E	Insemble/Chorus	
Dulcimer	048	String Ensemble 1	
rgan	049	String Ensemble 2	
Hammond Organ	050	Synth Strings 1	
Percussive Organ	051	Synth Strings 2	
Rock Organ	052	Choir Aahs	
Church Organ	053	Voice Oohs	
Reed Organ	054	Synth Voice	
Accordian	055	Orchestra Hit	
Harmonica	Copper tube		
Tango Accordian	056	Trumpet	
uitar	057	Trombone	
oustic Guitar (nylon)	058	Tuba	
coustic Guitar (steel)	059	Muted Trumpet	
lectric Guitar (jazz)	060	French Horn	
ectric Guitar (clean)	061	Brass Section	
ectric Guitar (muted)	062	Synth Brass 1	
Overdriven Guitar	063	Synth Brass 2	
Distortion Guitar	Reed pipe		
Guitar Harmonics	064	Soprano Sax	
ass	065	Alto Sax	
Acoustic Bass	066	Tenor Sax	

Accessory two:lists of tone

(001	Daritorio Oax	000	i A o (oi yotai)	
ss (pick)		068	Oboe	099	FX 4 (atmosphere)	
Bass	7	069	English Horn	100	FX 5 (brightness)	
ass 1	7	070	Bassoon	101	FX 6 (goblins)	
ass 2	7	071	Clarinet	102	FX 7 (echoes)	
ass 1	7		Flute	103	FX 8 (sci-fi)	
ass 2	7	072	072 Piccolo		musical instrument	
		073	Flute	104	Sitar	
in	7	074	Recorder	105	Banjo	
a		075	Pan Flute	106	Shamisen	
0	7	076	Bottle Blow	107	Koto	
bass		077	Shakuhachi	108	Kalimba	
Strings	7	078	Whistle	109	Bagpipe	
Strings		079	Ocarina	110	Fiddle	
ıl Harp			Synthetic tonic	111	Shanai	
ani	7	080	080 Lead 1 (square)		Percussion	
;		081	Lead 2 (sawtooth)	112	Tinkle Bell	
emble 1		082	Lead 3 (caliope lead)	113	Agogo	
emble 2		083	Lead 4 (chiff lead)	114	Steel Drums	
rings 1		084	Lead 5 (charang)	115	Woodblock	
ings 2		085	Lead 6 (voice)	116	Taiko Drum	
ahs		086	Lead 7 (fifths)	117	Melodic Tom	
Dohs		087	Lead 8 (bass+lead)	118	Synth Drum	
/oice			Synthetic Voice	119	Reverse Cymbal	
ra Hit		088	088 Pad 1 (new age)		Sound effect	
		089	Pad 2 (warm)	120	Guitar Fret Noise	
pet		090	Pad 3 (polysynth)	121	Breath Noise	
one		091	Pad 4 (choir)	122	Seashore	
а		092	Pad 5 (bowed)	123	Bird Tweet	
umpet		093	Pad 6 (metallic)	124	Telephone Ring	
Horn		094	Pad 7 (halo)	125	Helicopter	
ection		095	Pad 8 (sweep)	126	Applause	
rass 1			Synthetic effect	127	Gunshot	
rass 2		096	FX 1 (rain)	128	Drum	
		097	FX 2 (soundtrack)			
o Sax						
Sax	_					
Sax						

Baritone Sax	098	FX 3 (crystal)	
Oboe	099	FX 4 (atmosphere)	
English Horn	100	FX 5 (brightness)	
Bassoon	101	FX 6 (goblins)	
Clarinet	102	FX 7 (echoes)	
e	103	FX 8 (sci-fi)	
Piccolo	Folk	musical instrument	
Flute	104	Sitar	
Recorder	105	Banjo	
Pan Flute	106	Shamisen	
Bottle Blow	107	Koto	
Shakuhachi	108	Kalimba	
Whistle	109	Bagpipe	
Ocarina	110	Fiddle	
ic tonic	111	Shanai	
ead 1 (square)		Percussion	
ad 2 (sawtooth)	112	Tinkle Bell	
d 3 (caliope lead)	113	Agogo	
ad 4 (chiff lead)	114	Steel Drums	
ad 5 (charang)	115	Woodblock	
ead 6 (voice)	116	Taiko Drum	
ead 7 (fifths)	117	Melodic Tom	
d 8 (bass+lead)	118	Synth Drum	
c Voice	119	Reverse Cymbal	
id 1 (new age)		Sound effect	
Pad 2 (warm)	120	Guitar Fret Noise	
d 3 (polysynth)	121	Breath Noise	
Pad 4 (choir)	122	Seashore	
ad 5 (bowed)	123	Bird Tweet	
ad 6 (metallic)	124	Telephone Ring	
Pad 7 (halo)	125	Helicopter	
ad 8 (sweep)	126	Applause	
c effect	127	Gunshot	
FX 1 (rain)	128	Drum	
2 (soundtrack)			

Accessory three:lists of rhythm

	039	Rock waltz		
	040	Mideast		
	041	Jazz waltz1		
	042	Jazz waltz2		
	043	16Beat tune		
	044	Polka2		
	045	Waltz		
	046	African		
	047	Swing1		
	048	Vallenato		
	049	Bequine		
	050	Samba1		
	051	Samba2		
	052	Tango1		
	053	Tango2		
	054	House1		
	055	Jazz waltz		
	056	Bolero		
	057	New soul		
	058	Bossa nova3		
	059	Shuffle1		
	060	Shuffle2		
	061	House2		
	062	Merengue1		
	063	Salsa		-
	064	Latin swing		
	065	Thailand		
	066	Reggae1		
	067	Soul2		
	068	Soul3		
	069	Merengue2		
	070	Polka3		
	071	16Reggae		
	072	Slow rock1		
า	073	Slow rock2		
	074	Slow soul3		
	075	Jorpo		

3	Lambada	102	Rhumba3	1.The electric piano can be cleaned
7	Love ballad3	103	Jazz Samba	2.Store the electric piano after use.
3	Plena	104	Rhumba4	V Processians for using alactronic
9	China1	105	Funk Samba	V.Precautions for using electronic
)	Acid	106	Rhumba5	Do not split any part of the electric pont of the electric pont of the electric piano in a
1	8Beat modern	107	Samba3	Do not put it in a place with strong e
2	Country folk	108	Hard beat	
3	Soul4	109	Mambo1	VI.Simple troubleshooting:
4	City pop	110	Disco soul	If the sound is abnormal or the keys
5	Calypso	111	Mambo2	restore the original settings. If the battery voltage is low, there m
3	Love ballad4	112	Cobmo	failure, please charge it in time.
7	Love ballad5	113	Swing beat	VIII Due direct ama sifi actions
3	Soul5	114	China3	VII.Product specifications
9	Bluegrass	115	Band marche1	1.Product size: 1287*234*105mm,weight:12.4kd
0	16beat2	116	Band marche2	2.Input voltage:DC 9V/2A
1	China2	117	Band marche3	3.Material:ABS+Aluminium
2	Soul6	118	Big band1	
3	Kinetic1	119	Big band2	
4	Kinetic2	120	Soul7	
5	Funk disco	121	Soul8	
ô	Cobmo disco	122	Swing2	
7	Twist	123	Swing3	
3	Euro beat	124	Swing4	
9	Rhumba1	125	Habanera	

1.The electric piano can be cleaned with a clean soft towel.

2.Store the electric piano after use. Do not store the electric piano in a hot and humid place.

V.Precautions for using electronic piano

IV.Protection of electric piano:

·Do not split any part of the electric piano.

Do not place the electric piano in a hot or humid place.

Do not put it in a place with strong electric waves, so as not to affect the function.

·If the sound is abnormal or the keys fail, please turn off the power and restart the machine to

·If the battery voltage is low, there may be problems such as abnormal sound and keyboard

VII.Product specifications

1287*234*105mm,weight:12.4kgs 2.Input voltage:DC 9V/2A 3.Material:ABS+Aluminium