

Portable Folded Electronic Piano

USER MANUAL

software download address:
<http://kohoxo.com/en-piano.zip>




Sincerely thank you for buying our company's portabel folded electronic piano. The company has been specialized in developing and producing a series of products such as portable electronic piano,hand-rolled pianos and hand-rolled drums for 15 years.This product is a light weight product that is very easy to carry.In order to give full play to the best use effect of the product.Please use it strictly in accordance with the instructions and precautions.Hope you can have a pleasant use process. Thanks for your cooperation!

I. Product function introduction:

- Folded electronic piano
- 61/88 standard keys (includes black keys)
- Tone:128 tones
- Rhythm:128 rhythms
- Demo:20 demos
- Rhythm function
- Demo function
- Metronome function
- Dynamics function
- Full fingered function
- Sustain/Trans function
- Dual Voice function
- Dynamics function
- USB MIDI OUT
- Sustain pedal
- Blue-tooth MIDI/Blue-toothaudio function (Optional)
- Power supply:1.built-in battery 3.7V/1100mAh supply 2.USB 5V/1A supply

II. Function button description:

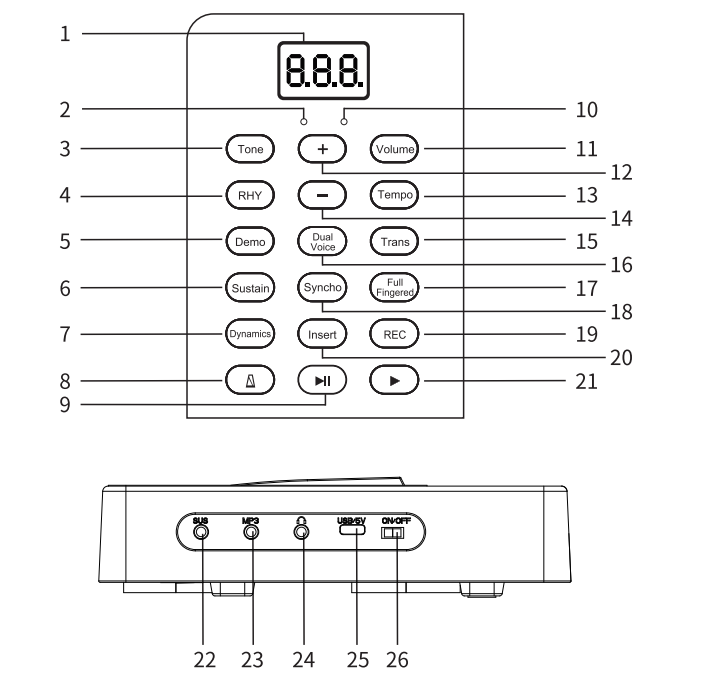

1	888	LED digital display screen	14	-	Decrease button
2	o	LED indicator	15	Trans	Trans button
3	Tone	Tone button	16	Dual Voice	Dual Voice button
4	RHY	Rhythm button	17	Full fingered	Full fingered button
5	Demo	Demo button	18	Syncho	Synchronize button
6	Sustain	Sustain button	19	REC	Record button
7	Dynamics	Dynamics button	20	Insert	Insert button
8	▶	Metronome button	21	▶	Play button
9	▶	Start/Stop button	22	○	Pedal interface
10	o	Charging indicator light	23	○	MP3 interface
11	Volume	Volume button	24	○	Earphone interface
12	+	Increase button	25	USB	USB 5V interface
13	Tempo	Tempo button	26	ON/OFF	ON/OFF

III. Product function description:

1.Tone

.128 tones.
 .The tone is directly selected when it is turned on, the default value is 000,press "+" or "-" to select the tone.
 .In other function selection mode, press the tone button on the panel to return to the tone selection mode

2.Volume

.Press the "Volume"button,repres "+" or "-" to increase or decrease the sound,the digital tube displays the corresponding volume level.
 .The default is 12 level when turn on,and the biggest is 15 level.

3.RHY

.128 rhythms
 .Press "Start/Stop"button or "RHY"button,to enter RHY playing mode,repres "Start/Stop" button stop playing.
 .Press "+" or "-" to select RYH.
 .Press "Synchronize" button,repres any keys to play RYH.
 .Press "Insert"button, can insert a new rhythm on the basis of the original rhythm.

4.Demo

.15 demos
 .Press "Demo"button,the system plays all demo songs,press "Start/Stop" button stop playing.
 .Press "+" or "-" button to select the demo.

5.Full fingered

.When playing the rhythm,press "Full fingered"button to enter the finger and full fingered chord mode.
 .Chord function:Bass zone,61 keys (from C-#f interval total 19 keys),88 keys (From A2-#f interval total 34 keys),play chords that match the rhythm, and the chord's pitch changes with the pitch of the keys.
 .Under chord mode,press "Full fingered"button to close chord.

6.Record function

.Press "Record"button to enter record mode,Digital tube displays REC.
 .The recording function is to use multi-channel real-time recording to record notes.
 .After entering the record mode,user can play any keys,the system will automatically record the notes played by the user. When the record block planned by the system is full, the digital tube will display FULL to indicate that the record is full.
 .Press "Play" button to play what you record,but only when a note is recorded can this playback function be considered valid. After playback is over, it will automatically return to the original state.
 .During the playback process, you can choose to play back the tone, and then record again. After the system is reset, the recorded notes will be automatically refreshed.

7.Trans function

.Total will be 13 levels,-6,-5,-4,-3,-2,-1,0,1,2,3,4,5,6.
 .In playing mode,press "Trans" button to enter trans function,select by "+" or "-".

8.Metronome function

.In performance mode,press "Metronome"button to enter the playback adjustment function,to control the playback speed by "+" or "-".

9.USB MIDI-IN-OUT function

.Connect to a computer or tablet via USB for multimedia interaction

10.Metronome function

.Metronome auxiliary function,Press " Metronome" button to cycle through the selection of beats,there are four variations of the metronome,will be 1/4 beat-2/4 beat-3/4 beat-4/4 beat

11.Dynamic function

.Press "Dynamic"button to open or close dynamic, dynamic is on when turn on.

12.Sustain function

.Press "Sustain"button to open or close sustain effect.

13.Pedal function

.Step on the sustain pedal has sustain function.

14.Sleeping function

.During use,if there is no action for one minute, the digital tube light and indicator light will be off, the system will automatically enter the sleep state, press any key to wake it up.

15.LED indicator

.The red LED light is the power working indicator,red/green double LED is the charging indicator,when the built-in lithium battery is not fully charged, plug in the USB 5V power supply to charge it,red LED indicator is on,when the battery is fully charged,turns to green light.

16.Blue-tooth MIDI function

.Through Bluetooth, you can wirelessly connect to piano learning apps on Apple mobile phones or ipads, such as GarageBand, Singing Bar and Perfect Piano and other professional apps. Specific connection (take GarageBand as an example): Download GarageBand software on your iPhone or tablet, Open the software, select the "Settings" icon on the top right to enter the column, select "Advanced", select the Bluetooth MIDI device, select MIDI-Piano in the Bluetooth MIDI device, and click connect and you can use it normally (if it fails to connect, please Restart the electric organ)
 (Only applicable to the version with Bluetooth MIDI)

17.Blue-tooth audio function

.After booting, the Bluetooth function is automatically turned on and there is a prompt tone. Bluetooth is turned on and waiting for the connected mobile phone to play accompaniment or music. The mobile phone searches for Music-Piano to connect. After the connection is successful, there will be a prompt tone. Volume increase or decrease or music selection needs to be performed on the mobile phone.
 (Only applicable to the version with Bluetooth audio)

Accessory one:lists of demo

NO	name	NO	name
000	Croatian Rhapsody	010	The Maidens Prayer
001	Santa Lucia	011	Tocatta and Fugue
002	Marriage d'amour	012	Radetzkzy Marsch
003	Edelweiss	013	Romance d'Amour
004	Grande Valse Brillante op.18	014	Milk Song
005	Carmen Overture	015	Crystal Lake
006	Ode to loveliness	016	Green sleeves
007	Turkish March	017	Beautiful Jazz
008	Haydn Serenade	018	For Elise
009	Minuet	019	Schubert piano sonatas

Accessory two:lists of tone

NO	name	NO	name
Piano			
000	Piano 1	023	Bandoneon
001	Piano 2	Guitar	
002	Piano 3	024	Acoustic Guitar (nylon)
003	Honky-Tonk Piano	025	Acoustic Guitar(steel)
004	Rhodes Piano	026	Electric Guitar (jazz)
005	Chorused Piano	027	Electric Guitar (clean)
006	Harpischord	028	Electric Guitar (muted)
007	Clavinet	029	Overdriven Guitar
Percussion			
008	Celesta	031	Distortion Guitar
009	Glockenspiel	Bass	
010	Music Box	032	Acoustic Bass
011	Vibraphone	033	Electric Bass(finger)
012	Marimba	034	Electric Bass(pick)
013	Xylophone	035	Fretless Bass
014	Tubular Bells	036	Slap Bass 1
015	Santur	037	Slap Bass 2
Organ			
016	Hammond Organ	039	Synth Bass 1
017	Percussive Organ	String Solo	
018	Rock Organ	040	Violin
019	Church Organ	041	Viola
020	Reed Organ	042	Cello
021	Accordion	043	Contrabass

NO	name	NO	name
044	Tremolo Strings	078	Whistle
045	Pizzicato Strings	079	Ocarina
046	Orchestral Harp	Synthetic tonic	
047	Timpani	080	Lead 1 (square)
Chorus			
048	String Ensemble 1	082	Lead 3 (callope lead)
049	String Ensemble 2	083	Lead 4 (chiff lead)
050	SynthStrings 1	084	Lead 5 (charang)
051	SynthStrings 2	085	Lead 6 (voice)
052	Choir Aahs	086	Lead 7 (ffths)
053	Voice Oohs	087	Lead 8 (bass+lead)
054	Synth Voice	Synthetic soft tone	
055	Orchestra Hit	088	Pad 1 (new age)
Brass instrument			
056	Trumpet	089	Pad 2 (warm)
057	Trombone	090	Pad 3 (polysynth)
058	Tuba	091	Pad 4 (choir)
059	Muted Trumpet	092	Pad 5 (bowed)
060	French Horn	093	Pad 6 (metallic)
061	Brass Section	094	Pad 7 (halo)
062	Synth Brass 1	095	Pad 8 (sweep)
063	Synth Brass 2	Synthetic effects	
064	Soprano Sax	096	FX 1 (rain)
065	Alto Sax	097	FX 2 (soundtrack)
066	Tenor Sax	098	FX 3 (crystal)
067	Bartone Sax	099	FX 4 (atmosphere)
068	Oboe	100	FX 5 (brightness)
069	English Horn	101	FX 6 (goblins)
070	Bassoon	102	FX 7 (echoes)
071	Clarinet	103	FX 8 (sci-fi)
Wind instrument			
072	Piccolo	104	Sitar
073	Flute	105	Banjo
074	Recorder	106	Shamisen
075	Pan Flute	107	Koto
076	Bottle Blow	108	alimba
077	Skakuhachi	109	Bagpipe
		110	Fiddle
		111	Shanai

NO	name	NO	name
Percussion			
112	Tinkle Bell	120	Guitar Fret Noise
113	Agogo	121	Breath Noise
114	Steel Drums	122	Seashore
115	Woodblock	123	Bird Tweet
116	Taiko Drum	124	Telephone Ring
117	Melodic Tom	125	Helicopter
118	Synth Drum	126	Applause
119	Reverse Cymbal	127	Gun shot

Accessory three:lists of rhythm

NO	name	NO	name
000	Begunes Wing	026	Char
001	Beguine_2	027	Samba_1
002	Beguine_3	028	Samba_2
003	Pop hit	029	Ubminimal
004	Pop	030	8Bit_1
005	Pop Malay	031	8Bit_2
006	Bossa nova	032	16Bit_1
007	Disco_1	033	16bit_2
008	Disco_2	034	Ballad_16T
009	Blue grass disco	035	Country_16T
010	Waltz_1	036	Tango_1
011	Waltz_2	037	Tango_2
012	True ballad waltz	038	Polka_1
013	Bossa waltz	039	Polka_2
014	Easy Waltz	040	Pop Swing
015	Shuffle Waltz	041	Easy Swing
016	Reggae Waltz	042	Soft Swing
017	Rumba Waltz	043	Rock_1
018	March_1	044	Rock_2
019	March_2	045	Rock_3
020	Rumba_1	046	Airy Rock
021	Rumba_2	047	Heart Rock
022	Slow_1	048	Rock & Roll
023	Slow_2	049	Urban Rock
024	Disco cha cha	050	Ballad
025	Guala cha	051	Jazz Ballad

NO	name	NO	name
052	C.Ballad	090	Square Beat
053	J.Ballad	091	Euro Beat
054	60s Slow Ballad	092	Alpha Dance
055	Piano Ballad	093	Beta Dance
056	50s Ballad	094	Dream Dance
057	Snake Base	095	Dance_1
058	Happy Blues	096	Dance_2
059	Old Blues	097	Dance_3
060	Blue Gras	098	RAP
061	Boodie_1	099	The Country
062	Boodie_2	100	Country Shuffle
063	Boodie_3	101	Electric Keys
064	Shuffle_1	102	Dark Keys
065	Shuffle_2	103	Easy Walk
066	Dream Shuffle	104	Destiny
067	Country Shuffle	105	Comedy
068	Quick Shuffle	106	Drive
069	Reggae Shuffle	107	Liquid Nova
070	R&B	108	Indonesian folk
071	Reggae_1	109	Absolute Music
072	Reggae_2	110	Jamaica
073	Reggae_3	111	Synthesis
074	Salsa_1	112	Feel
075	Salsa_2	113	Accelerate
076	Salsa_3	114	Beach Night
077	Tecno_1	115	Insh
078	Tecno_2	116	Tarantella
079	Funky_1	117	Big band
080	Funky_2	118	Dan
081	Dixie_1	119	Fusion
082	March_1	120	Horse
083	Foxtrot_1	121	Canon
084	Foxtrot_2	122	Latin
085	R_roll_1	123	Mambo
086	R_roll_2	124	New age
087	Fast Beat	125	Slow rc
088	Quick Beat	126	Soul
089	Smooth Beat	127	Twist

IV. Protection of electric piano:

- 1.The electric piano can be cleaned with a clean soft towel.
- 2.Store the electric piano after use. Do not store the electric piano in a hot and humid place.

V. Precautions for using electronic piano

- .Do not split any part of the electric piano.
- .Do not place the electric piano in a hot or humid place.
- .Do not put it in a place with strong electric waves, so as not to affect the function.

VI. Simple troubleshooting:

.If the sound is abnormal or the keys fail, please turn off the power and restart the machine to restore the original settings.