

# Roll Up Piano


## USER MANUAL

Thank you sincerely for buying our hand roll piano. We are specialized in developed and manufactured hand roll piano and drum kit for over 15years. This hand roll piano is a handy size product which very easy to carry. in order to have a best experience effect, please pay attention to the operation, wish you enjoy it, thanks again for your cooperation!

### I Main Feature

- 61/88 Keys standard piano.
- Digital display.
- Auto sleep mode.
- 128 kinds of tone, 128 kinds of rhythms and 15 demo songs.
- Mode selection key (tone and rhythm).
- Tone choose by numbers.
- Synchro function, single/fingered chord.
- Recording, programming and playback function.
- Demo songs play, tutorial function.
- Start/stop insert function key.
- Drum kit function.
- Sustain and vibrato function
- Master volume control key,tempo control key.
- Microphone, audio input function.
- Midi Out,USB 5V power adapter.
- Sustain pedal.
- Earphone/speaker output interface.
- Power supply:
  - 1. by USB 5V power adapter.
  - 2. by built in 1100mA li-ion battery.
- With speaker inside, can use as Bluetooth speaker (only for Bluetooth version)

### II Icons specification of panel function

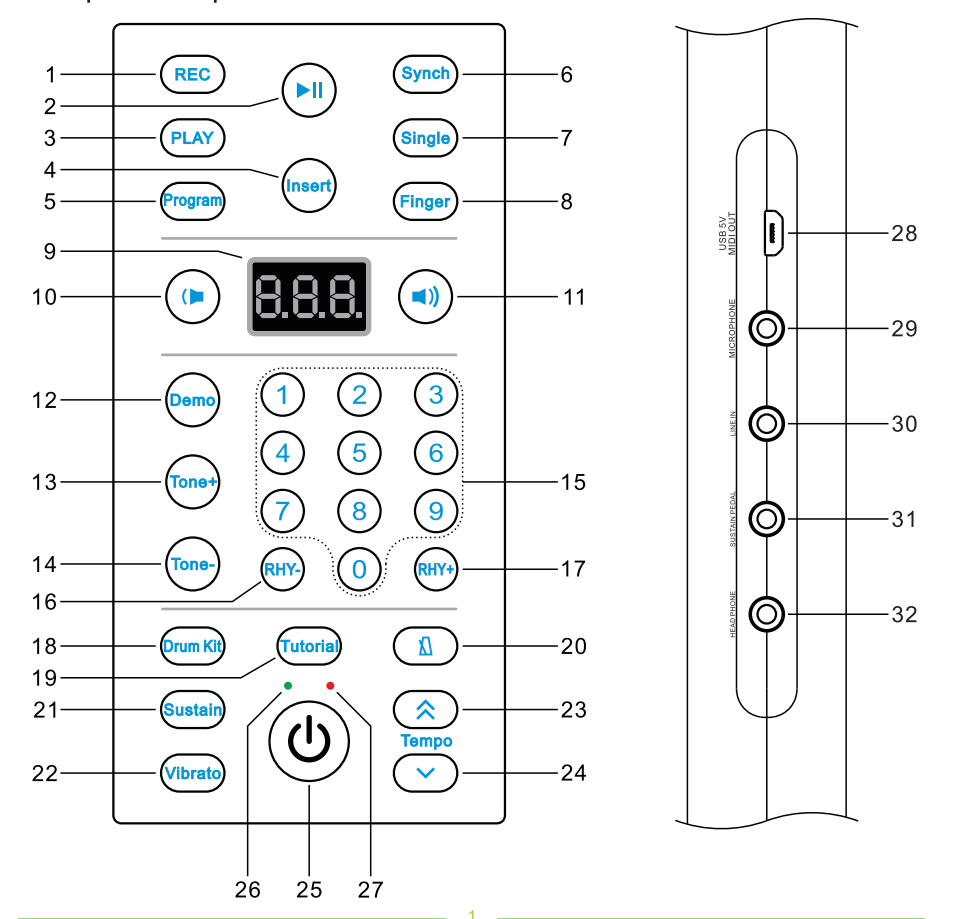

1	REC	Record	17	RHY+	RHY+
2	▶ ◀	Start/Stop	18	Drum Kit	Drum Kit
3	PLAY	Play	19	Tutorial	Tutorial
4	Insert	Insert	20	Metronome	Metronome
5	Program	Program	21	Sustain	Sustain
6	Synch	Synch	22	Vibrato	Vibrato
7	Single	Single chord	23	Tempo Control+	Tempo Control+
8	Fingered	Fingered chord	24	Tempo Control-	Tempo Control-
9	LED display	LED display	25	Power Switch	Power Switch
10	Volume Control-	Volume Control-	26	Charging Indicator	Charging Indicator
11	Volume Control+	Volume Control+	27	Power Indicator	Power Indicator
12	Demo	Demo	28	MIDI OUT/USB 5V	MIDI OUT/USB 5V
13	Tone+	Tone+	29	Microphone Port	Microphone Port
14	Tone-	Tone-	30	Line in port	Line in port
15	Number	Tone choose by numbers	31	Sustain input interface	Sustain input interface
16	RHY-	RHY-	32	Headphone/Speaker interface	Headphone/Speaker interface

### III Product Function description

#### 1. Tone

- Include 128 tones.
- The initial settings for this tone number is "000", press "Tone+/Tone-" to choose what you like.
- Can choose different tones from 000 to 127 directly by press the numbers.

#### 2. Rhythm

- Include 128 rhythms.
- When you press "▶|◀", the piano will automatically enter into the playback mode ,LCD with number "000", press "▶|◀" again, the rhythm will stop.
- You can use "RHY+/RHY-" to control rhythm.
- The user can press "Insert" to insert 1-2 bits at the basic rhythm when it is in rhythm mode.

#### 3. Demo

- 15 demo songs.
- Try to press "Demo", will automatically play demo songs, and initial number is "001". press the button "Demo" again, you could cycle all the demo songs.
- The user could play piano with demo songs.

#### 4. Tutorial

- Press the "Tutorial" to enter into the function.

#### 5. Record/Play

- Press "REC",when it indicate "REC" at LED display ,you can record now.
- Press "PLAY" button, LED display "REP".
- You can press the button "PLAY" to show what you had record just now, and will continue for only one time.
- When it is in "PLAY" mode, user could prss "▶|◀" button to stop it.
- If you need record again, every settings will be back to initial.

### Accessory one:lists of demo

NO	name	NO	name
000	By Alice	008	Les premiers sourires de Vanessa
001	Croatian Rhapsody	009	Snowdreams
002	A comme amour	010	Bandari
003	Green Sleeves	011	Castle in the Sky
004	Dream Wedding	012	Song of Joy
005	Romance De Amor	013	Edelweiss
006	Dancing Girl	014	Dance of firefle
007	CrystlLake	015	

### Accessory two:lists of tone

NO	name	NO	name
	Piano	022	Harmonica
000	Piano 1	023	Bandoneon
001	Piano 2		Guitar
002	Piano 3	024	Acoustic Guitar (nylon)
003	Honky-Tonk Piano	025	Acoustic Guitar(steel)
004	Rhodes Piano	026	Electric Guitar (jazz)
005	Chorused Piano	027	Electric Guitar (clean)
006	Harpischord	028	Electric Guitar (muted)
007	Clavinet	029	Overdriven Guitar
	Percussion	030	Distortion Guitar
008	Celesta	031	Guitar Harmonics
009	Glockenspiel		Bass
010	Music Box	032	Acoustic Bass
011	Vibraphone	033	Electric Bass(finger)
012	Marimba	034	Electric Bass(pick)
013	Xylophone	035	Fretless Bass
014	Tubular Bells	036	Slap Bass 1
015	Santur	037	Slap Bass 2
	Organ	038	Synth Bass 1
016	Hammond Organ	039	Synth Bass 2
017	Percussive Organ		String Solo
018	Rock Organ	040	Violin
019	Church Organ	041	Viola
020	Reed Organ	042	Cello
021	Accordion	043	Contrabass

NO	name	NO	name
044	Tremolo Strings	078	Whistle
045	Pizzicato Strings	079	Ocarina
046	Orchestral Harp		Synthetic tonic
047	Timpani	080	Lead 1 (square)
	Chorus	081	Lead 2 (sawtooth)
048	String Ensemble 1	082	Lead 3 (calliope lead)
049	String Ensemble 2	083	Lead 4 (chiff lead)
050	SynthStrings 1	084	Lead 5 (charang)
051	SynthStrings 2	085	Lead 6 (voice)
052	Choir Aahs	086	Lead 7 (fifths)
053	Voice Oohs	087	Lead 8 (bass+lead)
054	Synth Voice		Synthetic soft tone
055	Orchestra Hit	088	Pad 1 (new age)
	Brass instrument	089	Pad 2 (warm)
056	Trumpet	090	Pad 3 (polysynth)
057	Trombone	091	Pad 4 (choir)
058	Tuba	092	Pad 5 (bowed)
059	Muted Trumpet	093	Pad 6 (metallic)
060	French Horn	094	Pad 7 (halo)
061	Brass Section	095	Pad 8 (sweep)
062	Synth Brass 1		Synthetic effects
063	Synth Brass 2	096	FX 1 (rain)
	Reed instrument	097	FX 2 (soundtrack)
064	Soprano Sax	098	FX 3 (crystal)
065	Alto Sax	099	FX 4 (atmosphere)
066	Tenor Sax	100	FX 5 (brightness)
067	Baritone Sax	101	FX 6 (goblins)
068	Oboe	102	FX 7 (echoes)
069	English Horn	103	Soft Swing
070	Bassoon		Tribal instrument
071	Clarinet	104	Sitar
	Wind instrument	105	Banjo
072	Piccolo	106	Shamisen
073	Flute	107	Koto
074	Recorder	108	alimba
075	Pan Flute	109	Bagpipe
076	Bottle Blow	110	Fiddle
077	Skakuhachi	111	Shanai

NO	name	NO	name
	Percussion		Sound effects
112	Tinkle Bell	120	Guitar Fret Noise
113	Agogo	121	Breath Noise
114	Steel Drums	122	Seashore
115	Woodblock	123	Bird Tweet
116	Talko Drum	124	Telephone Ring
117	Melodic Tom	125	Helicopter
118	Synth Drum	126	Applause
119	Reverse Cymbal	127	Gun shot

### Accessory three:lists of rhythm

NO	name	NO	name
000	Beguines Wing	026	Char
001	Beguine_2	027	Samba_1
002	Beguine_3	028	Samba_2
003	Pop hit	029	Ubminimal
004	Pop	030	8Bit_1
005	Pop Malay	031	8Bit_2
006	Bossa nova	032	16Bit_1
007	Disco_1	033	16bit_2
008	Disco_2	034	Ballad_16T
009	Blue grass disco	035	Country_16T
010	Waltz_1	036	Tango_1
011	Waltz_2	037	Tango_2
012	True ballad waltz	038	Polka_1
013	Bossa Waltz	039	Polka_2
014	Easy Waltz	040	Pop Swing
015	Shuffle Waltz	041	Easy Swing
016	Reggae Waltz	042	Soft Swing
017	Rumba Waltz	043	Rock_1
018	March_1	044	Rock_2
019	March_2	045	Rock_3
020	Rumba_1	046	Airy Rock
021	Rumba_2	047	Heart Rock
022	Slow_1	048	Rock & Roll
023	Slow_2	049	Urban Rock
024	Disco cha cha	050	Ballad
025	Guala cha	051	Jazz Ballad

NO	name	NO	name
052	C.Ballad	090	Square Beat
053	J.Ballad	091	Euro Beat
054	60s Slow Ballad	092	Alpha Dance
055	Piano Ballad	093	Beta Dance
056	50s Ballad	094	Dream Dance
057	Snake Base	095	Dance_1
058	Happy Blues	096	Dance_2
059	Old Blues	097	Dance_3
060	Blue Gras	098	RAP
061	Boodie_1	099	The Country
062	Boodie_2	100	Country Shuffle
063	Boodie_3	101	Electric Keys
064	Shuffle_1	102	Dark Keys
065	Shuffle_2	103	Easy Walk
066	Dream Shuffle	104	Destiny
067	Country Shuffle	105	Comedy
068	Quick Shuffle	106	Drive
069	Reggae Shuffle	107	Liquid Nova
070	R&B	108	Indonesian folk
071	Reggae_1	109	Absolute Music
072	Reggae_2	110	Jamaica
073	Reggae_3	111	Synthesis
074	Salsa_1	112	Feel
075	Salsa_2	113	Accelerate
076	Salsa_3	114	Beach Night
077	Tecno_1	115	Irish
078	Tecno_2	116	Tarantella
079	Funky_1	117	Big band
080	Funky_2	118	Dan
081	Dixie_1	119	Fusion
082	Dixie_2	120	Horse
083	Foxtrot_1	121	Canon
084	Foxtrot_2	122	Latin
085	R.roll_1	123	Mambo
086	R.roll_2	124	New age
087	Fast Beat	125	Slow rc
088	Quick Beat	126	Soul
089	Smooth Beat	127	Twist

### VI Maintenance of hand-roll piano

1. The hand-roll piano can be clean with soft and clean towel.
2. It should be rolled well after use.
3. Do not put the piano in hot and humid place.

### VII Instruction for the use of hand-roll piano

- When using the piano, it should be put in flat place, and do not move it during playing or the normal function may be effected and damaged.
- The piano cannot be rolled too tight when putting it away, in case the normal function of the key is damaged and the product life is shortened.
- Do not pull or twist the keyboard of the piano.
- Do not put the piano in the hot and humid place.
- Cannot split any part of the piano.
- Cannot put the piano in the place with strong wave, in case some function is damaged.

### VIII Troble shooting

- If the sound is abnormal or the piano key is invalid, please press ⌂ to turn off, then press ⌂ again to restore the original setting.