


Sincerely thank you for buying our company's roll up piano  
The company has been specialized in developing and producing a series of products such as hand-rolled pianos and hand-rolled drums for 15 years. This product is a lightweight product that is very easy to carry. In order to give full play to the best use effect of the product, please use it strictly in accordance with the instructions and precautions. Hope you can have a pleasant use process. Thanks for your cooperation!

#### I. Product function introduction:

- 61/88 standard keys (includes black key)
- LED digital display screen
- Tone: 128 tones
- RHY: 128 rhythms
- Demo: 15 demos
- Demo function
- Metronome function
- Record/Play function
- Full fingered function
- Teaching mode
- Vibrato/Sustain/Trans function
- USB-MIDI OUT
- Sustain pedal
- Blue-tooth MIDI/Blue-tooth audio function (Optional)
- Power supply: 1. built-in battery 3.7V/1100mAh supply 2. USB 5V/1A supply

#### II. Function button description:

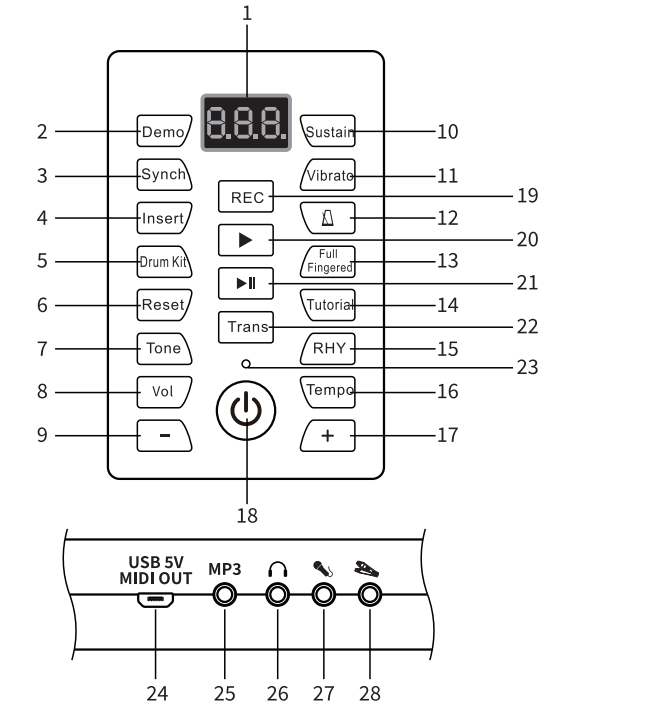

1	388	LED digital display screen	15	RHY	Rhythm button
2	Demo	Demo button	16	Tempo	Tempo button
3	Synch	Synchronize button	17	+	Increase button
4	Insert	Insert button	18	⊗	ON/OFF
5	Drum kit	Drum kit button	19	REC	Record button
6	Reset	Reset button	20	▶	Play button
7	Tone	Tone button	21	▶	Start/Stop button
8	Vol	Volume button	22	Trans	Trans button
9	-	Decrease button	23	○	LED indicator
10	Sustain	Sustain button	24	USB 5V	USB 5V interface
11	Vibrato	Vibrato button	25	MP3	MP3 interface
12	Full fingered	Full fingered button	26	Earphone	Earphone interface
13	Tutorial	Teaching button	27	MIC	MIC interface
14			28	Pedal	Pedal interface

#### III. Product function description:

##### 1. Tone

- 128 tones.
- The tone is directly selected when it is turned on, the default value is 000, press "+" or "-" to select the tone.
- In other function selection mode, press the tone button on the panel to return to the tone selection mode

##### 2. Volume

- Press the "Volume" button, repress "+" or "-" to increase or decrease the sound, the digital tube displays the corresponding volume level.
- The default is 12 level when turn on, and the biggest is 15 level.

##### 3. RHY

- 128 rhythms
- Press "Start/Stop" button or "RHY" button, to enter RHY playing mode, repress "Start/Stop" button stop playing.
- Press "+" or "-" to select RHY.
- Press "Synchronize" button, repress any keys to play RHY.
- Press "Insert" button, can insert a new rhythm on the basis of the original rhythm.

##### 4. Demo

- 15 demos
- Press "Demo" button, the system plays all demo songs, press "Start/Stop" button stop playing.
- Press "+" or "-" button to select the demo.

##### 5. Full fingered

- When playing the rhythm, press "Full fingered" button to enter the finger and full fingered chord mode.
- Chord function: Bass zone, 61 keys (from C-F# interval total 19 keys), 88 keys (From A2-F# interval total 34 keys), play chords that match the rhythm, and the chord's pitch changes with the pitch of the keys.
- Under chord mode, press "Full fingered" button to close chord.

##### 6. Record function

- Press "Record" button to enter record mode, Digital tube displays REC.
- The recording function is to use multi-channel real-time recording to record notes.
- After entering the record mode, user can play any keys, the system will automatically record the notes played by the user. When the record block planned by the system is full, the digital tube will display FULL to indicate that the record is full.
- Press "Play" button to play what you record, but only when a note is recorded can this playback function be considered valid. After playback is over, it will automatically return to the original state.
- During the playback process, you can choose to play back the tone, and then record again. After the system is reset, the recorded notes will be automatically refreshed.

##### 7. Trans function

- Total will be 13 levels: -6, -5, -4, -3, -2, -1, 0, 1, 2, 3, 4, 5, 6.
- In playing mode, press "Trans" button to enter trans function, select by "+" or "-".

##### 8. Tempo function

- In performance mode, press "Tempo" button to enter the playback adjustment function, to control the playback speed by "+" or "-".

##### 9. USB MIDI-IN-OUT function

- Connect to a computer or tablet via USB for multimedia interaction

##### 10. Metronome function

- Metronome auxiliary function, Press "Metronome" button to cycle through the selection of beats, there are four variations of the metronome, will be 1/4 beat-2/4 beat-3/4 beat-4/4 beat

##### 11. Keyboard drum function

- Press "Drum kit" button to change the drum kit tone directly.

##### 12. Sustain/Vibrato function

- Press "Sustain" "Vibrato" button to open or close sustain or vibrato function.

##### 13. Pedal function

- Step on the sustain pedal has sustain function.

##### 14. Sleeping function

- During use, if there is no action for one minute, the digital tube light and indicator light will be off, the system will automatically enter the sleep state, press any key to wake it up.

##### 15. LED indicator

- The red LED light is the power working indicator, red/green double LED is the charging indicator, when the built-in lithium battery is not fully charged, plug in the USB 5V power supply to charge it, red LED indicator is on, when the battery is fully charged, turns to green light.

##### 16. Reset function

- Press the reset button to restore the product to the product preset state.

##### 17. Blue-tooth MIDI function

- Through Bluetooth, you can wirelessly connect to piano learning apps on Apple mobile phones or iPads, such as GarageBand, Singing Bar and Perfect Piano and other professional apps. Specific connection (take GarageBand as an example): Download GarageBand software on your iPhone or tablet, Open the software, select the "Settings" icon on the top right to enter the column, select "Advanced", select the Bluetooth MIDI device, select MIDI-Piano in the Bluetooth MIDI device, and click connect and you can use it normally (if it fails to connect, please Restart the electric organ)
- (Only applicable to the version with Bluetooth MIDI)

##### 18. Blue-tooth audio function

- After booting, the Bluetooth function is automatically turned on and there is a prompt tone. Bluetooth is turned on and waiting for the connected mobile phone to play accompaniment or music. The mobile phone searches for Music-Piano to connect. After the connection is successful, there will be a prompt tone. Volume increase or decrease or music selection needs to be performed on the mobile phone.
- (Only applicable to the version with Bluetooth audio)

##### Accessory one: lists of demo

NO	name	NO	name
000	By Alice	008	Les premiers sourires de Vanessa
001	Croatian Rhapsody	009	Snowdreams
002	A comme amour	010	Bandari
003	Green Sleeves	011	Castle in the Sky
004	Dream Wedding	012	Song of Joy
005	Romance De Amor	013	Edelweiss
006	Dancing Girl	014	Dance of firelie
007	CrystLake	015	

##### Accessory two: lists of tone

NO	name	NO	name
	Piano	022	Harmonica
000	Piano 1	023	Bandoneon
001	Piano 2		Guitar
002	Piano 3	024	Acoustic Guitar (nylon)
003	Honky-Tonk Piano	025	Acoustic Guitar (steel)
004	Rhodes Piano	026	Electric Guitar (jazz)
005	Chorused Piano	027	Electric Guitar (clean)
006	Harpsichord	028	Electric Guitar (muted)
007	Clavinet	029	Overdriven Guitar
	Percussion	030	Distortion Guitar
008	Celesta	031	Guitar Harmonics
009	Glockenspiel		Bass
010	Music Box	032	Acoustic Bass
011	Vibraphone	033	Electric Bass (finger)
012	Marimba	034	Electric Bass (pick)
013	Xylophone	035	Fretless Bass
014	Tubular Bells	036	Slap Bass 1
015	Santur	037	Slap Bass 2
	Organ	038	Synth Bass 1
016	Hammond Organ	039	Synth Bass 2
017	Percussive Organ		String Solo
018	Rock Organ	040	Violin
019	Church Organ	041	Viola
020	Reed Organ	042	Cello
021	Accordion	043	Contrabass

NO	name	NO	name
044	Tremolo Strings	078	Whistle
045	Pizzicato Strings	079	Ocarina
046	Orchestral Harp		Synthetic tonic
047	Timpani	080	Lead 1 (square)
	Chorus	081	Lead 2 (sawtooth)
048	String Ensemble 1	082	Lead 3 (calliope lead)
049	String Ensemble 2	083	Lead 4 (chiff lead)
050	SynthStrings 1	084	Lead 5 (charang)
051	SynthStrings 2	085	Lead 6 (voice)
052	Choir Aahs	086	Lead 7 (fifths)
053	Voice Oohs	087	Lead 8 (bass+lead)
054	Synth Voice		Synthetic soft tone
055	Orchestra Hit	088	Pad 1 (new age)
	Brass instrument	089	Pad 2 (warm)
056	Trumpet	090	Pad 3 (polysynth)
057	Trombone	091	Pad 4 (choir)
058	Tuba	092	Pad 5 (bowed)
059	Muted Trumpet	093	Pad 6 (metallic)
060	French Horn	094	Pad 7 (halo)
061	Brass Section	095	Pad 8 (sweep)
062	Synth Brass 1		Synthetic effects
063	Synth Brass 2	096	FX 1 (rain)
	Reed instrument	097	FX 2 (soundtrack)
064	Soprano Sax	098	FX 3 (crystal)
065	Alto Sax	099	FX 4 (atmosphere)
066	Tenor Sax	100	FX 5 (brightness)
067	Baritone Sax	101	FX 6 (goblins)
068	Oboe	102	FX 7 (echoes)
069	English Horn	103	FX 8 (sci-fi)
070	Bassoon		Tribal instrument
071	Clarinert	104	Sitar
	Wind instrument	105	Banjo
072	Piccolo	106	Shamisen
073	Flute	107	Koto
074	Recorder	108	alimba
075	Pan Flute	109	Bagpipe
076	Bottle Blow	110	Fiddle
077	Skakuhachi	111	Shanai

NO	name	NO	name
	Percussion		Sound effects
112	Tinkle Bell	120	Guitar Fret Noise
113		121	Breath Noise
114	Steel Drums	122	Seashore
115	Woodblock	123	Bird Tweet
116	Taiko Drum	124	Telephone Ring
117	Melodic Tom	125	Helicopter
118	Synth Drum	126	Applause
119	Reverse Cymbal	127	Gun shot

##### Accessory three: lists of rhythm

NO	name	NO	name
000	Beguines Wing	026	Char
001	Beguine_2	027	Samba_1
002	Beguine_3	028	Samba_2
003	Pop hit	029	Ubminimal
004	Pop	030	8Bit_1
005	Pop Malay	031	8Bit_2
006	Bossa nova	032	16Bit_1
007	Disco_1	033	16bit_2
008	Disco_2	034	Ballad_16T
009	Blue grass disco	035	Country_16T
010	Waltz_1	036	Tango_1
011	Waltz_2	037	Tango_2
012	True ballad waltz	038	Polka_1
013	Bossa Waltz	039	Polka_2
014	Easy Waltz	040	Pop Swing
015	Shuffle Waltz	041	Easy Swing
016	Reggae Waltz	042	Soft Swing
017	Rumba Waltz	043	Rock_1
018	March_1	044	Rock_2
019	March_2	045	Rock_3
020	Rumba_1	046	Airy Rock
021	Rumba_2	047	Heart Rock
022	Slow_1	048	Rock & Roll
023	Slow_2	049	Urban Rock
024	Disco cha cha	050	Ballad
025	Guala cha	051	Jazz Ballad

NO	name	NO	name
052	C.Ballad	090	Square Beat
053	J.Ballad	091	Euro Beat
054	60s Slow Ballad	092	Alpha Dance
055	Piano Ballad	093	Beta Dance
056	50s Ballad	094	Dream Dance
057	Snake Base	095	Dance_1
058	Happy Blues	096	Dance_2
059	Old Blues	097	Dance_3
060	Blue Gras	098	RAP
061	Boodie_1	099	The Country
062	Boodie_2	100	Country Shuffle
063	Boodie_3	101	Electric Keys
064	Shuffle_1	102	Dark Keys
065	Shuffle_2	103	Easy Walk
066	Dream Shuffle	104	Destiny
067	Country Shuffle	105	Comedy
068	Quick Shuffle	106	Drive
069	Reggae Shuffle	107	Liquid Nova
070	R&B	108	Indonesian folk
071	Reggae_1	109	Absolute Music
072	Reggae_2	110	Jamaica
073	Reggae_3	111	Synthesis
074	Waltz_1	112	Feel
075	Salsa_1	113	Accelerate
076	Salsa_2	114	Beach Night
077	Tecno_1	115	Irish
078	Tecno_2	116	Tarantella
079	Funky_1	117	Big band
080	Funky_2	118	Dan
081	Dixie_1	119	Fusion
082	Dixie_2	120	Horse
083	Foxtrot_1	121	Canon
084	Foxtrot_2	122	Latin
085	R.roll_1	123	Mambo
086	R.roll_2	124	New age
087	Fast Beat	125	Slow rc
088	Quick Beat	126	Soul
089	Smooth Beat	127	Twist

#### IV. Protection of roll up piano:

1. The roll up piano can be cleaned with a clean soft towel.
2. The roll up piano should be properly rolled up and stored after use.
3. Do not put it in a hot or humid place.

#### V. Precautions for using roll up piano:

- Place it flat when using, do not use on uneven places, do not move around during use, otherwise it will affect or impair the function.
- Do not roll it too tightly after using, so as not to damage the normal function of the keys or shorten the service life.
- Do not pull or twist the keys.
- Do not put it in a hot or humid place.
- Do not put it in a hot or humid place.
- Do not put it in a place with strong electric waves, so as not to affect the function.

#### VI. Simple troubleshooting:

- If the sound is abnormal or the keys fail, please turn off the power and restart the machine to restore the original settings.