 




ELECTRIC SPIN SCRUBBER

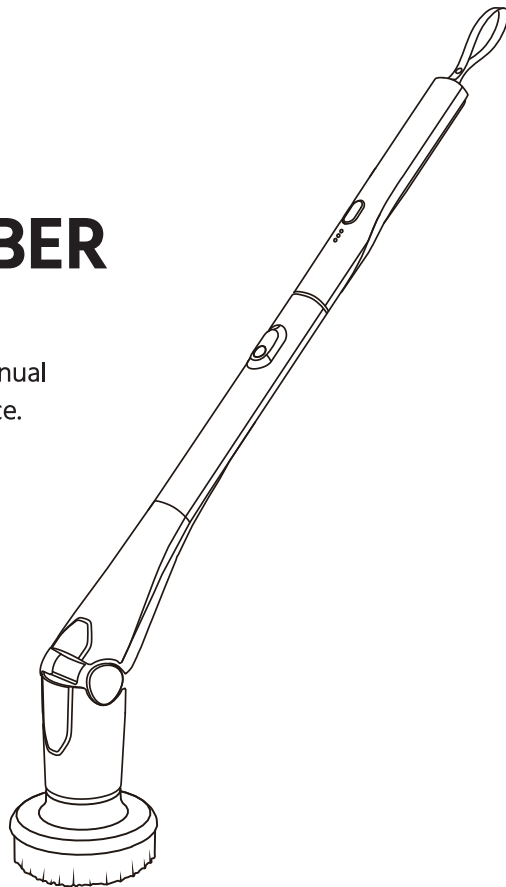


Before you use the appliance, please read this user manual carefully and store it in a safe place for future reference.



  Product Description

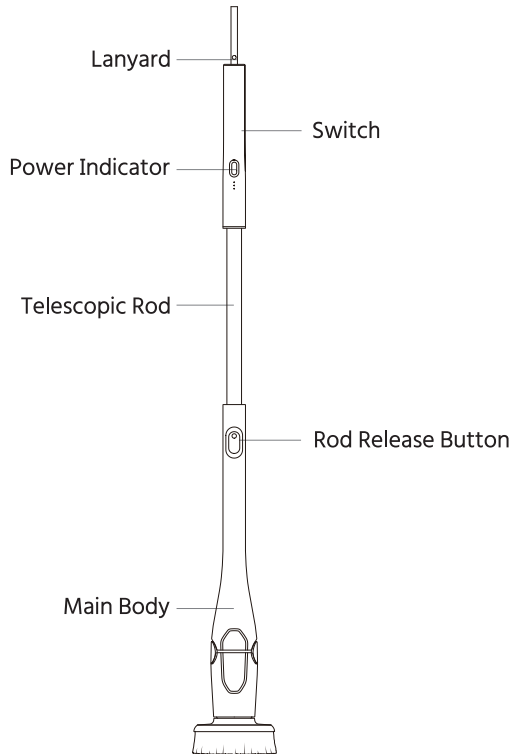

USB Charging Cable

 

Corner Round Brush
Suitable for curved surface, 360-degree
no dead angle cleaning



Hard Flat Brush
Large contact area, efficient and quick for
cleaning stains



Pointed Brush
Clean up the dust in the corner gap



Small Flat Brush
Suitable for cleaning stoves in smaller
areas and soap in the bathroom




User Manual

Basic Parameters	
Torque	35 kgf.cm
Voltage	7.4V
Power	84W
Rotation	215 RPM/255 RPM
Battery	60 mins
Weight	930g
Length	29.5 in/40.2 in (75 cm/102 cm)
Adjustable Heads	0-80°
Noise	<70 dB

Brush Head Assembly And Replacement


When the brush head is installed, align the triangular shaft and the concave position of the brush head then rotate positively; rotate the brush head reversely when disassembling.

 Align the triangular shaft and insert the brush head and and rotate 60° positively for assembly in place and rotate 60° reversely to take out.

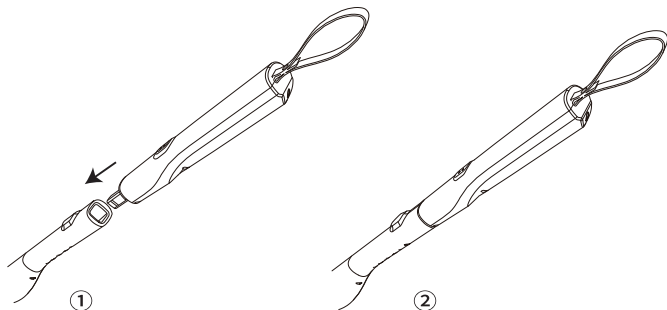

Product Assembly

 Before the first use, please insert all the protruding parts of the handle into the metal telescopic rod. After insertion, it can not be disassembled.

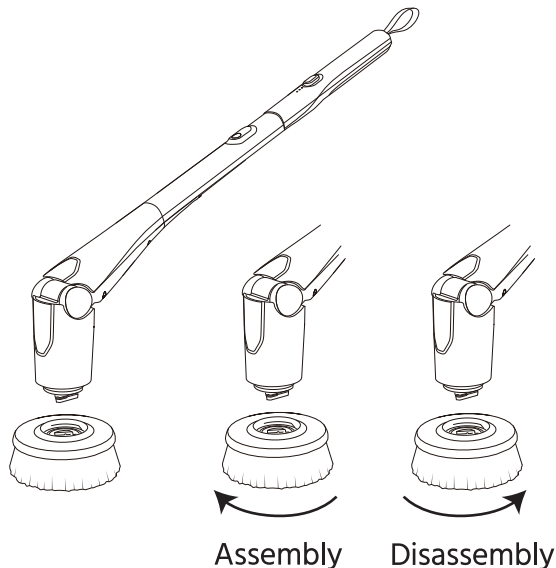


Usage Instructions

Turn ON/OFF


Press the power button, the machine is turned on, the white indicator lights up, the speed is 215 RPM; Press the power button again and the speed changes to 255 RPM, press the power button again, shut down; If the battery is too low, it will automatically shut down.

 Note: Do not overuse. It will turn off automatically due to circuit protection when it is blocked, please turn it on again for reuse.

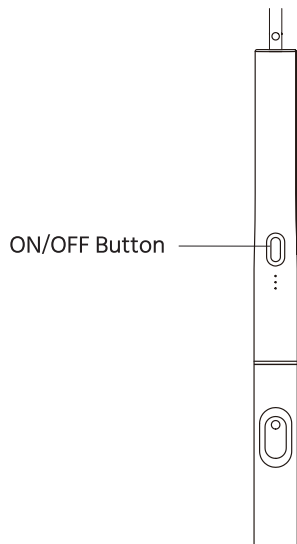


Waterproof Instruction

 The part under telescopic button can be used in water for a short time. The part above telescopic button is splash-proof and can not be submerged into water. Please mind the water depth when using.

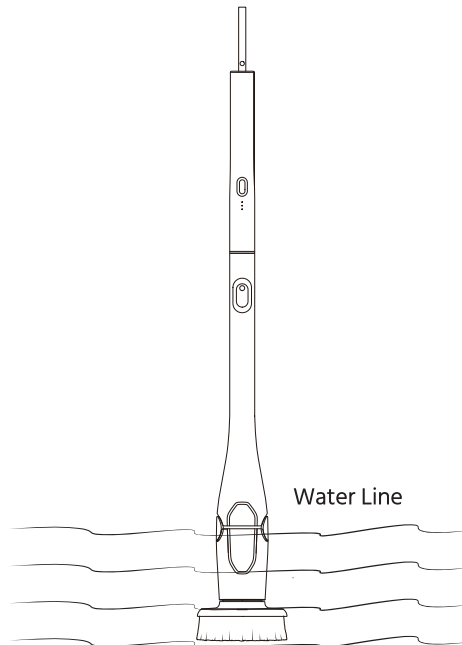


Rotation Shaft

 Rotation shaft can be adjusted from 0~80°, please adjust it according to your use.

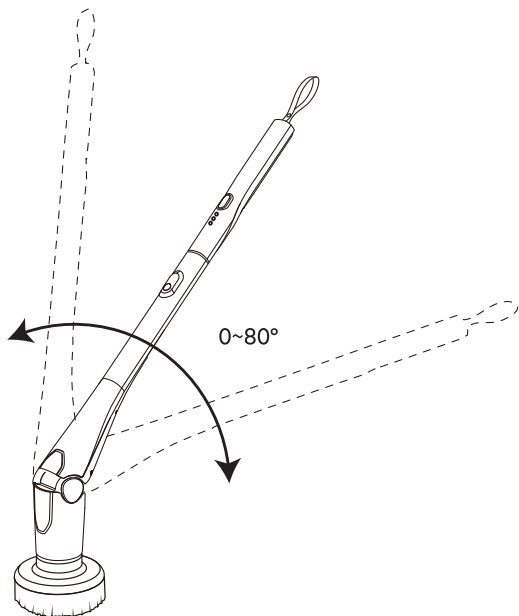

Extension Rod Operation

 
Press the release button on the handle and then pull the handle for extension; Push the handle for contraction.

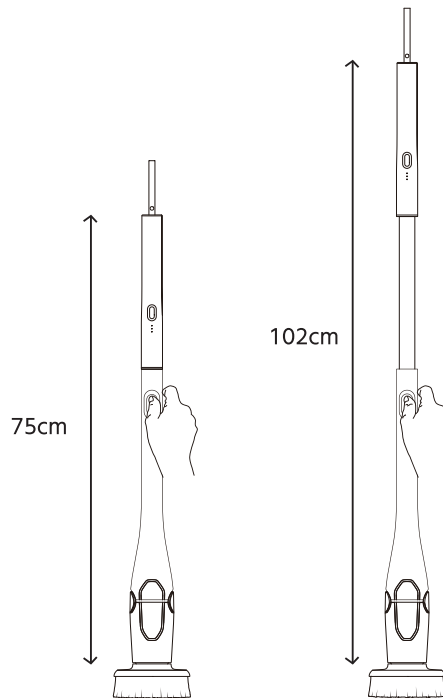

Safe Recharging

The charging port is on the back of the handle. When charging, the white indicator light flashes. When the battery is fully charged, the three white indicators are all on. Please unplug the charger.

 Plug the USB cable into the port on the back of the handle for charging (data cable and USB port can be used for charging).

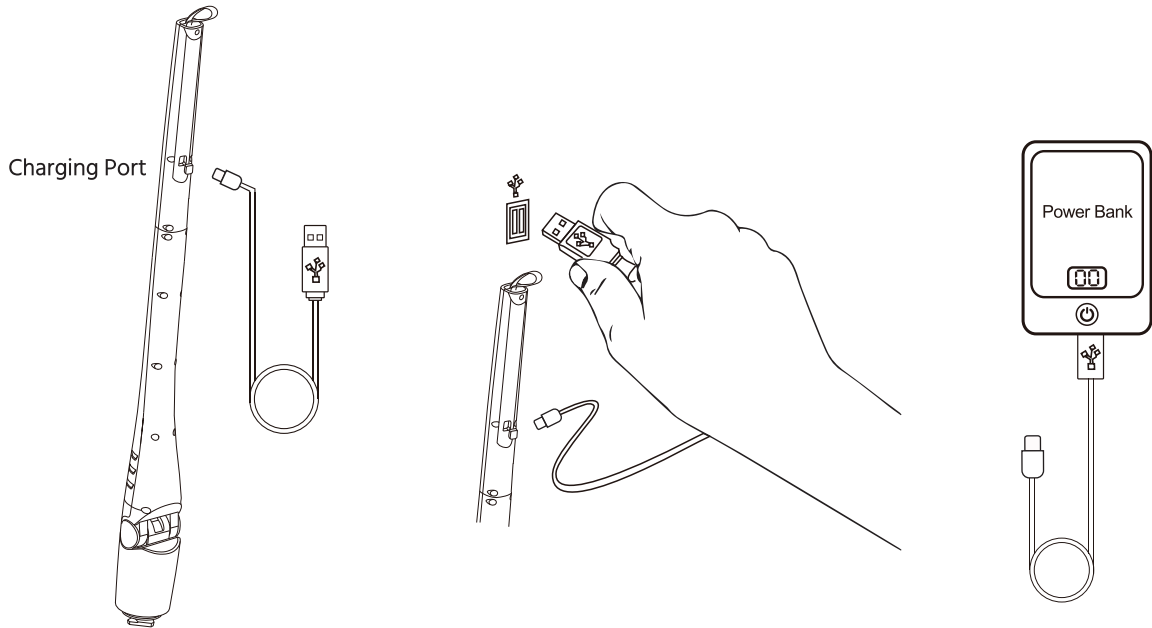

Attentions

1. The product can be used for household cleaning work, don't use it in industry or harsh environments.
2. For this product, only the brush head part is waterproof; the other parts are only splash-proof and can not be submerged into water.
3. Please turn off the power when it gets stuck.
4. Please turn it off when you change the brush head.
5. The product is not suitable for children and disabled people to avoid dangers.
6. Don't aim at any people or animals to avoid injury.
7. Turn it off after cleaning work.
8. Don't use any other batteries.
9. Don't disassemble it to repair by yourself.
10. If don't use it for a long time, please fully charge it and place it in a cool dry place; and charge it every 6 months to avoid over discharging.
11. Please use the product according this manual. If any damages and hurts caused by misuse, the user takes all responsibilities.

Troubleshooting

Unable to power on	Low power, please charge it before using.
Unable to charge	Charging indicator lights are off. Please check if the USB cable is well inserted.
Brush assembly	If the brush head doesn't work or takes off during using, please check if the brush head is well inserted.
Doesn't work after power on	Please check if it's in charging status. Unplug the USB cable and restart it.
Stop working	If it stops working suddenly, please restart it or check if the battery capacity is sufficient.

Hazardous Material Contents and Names

Parts name	Hazardous Material					
	Lead (Pb)	Mercury (Hg)	Cadmium (Cd)	Hexavalentchromium (Cr(VI))	Polybrominated biphenyl(PBB)	Polybrominated biphenyl enters (PBDE)
Circuit board	X	o	X	o	o	o
Shell	o	o	o	o	o	o
Battery	X	o	o	o	o	o
Brushes	o	o	o	o	o	o

This table was compiled in accordance with the provisions of SJ/T11364.

○ : indicates the contents of the hazardous material in one homogeneous material of the part were all below the limited standard of GB/T26572.

× : indicates the contents of the hazardous material in one homogeneous material of the part were above the limited standard of GB/T26572.

(All the parts which were marked with "×" were all reached RoHS standard, or the hazardous material cannot be replaced because of global technical limitations.) (This table indicates these hazardous materials exist in the product, but not all above parts in the packed product.)

The environmental using period of the rechargeable battery is 5 years.