 


ACCESSORIES

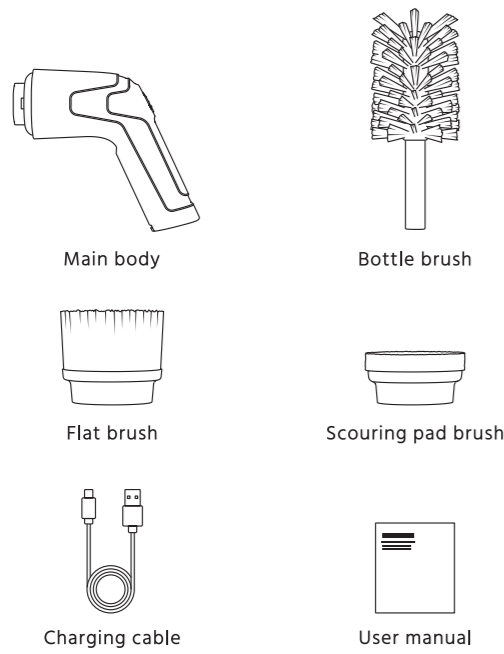

Main body

Bottle brush

Flat brush

 
Scouring pad brush

Charging cable


User manual

ASSEMBLE

①When install the flat brush and scouring pad, please align the interface and insert the brush head into the machine head forcefully.

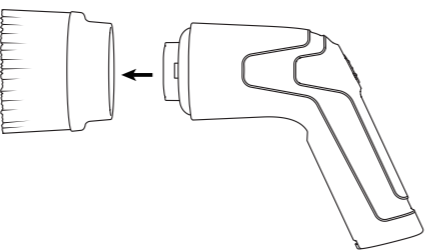

 ②When install the bottle brush, please align the interface, rotate and fix the bottle brush.

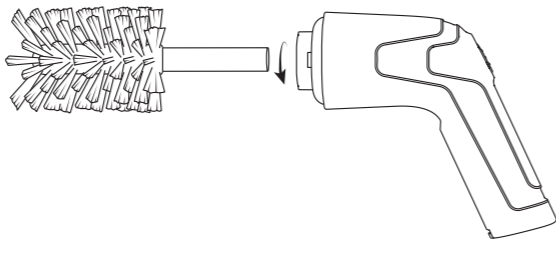

HOW TO USE

Preparatory Work before Use

①Please check whether the product is fully-charged to ensure its normal operation;
②Choose the appropriate brush head according to cleaning requirements, and make sure that it has been installed firmly and reliably.

Application of Product

Select a suitable cleaning agent, Press the power switch to work.

Cleaning and Maintenance

①After using the product, please make a general cleaning, especially of the brush head, with mild cleaning agent and soft sponge to enhance the cleaning efficiency and lengthen the service life;
②After cleaning the product, air-dry it for future use.

Motor Shaft Lock Protection

 
The machine is provided with the motor shaft lock protection function. If the user uses the motor on over-load basis, the machine will automatically shut down and the red light will flash.

Warning! Please wear gloves and goggles if using any strong detergent.

①If you are not sure whether this tool is suitable for cleaning a surface, please try it first in any inconspicuous position on the surface;
②Please turn off the tool to avoid splashing before it leaves the cleaned surface;
③This tool is very powerful and needs no extra force is required for driving. When cleaning any large surface, it is better to operate annularly. Do not keep the tool working at a certain point for too long.

CHARGING

①Please use the charging cable which is in the package to charge the product.
②The charging port is located at the bottom of the handle. Please pay attention to whether the power indicator is on when charging.

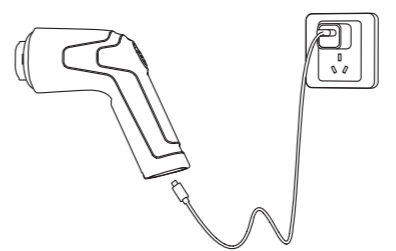

LED INDICATOR INSTRUCTION

Status	Indicator	Time
Charging	Red light flashes	Charging time: Around 2~3hours
Fully charged	Green light flashes	Continuous working time: \approx 45min
Working at gear 1	Green light up	* The actual working time of the product depends on the usage scenario
Working at gear 2	Blue light up	
Low battery	Red light flashes	-

USAGE SCENARIOS

Brush head	Usage scenarios
Flat brush	Suitable for sink, pot, windowsill, kitchen range, wall and other flat surface.
Bottle brush	Suitable for milk bottle, beer glass, wine glass, milk cup, condiment jar and other utensils
Scouring pad brush	Suitable for mirror, glass, ceramic tile, dishes, bathtub and other smooth objects

CLEANING TIPS

For better cleaning effect, it is recommended to use the brush with detergent (such as Mold & Mildew Remover, Water Strain Remover, Oven Cleaner, Bleach Cleaner, All Purpose Cleaner). You could use different detergents for different needs. For removing stubborn stains, please soak stains into water and detergent for a while, and then use the scrubber to clean, it will shorten your cleaning time.

SUGGESTION OF STORAGE

Store the scrubber in a ventilated and shade place. Avoid placing it in a wet place or being exposed to strong sunlight.

TROUBLESHOOTING

①Why doesn't the white indicator flash when charging?
Check if the charging socket is abnormal or power outage. If the indicator light is solid white after plugging in the adapter, the product is fully charged, just turn it on to use.

②The charging indicator light doesn't turn to solid white after charging over 3hours
Please check whether the socket and charging connection are loose, plug them tightly before charging. If the product is immersed in water during use, it will damage the internal circuit and cause abnormal charging.

③Why doesn't the brush head spin when the battery is fully charged?
Please check whether the brush head is tightly connected with the extension rod and handle. For connection method, refer to the installation guide. If it has been well connected and the product has not been soaked in water before, but the scrubber does not spin after turning on or it stops spinning without pressing the brush head too hard, please contact us.

④Why does the brush head spin less than 90minutes when the battery is fully charged?
Each user may use different downforce during use. If you keep pressing the brush head too hard, the working time will be less than 90mins. In order to prolong the use time, please do not press the brush head too hard.

PARAMETERS

Model No.	K3
Working time	\approx 45 min
Charging time	2~3 hours
Noise decibel	<70 dB
Power	25W
Speed	\approx 500 rpm
Maximum torque	15 Kgf.cm
Battery capacity	2000 mAh
Battery voltage	3.7V
Charging voltage	5V 1A
Waterproof level	IPX 7

*** NOTICE:**

①The above data are from the laboratory of our company, and the actual usage situation varies according to the working environment.
②Product images and description only for reference purpose, please see the actual product. Due to the need for continuous improvement of the product, we reserve the right to update our products.

DECLARATION OF HAZARDOUS SUBSTANCES

Part name	Hazardous substances					
	Pb	Hg	Cd	Cr(VI)	PBB	PBDE
Outer shell	○	○	○	○	○	○
Internal plastic parts	○	○	○	○	○	○
Metal parts	○	○	○	○	○	○
Battery Cell	○	○	○	○	○	○
Battery	○	○	○	○	○	○
PCB	○	○	○	○	○	○

This form is prepared in accordance with the provisions of SJ / T11364.
○: Indicates that the content of all the homogeneous materials of this part of the hazardous substance is below the limit requirements stipulated in GB / T26572.
×: Indicates that the hazardous substance contained in at least a homogeneous material in the component exceeds the limit requirements specified in GB / T26572 (All parts marked with "×" in the table are in compliance with the EU ROHS directive, or the substitution of hazardous substances cannot be achieved due to global technical level restrictions)


PRECAUTIONS WHILE USING

- This product is only used to clean the home environment, do not use it in commercial or industrial environments.
- Only the brush head part is waterproof, the other parts can not be immersed in water.
- Please turn off the power when stuck.
- Please replace the brush head when power off.
- This product is not suitable for children and people with disabilities to avoid danger.
- Please do not immerse the whole machine in water.
- Please don't aim at the human body or animal to avoid injury.
- After cleaning, please turn off the power of this machine.
- Please do not disassemble and repair by yourself.
- Do not place the charging cable near a heat source.
- If you do not use this product for a long time, please turn off the machine after fully charged, put it in a cool place, charge it at least once every 6 months to avoid over discharge of the battery.
- Please use this product in accordance with the instructions in the manual. Any damage caused by improper use shall be borne by the user.

Multi-function Spin Scrubber

User's Manual

We advise that you carefully read this instruction manual to ensure product efficiency and correct use.

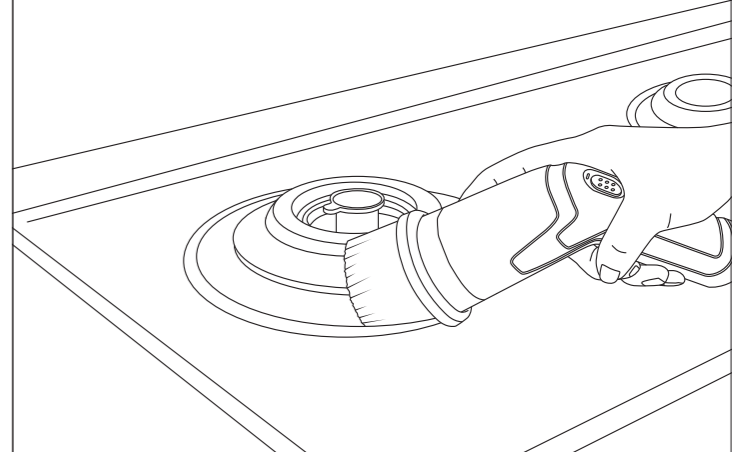

名称	尺寸	材质	工艺
K3英文说明书	95×105mm	105g双铜	风琴折五折页