 


MULTI-FUNCTION SPIN SCRUBBER

USER MANUAL







电动清洁刷使用说明

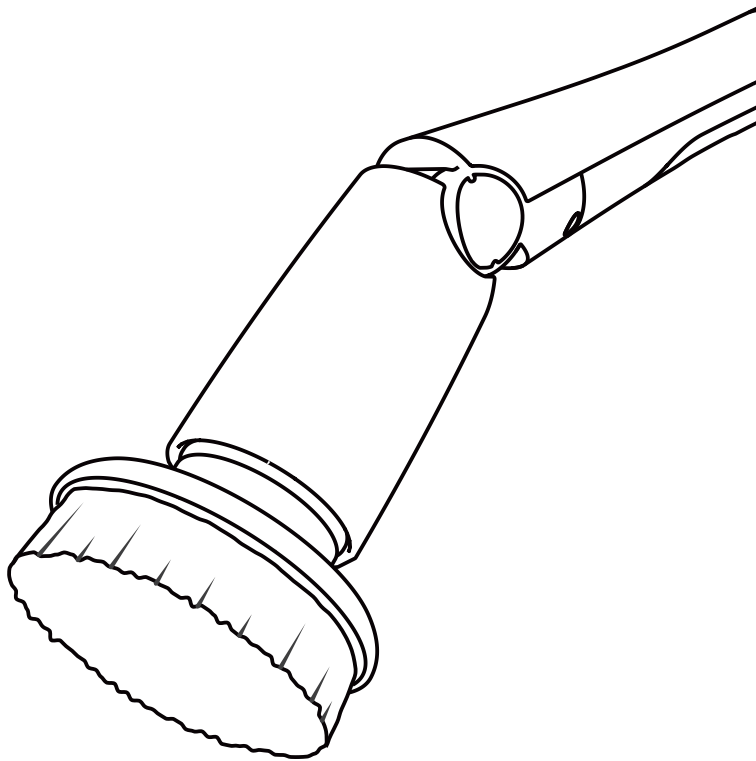

Please read it carefully before using and keep it well
使用前请仔细阅读妥善保管

In the box	4
Assemble	5
How to assemble the brush head	5
How to pull out the brush head	5
Assemble with Extension Rod	6
Assemble without Extension Rod	6
How to use	7
How to use Extension Rod	7
How to adjust the angle of scrubber head	7
How to work	7
Charging your scrubber	8
Cleaning your scrubber	8
Suggestions for Use of Accessories	9
Cleaning Tips	9
Suggestion of Storage	9
Specification	10
Troubleshooting	10
Warning	11
Warranty	11
FCC Statement	11
Note	11
产品说明	12
产品组装	13
刷头如何装配	13
如何拔出刷头	13
如何安装延长杆	14
不要延长杆时如何装配	14
使用说明	15
如何使用延长杆	15
如何调整机头角度	15
如何使用产品	15
清洁机充电	16
清洗清洁机	16
配件使用建议	17
清洁技巧	17
收纳建议	17
产品参数	18
故障排除	18
注意事项	19
售后保修卡	19

      In the box

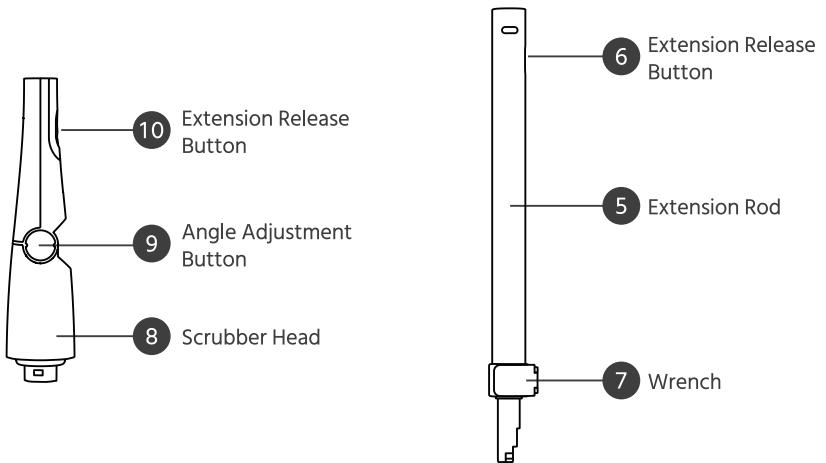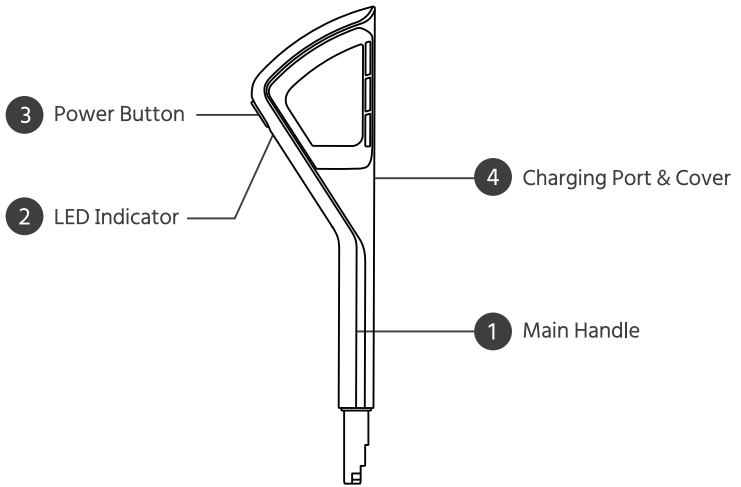


Assemble

* NOTE: Before assembling any component of this product, make sure the unit is turned off.


How to assemble the brush head

 Hold the Scrubber Head with one hand and insert the selected brush head.

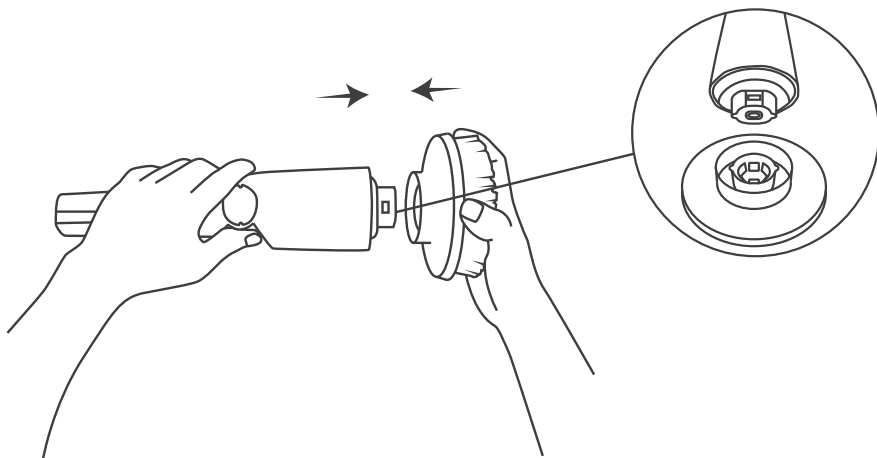


How to pull out the brush head

 Hold the Scrubber Head with one hand and pull out the brush head.

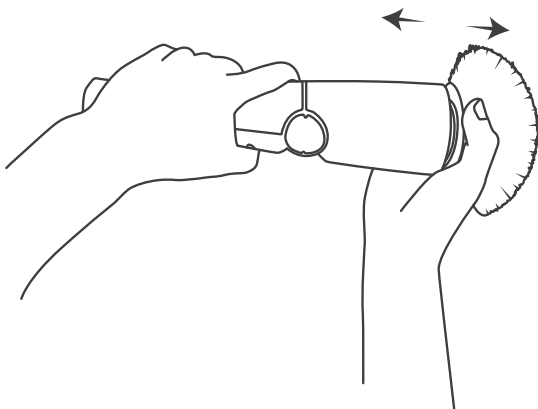


Assemble with Extension Rod

 
1. Connect the Main Handle to the Extension Rod until you hear a "CLICK".

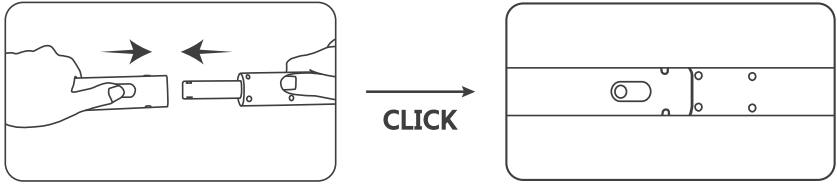

 2. Connect the Scrubbe Head to the Extension Rod until you hear a "CLICK".

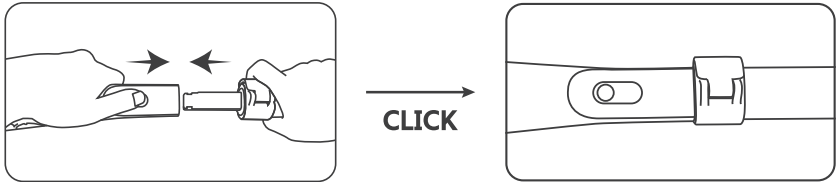


 3. Assembly finished, as shown in the picture.

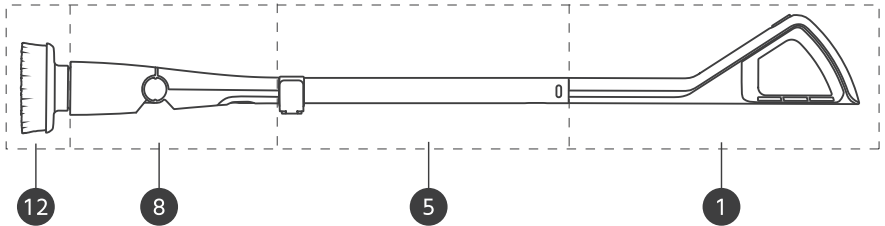

Assemble without Extension Rod



 
1. Connect the Main Handle to the Scrubber Head until you hear a "CLICK".

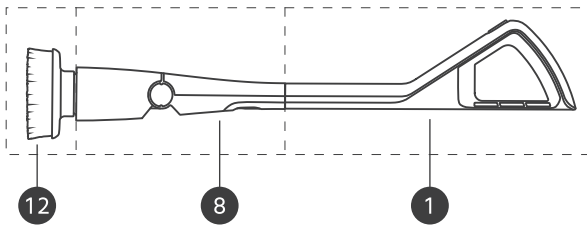

How to use



How to use Extension Rod

   Open the telescopic rod wrench (Fig.1), Pull the telescopic rod out to the desired length (Fig.2), Close the wrench (Fig.3) to fix the current length.

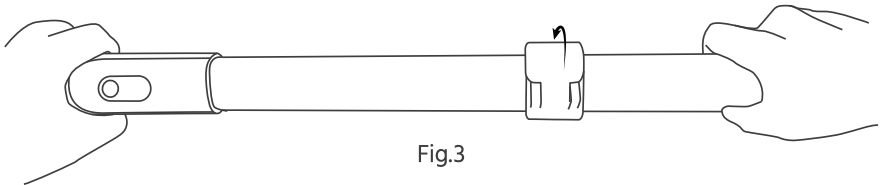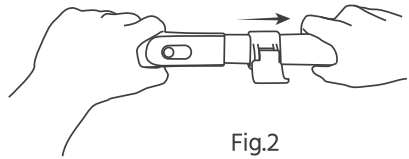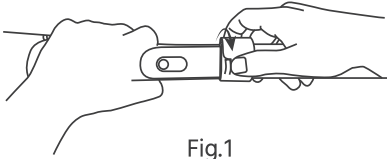

How to adjust the angle of scrubber head

  Press and hold the 2 angle adjustment button to adjust the scrubber head in your desired angle.

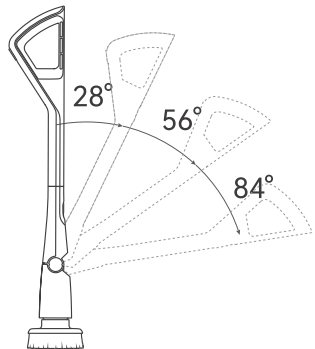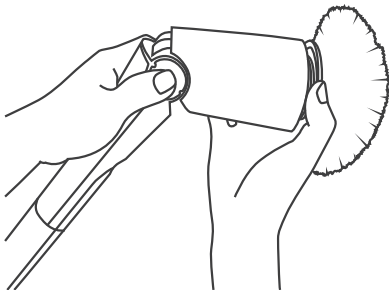

How to work

 
Press the power button 1 time, power on, enter into low speed.
Press the power button 2 times, enter into high speed.
Press the power button 3 times, power off.



Charging your scrubber

Before using the spin scrubber for the first time or if indicator flash in white color, please fully charge the battery.

Open the silicone charging cover, Insert the charging cord to the spin scrubber and USB Charger (Not Included), Plug the USB Charger into electrical outlet.

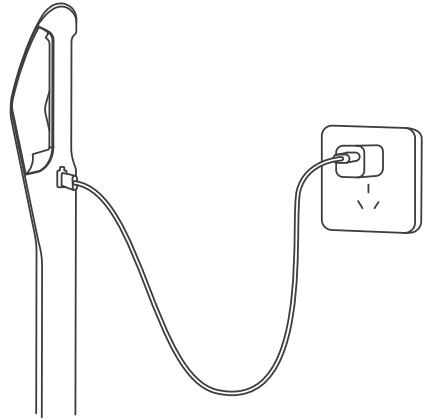

When the spin scrubber is fully charged, the 3 white indicators is solid on. When the spin scrubber is being charged, the white indicator light flash.



 
Cleaning your scrubber

Handle Part

Gently wipe handle part of the scrubber with a wrung soft cloth.

Brush Head

Disassemble the brush head and immerse it into the water to clean. Clean it with neutral detergent if it is difficult to clean.

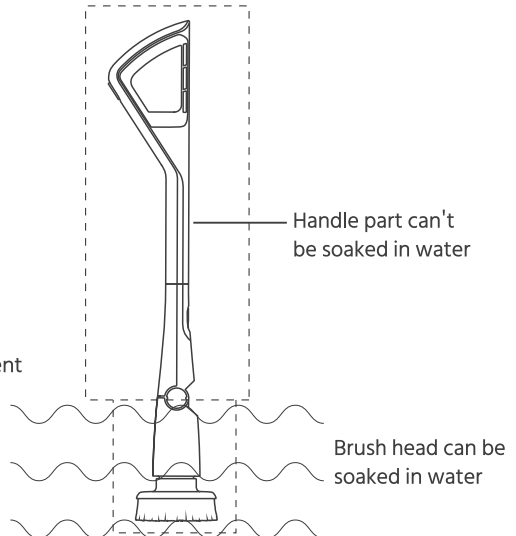


Suggestions for Use of Accessories



Dome Brush

 Round Brush is perfect as a concave cleaning brush for shower, tub, bathtub, sink, baseboard, toilet.



Large Flat Brush

Large Flat Brush is used to clean large flat surface area, like hard floor, tile, wall, door, window, counter, patio furniture, pool, soap scum, grime, stove, carpet, ceramic.



Flat Brush

Flat brush head ideal for cleaning smaller areas such as shower, kitchen, soap scum, grime, grease, stove, grill, counter, door.



Corner Brush

Corner brush is great for cleaning tile grout, edges, corners, cranny and tight places.

Cleaning Tips

For better cleaning effect, it is recommended to use the brush with detergent (such as Mold & Mildew Remover, Water Strain Remover, Oven Cleaner, Bleach Cleaner, All Purpose Cleaner). You could use different detergents for different needs.

For removing stubborn stains, please soak stains into water and detergent for a while, and then use the scrubber to clean, it will shorten your cleaning time.

Suggestion of Storage

Store the scrubber in a ventilated and shade place. Avoid placing it in a wet place or being exposed to strong sunlight.

Specification

Input	DC 5V 2A
Charge Time	2.5 hours
Battery	Lithium ion Battery 7.4V 2000mAh
Running Time	90 mins
Rotating Speed	Low: 220 rpm/min
	High: 260 rpm/min
Noise	<70dB

Troubleshooting

①Why doesn't the white indicator flash when charging?

Check if the charging socket is abnormal or power outage.

If the indicator light is solid white after plugging in the adapter, the product is fully charged, just turn it on to use.

②The charging indicator light doesn't turn to solid white after charging over 3hours

Please check whether the socket and charging connection are loose, plug them tightly before charging.

If the product is immersed in water during use, it will damage the internal circuit and cause abnormal charging.

③Why doesn't the brush head spin when the battery is fully charged ?

Please check whether the brush head is tightly connected with the extension rod and handle. For connection method, refer to the installation guide.

If it has been well connected and the product has not been soaked in water before, but the scrubber does not spin after turning on or it stops spinning without pressing the brush head too hard, please contact us.

④Why does the brush head spin less than 90minutes when the battery is fully charged?

Each user may use different downforce during use. If you keep pressing the brush head too hard, the working time will be less than 90mins. In order to prolong the use time, please do not press the brush head too hard.

Warning

This appliance can be used by children age from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision.

This appliance is not intended for use by persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety. Children should be supervised to ensure that they do not play with the appliance.

Warranty

We stand by our workmanship. If we made a mistake in building your scrubber, we will fix it or replace it.

FCC Statement

Operation is subject to the following conditions:

This device may not cause harmful interference.

This device must accept any interference received, including interference that may cause undesired operation.

 
 
 
Note

This device has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules.

These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

产品说明

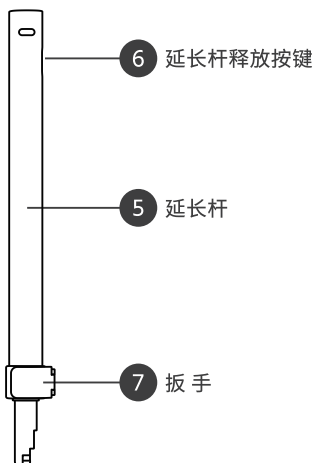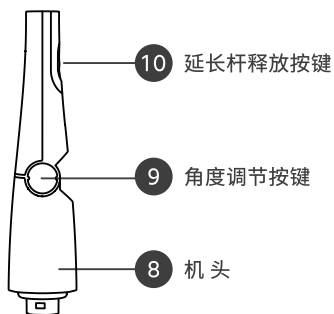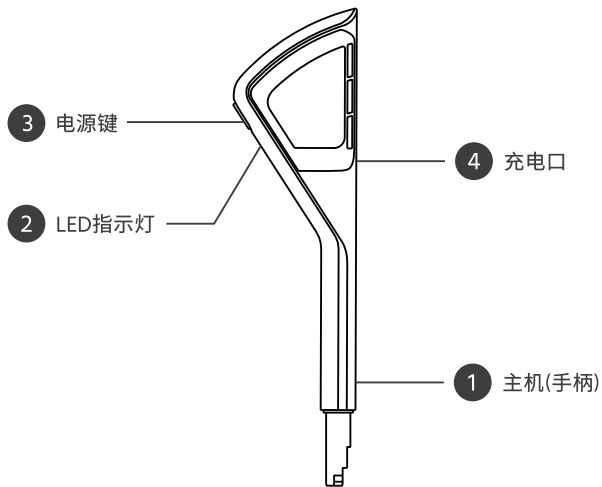


产品组装

* 注意:在组装本产品的任何部件之前, 请确保本机处于关闭状态!


刷头如何装配

 用一只手握住机头, 选定的刷头, 对准位置用力插入。

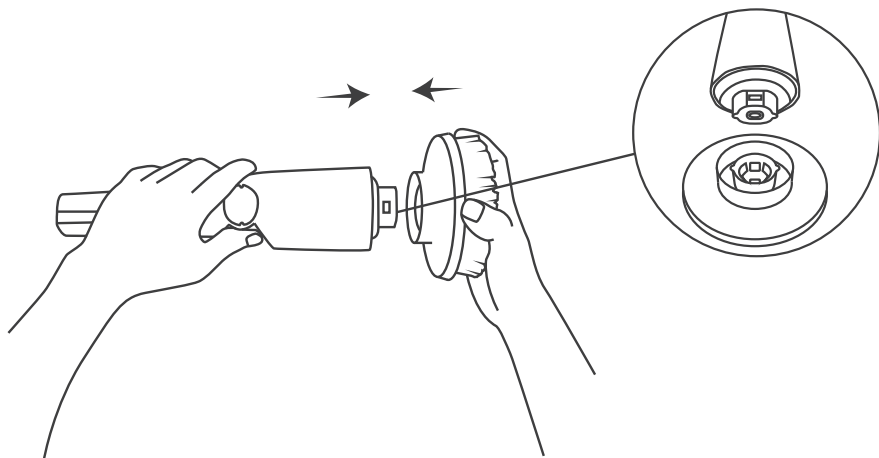


如何拔出刷头

 一只手握住机头, 用力拔出刷头。

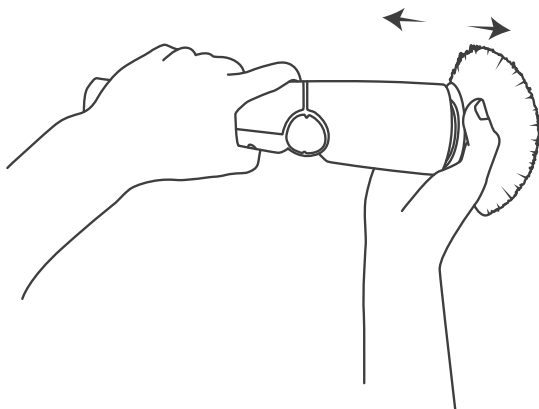


安装延长杆

 
1. 对准位置，将手柄插入延长杆孔位，直到你听到“咔”的一声。

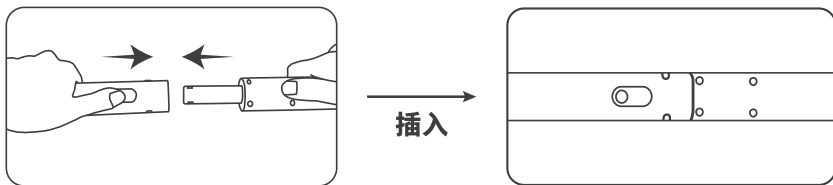

 2. 对准位置，将延长杆插入机头孔位，直到听到“咔”的一声。

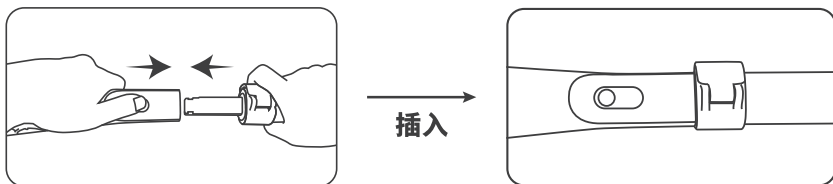


 3. 装配完毕，如图所示。

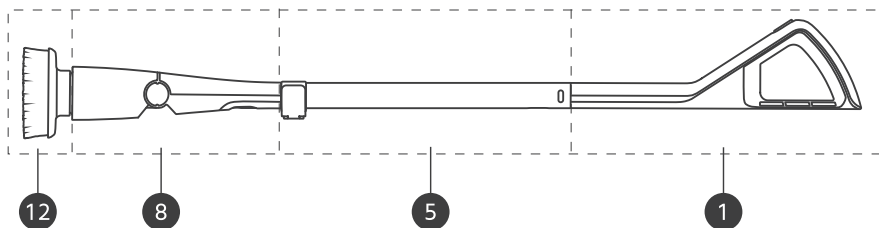

不要延长杆时如何装配



 
1. 连接手柄到机头，直到听到“咔”的一声。

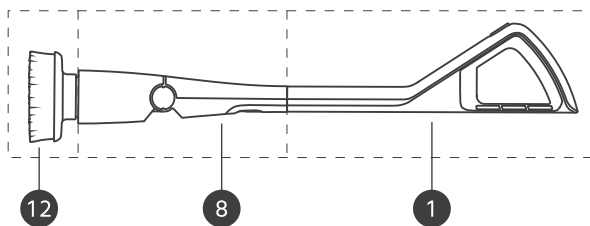

使用说明



如何使用延长杆

   打开延长杆扳手(图1), 将延长杆拉出所需要的长度(图2), 合上扳手(图3)即可固定当前长度。

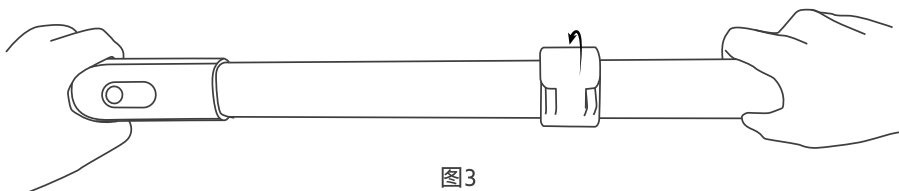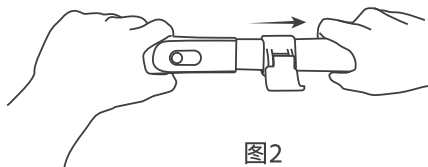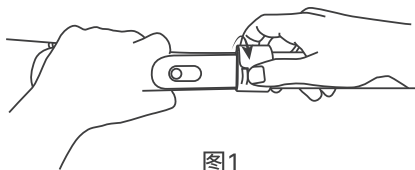

如何调整机头角度

  按住两个角度调节按键, 将机头调整到你想要的角度。

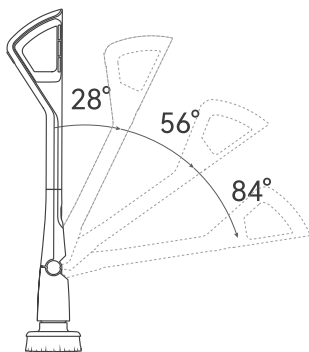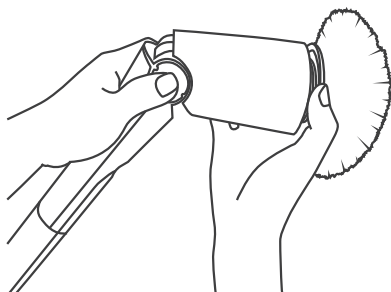

如何使用产品

按下电源键1次, 接通电源, 进入低档位。

 
按2次电源键, 进入高档位; 按3次电源键, 关机。



清洁机充电

第一次使用前或指示灯闪烁，请将电池充满电。

打开充电口硅胶塞，将充电线插入清洁机和USB充电器(不含)，将USB充电器插入电源插座。

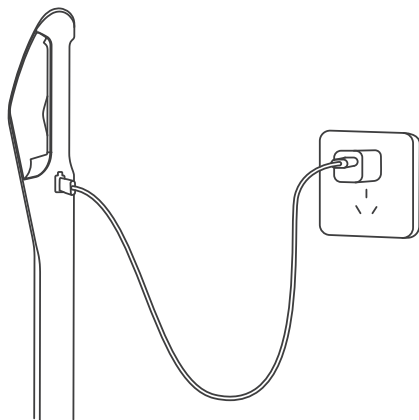

充满电时，3个指示灯亮；充电时，指示灯闪烁。



清洗清洁机

 
手柄

用抹布轻轻擦拭清洁机的手柄部分。


刷头

拆卸刷头，将其浸入水中清洗。

如果很难清洗，请用中性洗涤剂清洗。

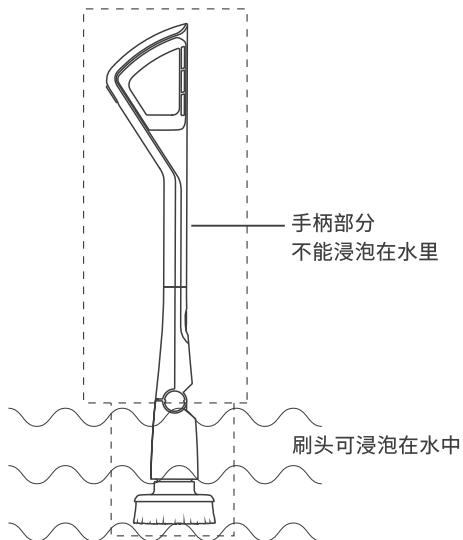


配件使用建议

 

圆刷

 适用于弧形表面，浴缸、厕所、水槽、洗手池、洗碗池等。



大平刷

适用于平坦表面，地板、墙面、窗户、路面等。



小平刷

适用于平坦表面，瓷砖、地板、家具、窗户、飘窗等。



尖刷

适用于狭窄的空间，墙角、门窗缝隙，瓷砖缝、油烟机等。

清洁技巧

为了获得更好的清洁效果，建议刷子和清洁剂(如霉菌去除剂、水应变去除剂、烤箱清洁剂、漂白清洁剂、万能清洁剂)配合使用。你可以根据不同的需要使用不同的洗涤剂。

去除顽固污渍时，请将污渍浸泡在水和清洁剂中稍待片刻，然后用清洁机清洗，可缩短清洗时间。

收纳建议

将清洁机存放在通风和阴凉处。避免把它放在潮湿的地方或暴露在强烈的阳光下。

产品参数

输入电压	DC 5V 2A
充电时长	约3小时
电池	7.4V 2000mAh锂电池
工作时间	90分钟
转速	低档: 220 rpm/min
	高档: 260 rpm/min
噪音	<70dB

故障排除

①为什么充电时指示灯不闪?

检查充电插座是否异常或断电。

插入适配器后，如果指示灯为常亮，则表示产品已充满电，只需打开电源即可使用。

②充电超过3小时后，充电指示灯没有变成常亮

充电前请检查插座和充电连接处是否松动，并将其插紧。

如果产品在使用过程中浸在水中，会损坏内部电路，造成充电异常。

③为什么当电池充满电时刷头不旋转?

检查刷头与延长杆、手柄连接是否牢固，连接方法请参见组装说明。

如果之前已经连接好，产品没有浸泡过水，但启动后洗涤剂不旋转或没有用力压刷头就停止旋转，请与我们联系。

④为什么电池充满电时使用时间达不到90分钟?

不同用户在使用过程中可能使用不同的下压力。如果一直用力按刷头，工作时间会少于90分钟。

为了延长使用时间，请不要用力按压刷头。

注意事项

- 本产品仅适用于家居环境清洁，请勿用于商业或工业环境。
- 本产品只有刷头部分可以防水，其他部位只可水淋不可浸水。
- 清洗时发生卡塞、堵转时，请关闭电源。
- 请在关机状态下更换刷头。
- 本产品不适合儿童和残障人士使用，以免造成危险。
- 请不要将整机浸入水中。
- 请不要对准人体或动物，以免造成伤害。
- 清洗完成请关闭本机电源。
- 如果产品使用过程中出现问题请和我们联系，请勿私自拆解修理。
- 请勿将充电器靠近热源放置（如暖气片）。
- 如长时间不使用本产品，请充满电后关闭主机，放置阴凉处，至少6个月充电一次，避免电池过放。
- 请依照说明书的指示使用本产品，因使用不当导致的任何损失和伤害，由用户自行承担。

售后保修卡

您的姓名		联系电话		产品型号	
联系地址					
购买日期		购买渠道		订单编号	
送修日期	故障描述/故障原因			完修日期	维修员签字

