

PRODUCT INTRODUCTION

ASSEMBLY

Assemble the brush head: Aligned with the buckle and inserted.

Change brush: Hold the brush head by hand and pull it out, then insert other brush heads.

When press the power button, the indicator light turns to be white. If power is too low, it will turn off automatically.

* Note: Do not overuse, or it will be turned off automatically, please turn it on again when reusing.

INSTRUCTIONS

Power switch
The spin scrubber sets two speeds

- 1) Press the power button once, brush will rotate 215±15rpm/min
- 2) Press the power button again, brush will rotate 255±rpm/min
- 3) Press the power button for the third time, the product will shut down

TROUBLE SHOOTING

| | |
|------------------------|--|
| Does not work | The battery is low, please charge before use. |
| Can not be recharged | The charging indicator is not on, check charging cable is plugged in correctly or not. |
| Brush head shedding | The brush head does not rotate or falls off, please check the brush head is firmly inserted or not |
| Power on does not work | Please confirm whether it is in charge state, unplug the charging plug and restart. |
| Stop work | Stop while cleaning, Please restart or check the battery is out of power. |

WARRANTY AND SUPPORT

How to obtain customer service in the quickest and most direct way.

1. Send an email with your order number to Goodpapa (Seller) official email (24h on-line, handle instantly):

service@goodpapa.net

2. Additionally, contact Goodpapa directly on Amazon(If meet vacation, handling time maybe delay).

Warranty Policy:

1. Within 30 days, If you are not satisfied with our product, please do not damage the product's package and bar code, contact the platform customer service or us directly to guide you to return.
2. Within 1 year, We provide accessories and technical support for free and guide customers to repair the brush(We will cover the accessories' shipping fee).
3. Within 1~2 year, We provide accessories and technical support for free and guide customers to repair the brush(buyer pays the accessories' shipping fee).
4. Over 2 years, We provide technical support for free and guide customers to repair the brush(buyer pays the accessories' fee and shipping fee).

CHARGING

The charging port is on the back of the handle. When charging, the white indicator light flashes. When the battery is fully charged, the three white indicators are all on. Please unplug the charger.

ATTENTIONS

1. The product is made to be used in household cleaning, don't use it in industry or harsh environments.
2. Only the part of the brushes are waterproof, the other parts can not be submerged in water.
3. Please turn off and turn on again when it gets stuck.
4. Don't use when the adapter is damaged
5. The product is not suitable for children.
6. Don't use on people or animals
7. Don't put the charger near any hot places
8. Don't use any other batteries and adapters.
9. Don't disassemble it to repair by yourself
10. If you haven't use it for a long time, please charge it and place in a cool dry place; and charge it every 6 months to avoid any damage.
11. Please use the product according to this manual, if any damages are caused by misuse, the user takes all responsibilities.

PARAMETERS

| | | |
|------------|-----------------------|--|
| Appearance | Item No. | QXJ-M3 |
| | Length | 1040mm |
| | Material | ABS+TPR+PP |
| | N.W | 1.5kg |
| Parameters | Working time | 1.2hrs |
| | Charging time | 1.0hr |
| | Operating noise | <70dB |
| | Operating temperature | 0-45°C |
| | Max Power | 74W |
| Battery | Speed | Low-end ≥215±15rpm/min Heigh-end ≥255±rpm/min |
| | Battery volume | 2000mAh |
| | Output voltage | 7.4V DC |
| | Charging voltage | 9V/2A DC |
| Others | Waterproof | IPX7/IPX4 |

TROUBLE SHOOTING

| | |
|------------------------|--|
| Does not work | The battery is low, please charge before use. |
| Can not be recharged | The charging indicator is not on, check charging cable is plugged in correctly or not. |
| Brush head shedding | The brush head does not rotate or falls off, please check the brush head is firmly inserted or not |
| Power on does not work | Please confirm whether it is in charge state, unplug the charging plug and restart. |
| Stop work | Stop while cleaning, Please restart or check the battery is out of power. |

WARRANTY AND SUPPORT

How to obtain customer service in the quickest and most direct way.

1. Send an email with your order number to Goodpapa (Seller) official email (24h on-line, handle instantly):

service@goodpapa.net

2. Additionally, contact Goodpapa directly on Amazon(If meet vacation, handling time maybe delay).

Warranty Policy:

1. Within 30 days, If you are not satisfied with our product, please do not damage the product's package and bar code, contact the platform customer service or us directly to guide you to return.
2. Within 1 year, We provide accessories and technical support for free and guide customers to repair the brush(We will cover the accessories' shipping fee).
3. Within 1~2 year, We provide accessories and technical support for free and guide customers to repair the brush(buyer pays the accessories' shipping fee).
4. Over 2 years, We provide technical support for free and guide customers to repair the brush(buyer pays the accessories' fee and shipping fee).

Goodpapa User Manual

Multi-function Spin Scrubber

Please read it carefully before using and keep it well

| 名称 | 尺寸 | 材质 | 工艺 |
|-------------|----------|--------|------------|
| QXJ-M3英文说明书 | 95×105mm | 105g双铜 | 风琴折五折页, 单色 |