

MULTI-FUNCTION SPIN SCRUBBER MANUAL

Please read this manual carefully before use , and keep it well.

Information may be changed or updated without notice

Thanks for your purchase!

Thank you for choosing our multi-function spin scrubber.

Large torque with rotating motor and multi-function brushes.


Easy to clean stubborn stains on marble, car, wooden floors, ceramics, glass, carpet, etc...

Use it with cleaning cloths and wax sponge to complete the cleaning easily and efficiently.

Immaculate and stylish in design, easy to store with the storage base included.

multi-function spin scrubber will make your life much easier.


Product Introduction

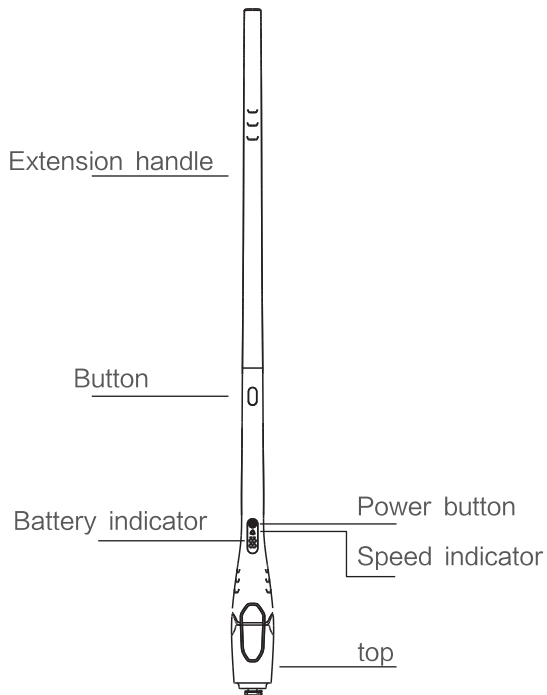


Round brush




Flat brush

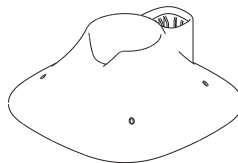


Storage base

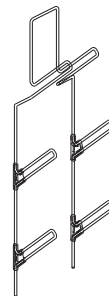

Storage rack

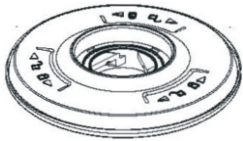

Velcro connector

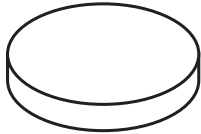

Sponge brush




Chenille brush




Coral Mop



Handle hook

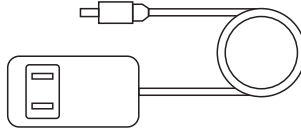

Power adapter

 


Manual


Install

1. The extension handle is detachable. When you don't use the extension handle, plug in the handle hook. You can change it easily, according to your needs.

Note: press the button when pulling out the extension handle.

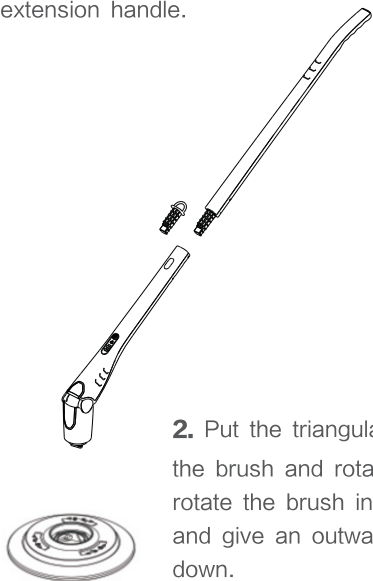


2. Put the triangular shaft in the hole of the brush and rotate clockwise to install; rotate the brush in the opposite direction and give an outward force to push it down.

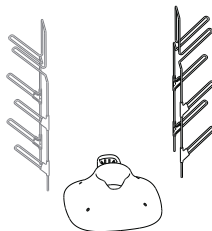

3. The storage base comes with a stainless steel rack to store the brushes.

4. You can either put the handle hook or the extension handle directly into the storage base.

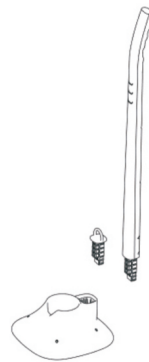


5. Put the brushes into the rack to let them dry.




Instructions

1. Power on/off button - switch speed
2. Press the power button to turn it on, the speed indicator light will turn green. Low speed is at 180rpm.
3. Press the power button twice, the speed indicator turns red. High speed is at 240rpm.
4. Press the power button three times to turn it off, when in low speed mode, press it for more than 3 seconds to turn it off.
5. A battery indicator shows 100 when battery is full. It will turn off automatically when power is too low. The charging port is on the back.

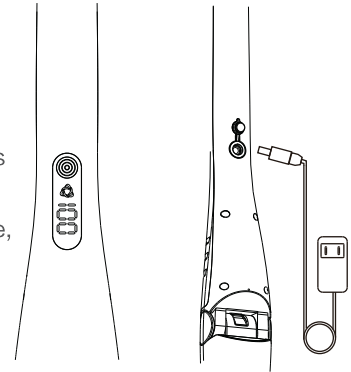

Waterproof

The part above the rotation shaft was designed to be submerged in water, the part below rotation shaft can only work under water for a short time.

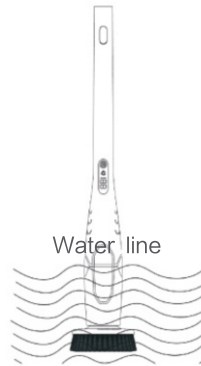

Velcro connector


Velcro brush has 4 velcro strips to stick the sponge brush or chenille brush.



Instructions


Rotation shaft

Rotation shaft can be adjusted from 0 - 82° , adjust it according you use.

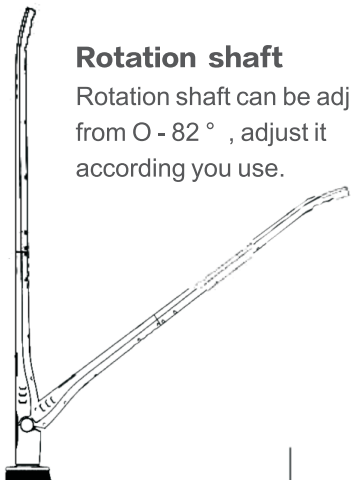


Change brushes

Put the triangular shaft in the hole of the brush and rotate clockwise to install; rotate the brush in the opposite direction and give an outward force to press it down.

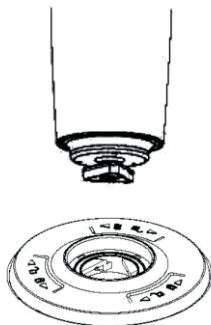

Extension handle

Please press the stuck button when you plug in or pull out the extension handle, the extension handle is made of ABS material.

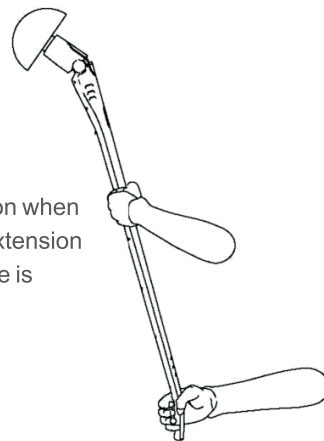

Basic parameters

CX-QXJ100	Parameters
Battery capacity	2000 mAh
Voltage	DC 7.4V
Power	84W
Adapter output voltage	DC 9V 2A
Charging time	2.5-3h

Attentions

1. The product is made to be used in household cleaning, don' t use it in industry or harsh environments.
2. Only the part of the brushes are waterproof, the other parts only can not be submerged in water.
3. Please turn off and turn on again when it gets stuck.
4. Don't use when the adapter is damaged.
5. The product is not suitable for children.
6. Don't use on people or animals.
7. Don' t put the charger near any hot places.
8. Don' t use any other batteries and adapters.
9. Don' t disassemble it to repair by yourself.
10. If you haven't use it for a long time, please charge it and place in a cool dry place; and charge it every 6 months to avoid any damage.
11. Please use the product according to this manual, if any damages are caused by misuse, the user takes all responsibilities.
12. **E1 failure is shown when the temperature of the motor is too high. Let it cool down and restart it.**



Hazardous material contents and names


Parts name	Hazardous material					
	Lead (Pb)	Mercury (Hg)	Cadmium (Cd)	Hexavalent chromium (Cr (VI))	Polybrominated biphenyl (PBB)	Polybrominated diphenyl ethers (PBDE)
Circuit board	x	o	x	o	o	o
Shell	o	o	o	o	o	o
Battery	x	o	o	o	o	o
Brushes	o	o	o	o	o	o
Storage rack	x	o	o	o	o	o

○: This table was compiled in accordance with the provisions of RoHS and FCC.

This identifier indicates the contents of the hazardous material in one homogeneous material of the part were all below the limited standard of RoHS and FCC.

×: This identifier indicates the contents of the hazardous material in one homogeneous material of the part were above the limited standard of RoHS and FCC. (All the parts which were marked with “x” were all reached RoHS standard, or the hazardous material cannot be replaced because of global technical limitations.) (This table indicates these hazardous materials exist in the product, but not all above parts in the packed product.)

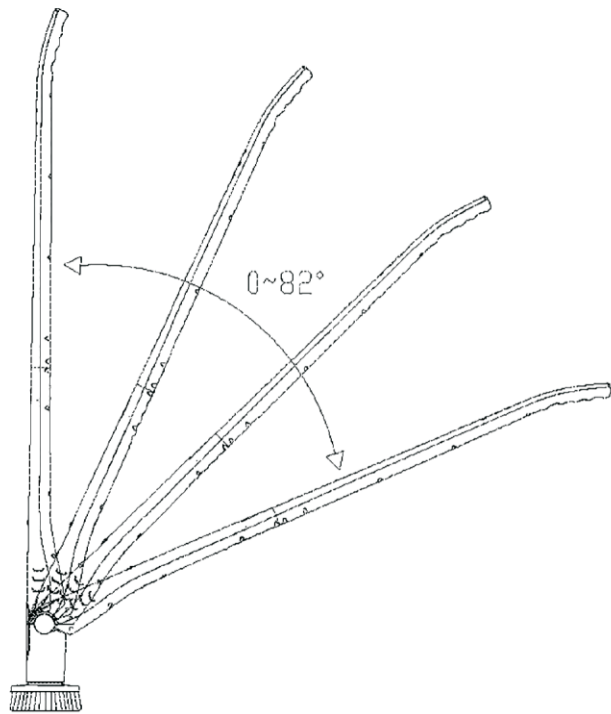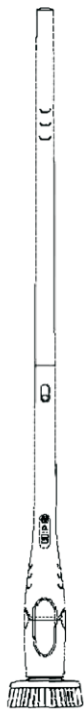

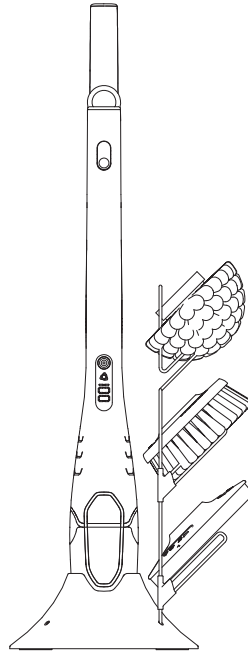

Easier Cleaner Healthier & Happier