


Installation method



You will need glue and glue chair, spirit level, screwdriver, pencil and black screws. For protection use cotton gloves when working with the panels.


NOTE!

Because of the amount of wood in the acoustic panels, they can have a bit of a smell of wood. Therefore, we recommend that they are acclimatized before mounting.

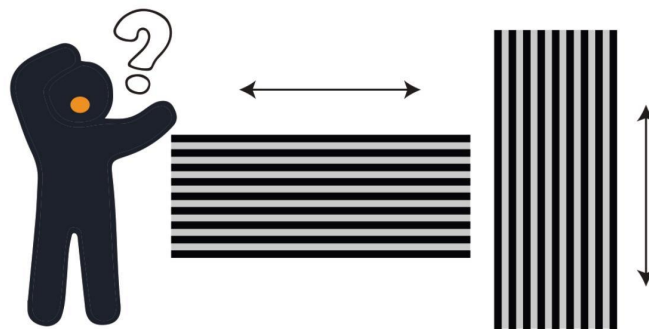


Decide which direction you want to use your acoustic panels. The acoustic panels can be shortened from the back with fine-toothed blade.

A

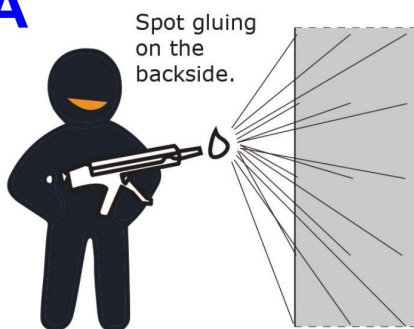

Spot gluing on the backside.

B

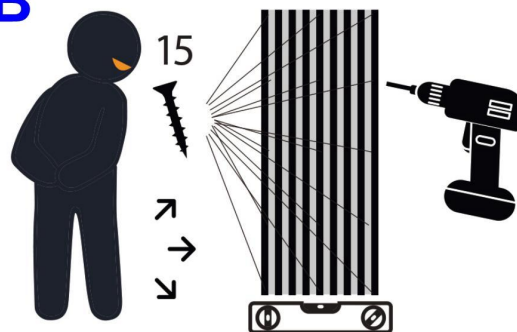

Install the acoustic panels with screws or adhesive through the polyester on wall or ceiling.

Use 15 screws to each panel.

Formwork shall be distanced by 60 mm. Always use screws when mounted on ceilings.

Remember: You can either use our adhesive or our black screws when installing your new panels on your wall. Always use screws when installing panels on ceilings.