



H08081 OMR

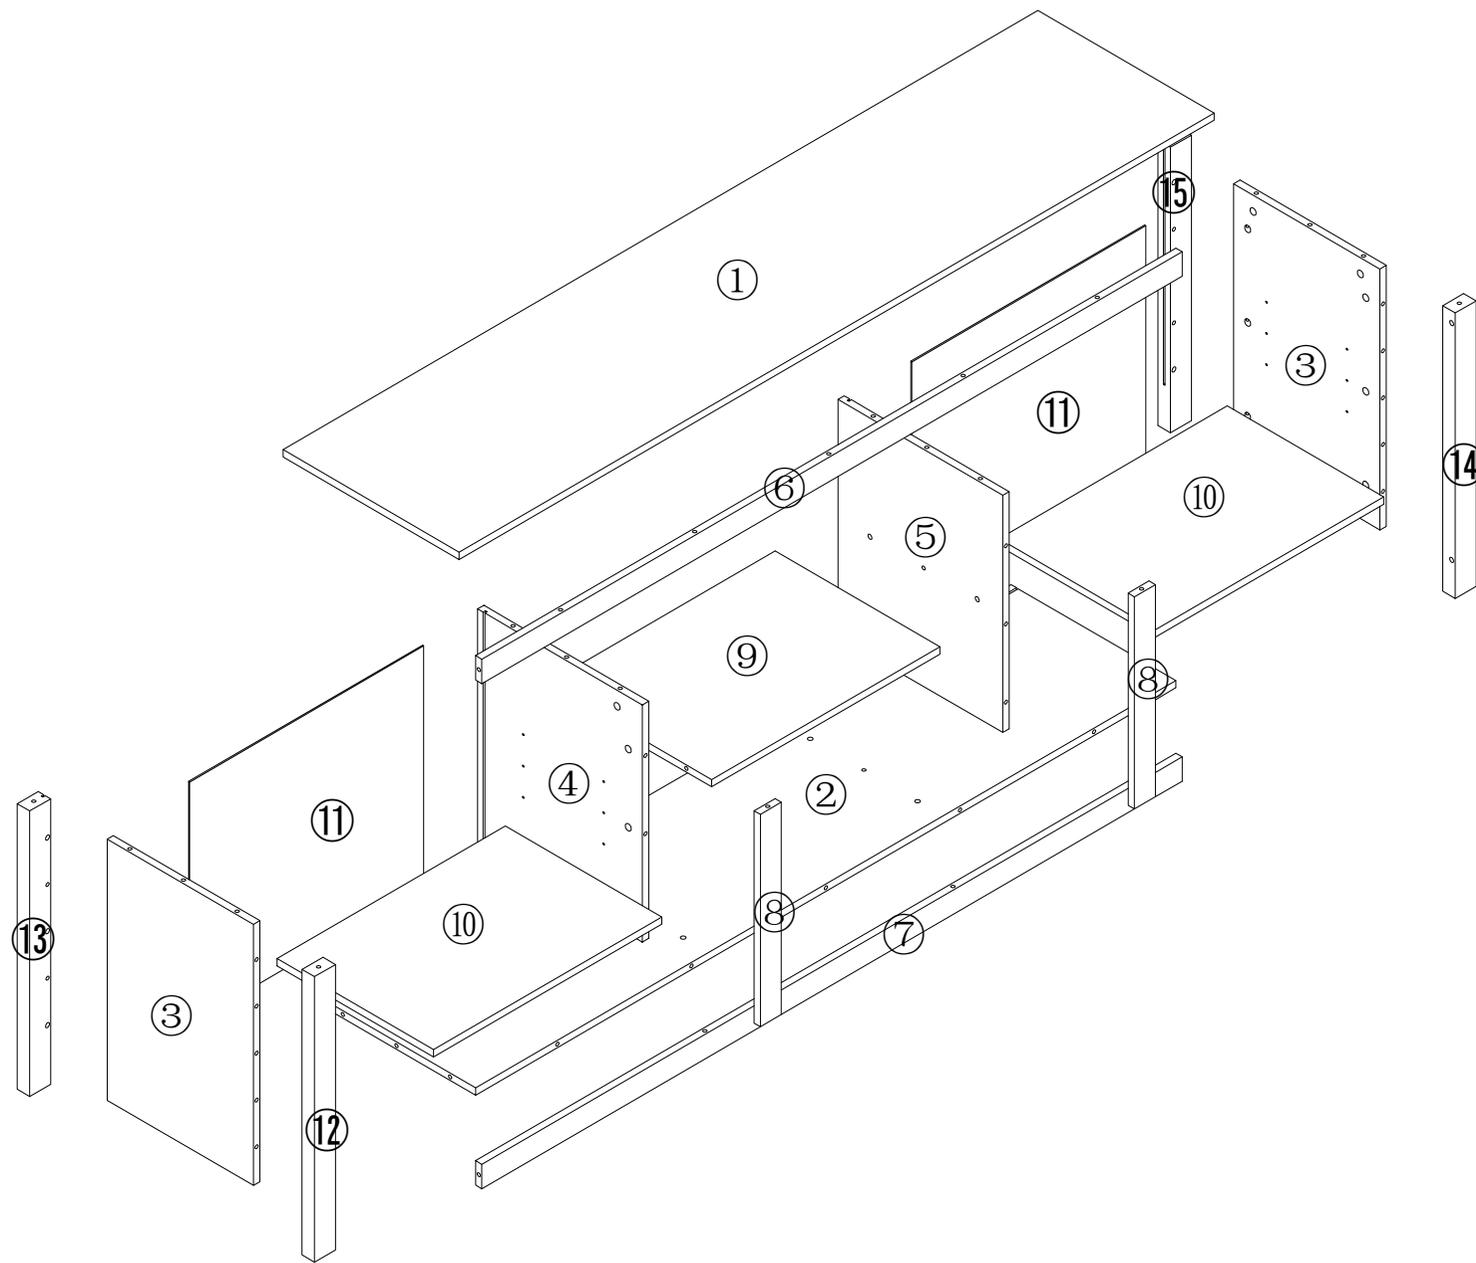

A

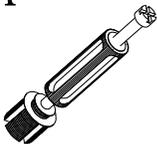


48PCS

B



48PCS

C 8*40

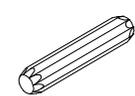


30PCS

D



8PCS

E

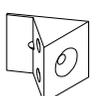

16PCS

F 3*12



16PCS

G 3.5*14




8PCS

H 80MM


















2PCS

I

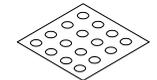

30PCS

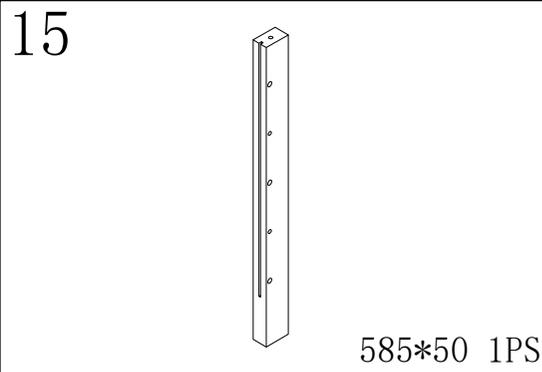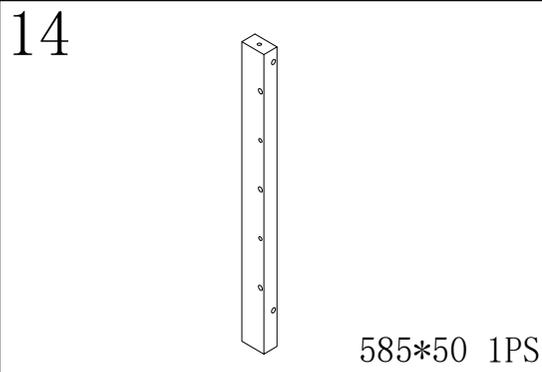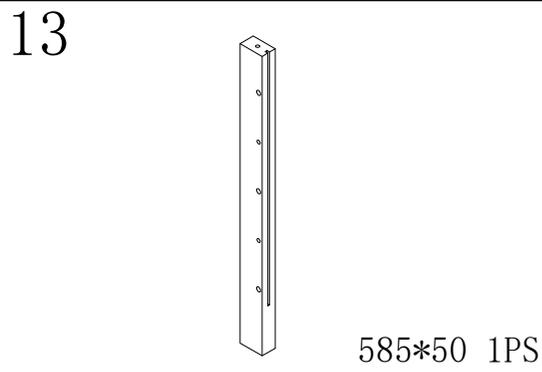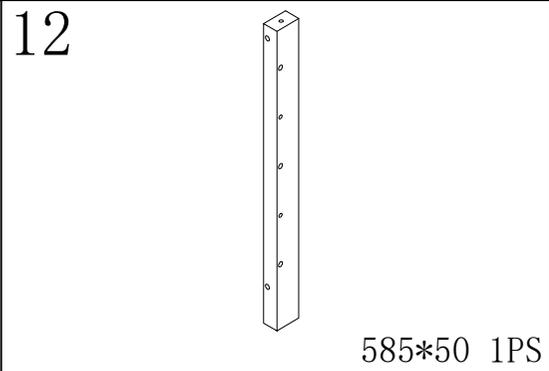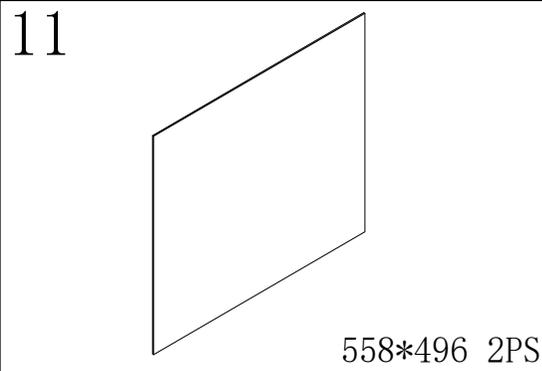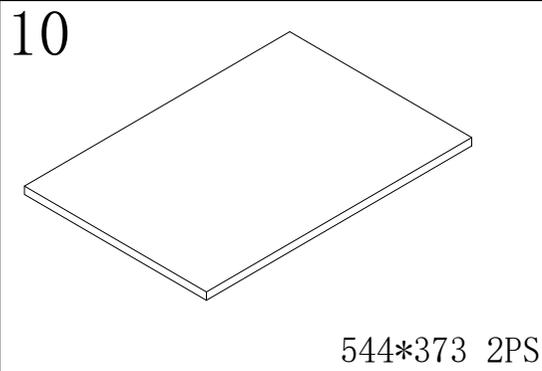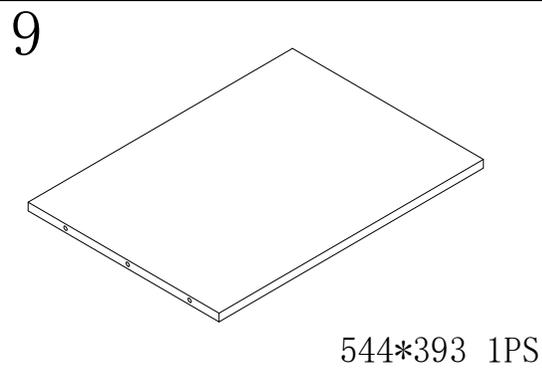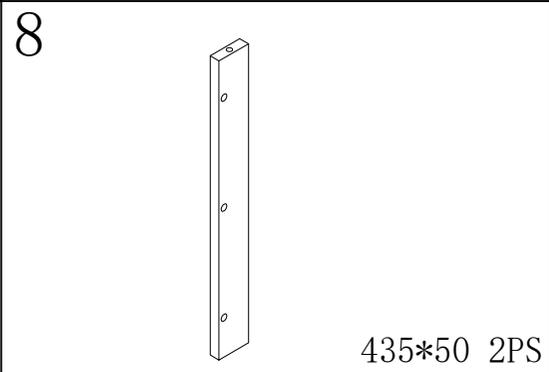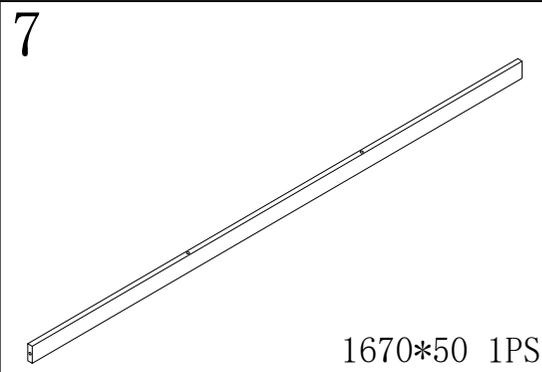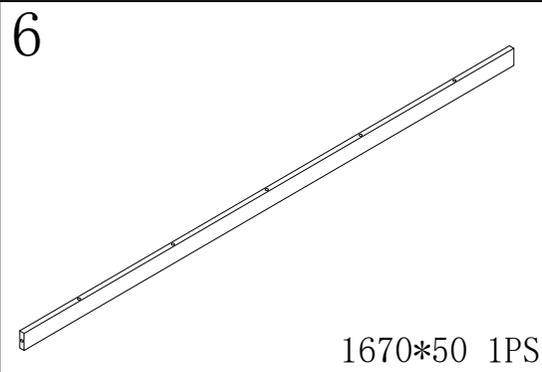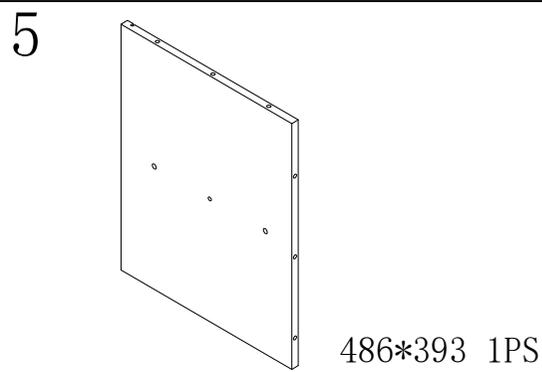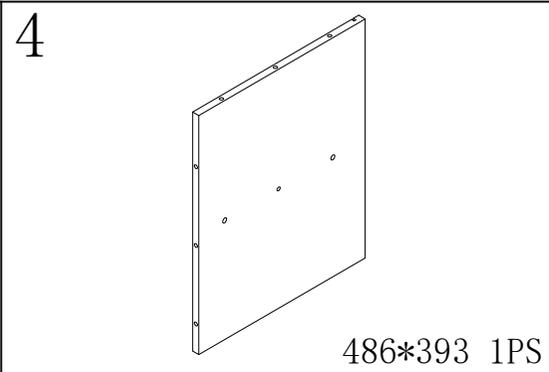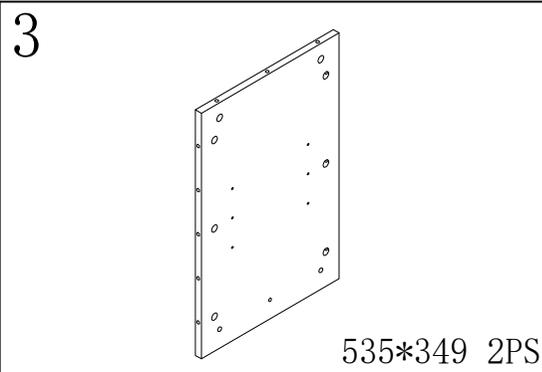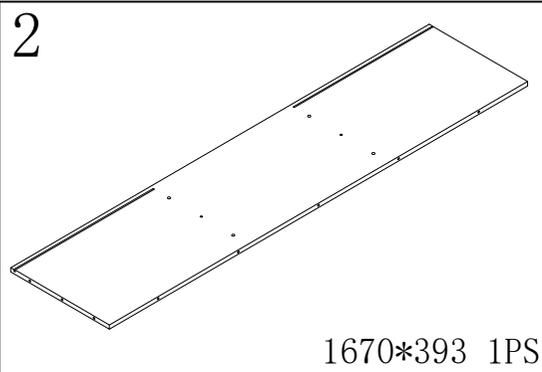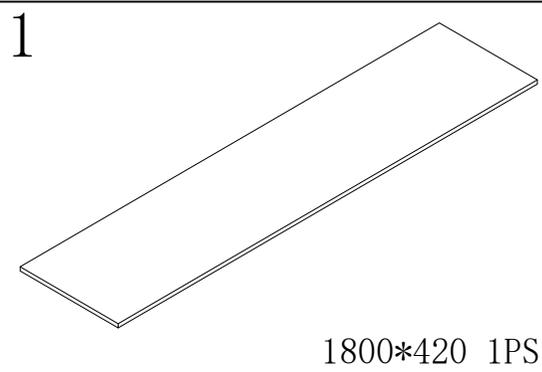





Hardware installation demonstration

NOTE: Please make sure "A" hardware tightened and can't be pulled out!


I

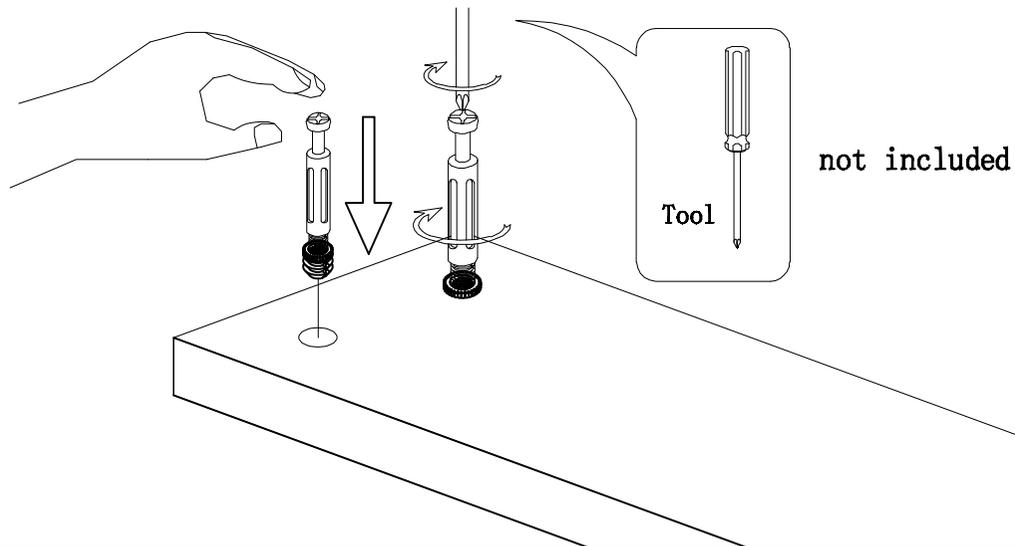

II

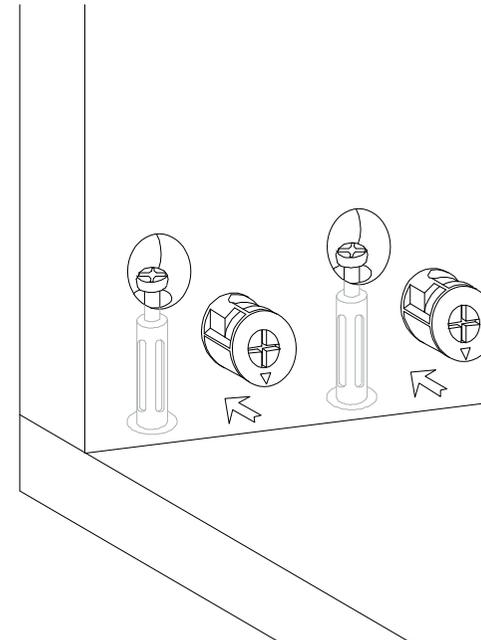

III

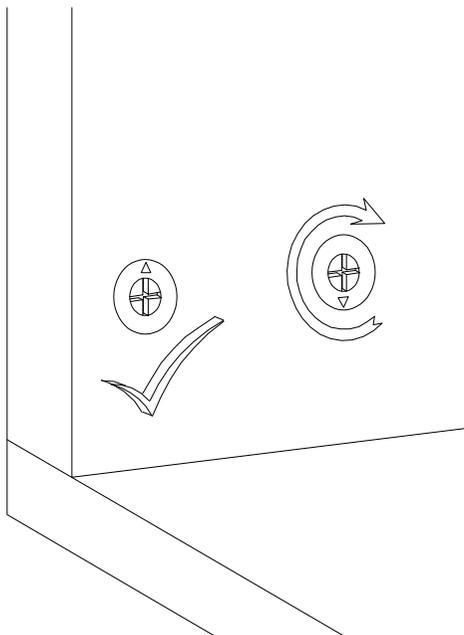


IV





Scan QR code for assembly video

1

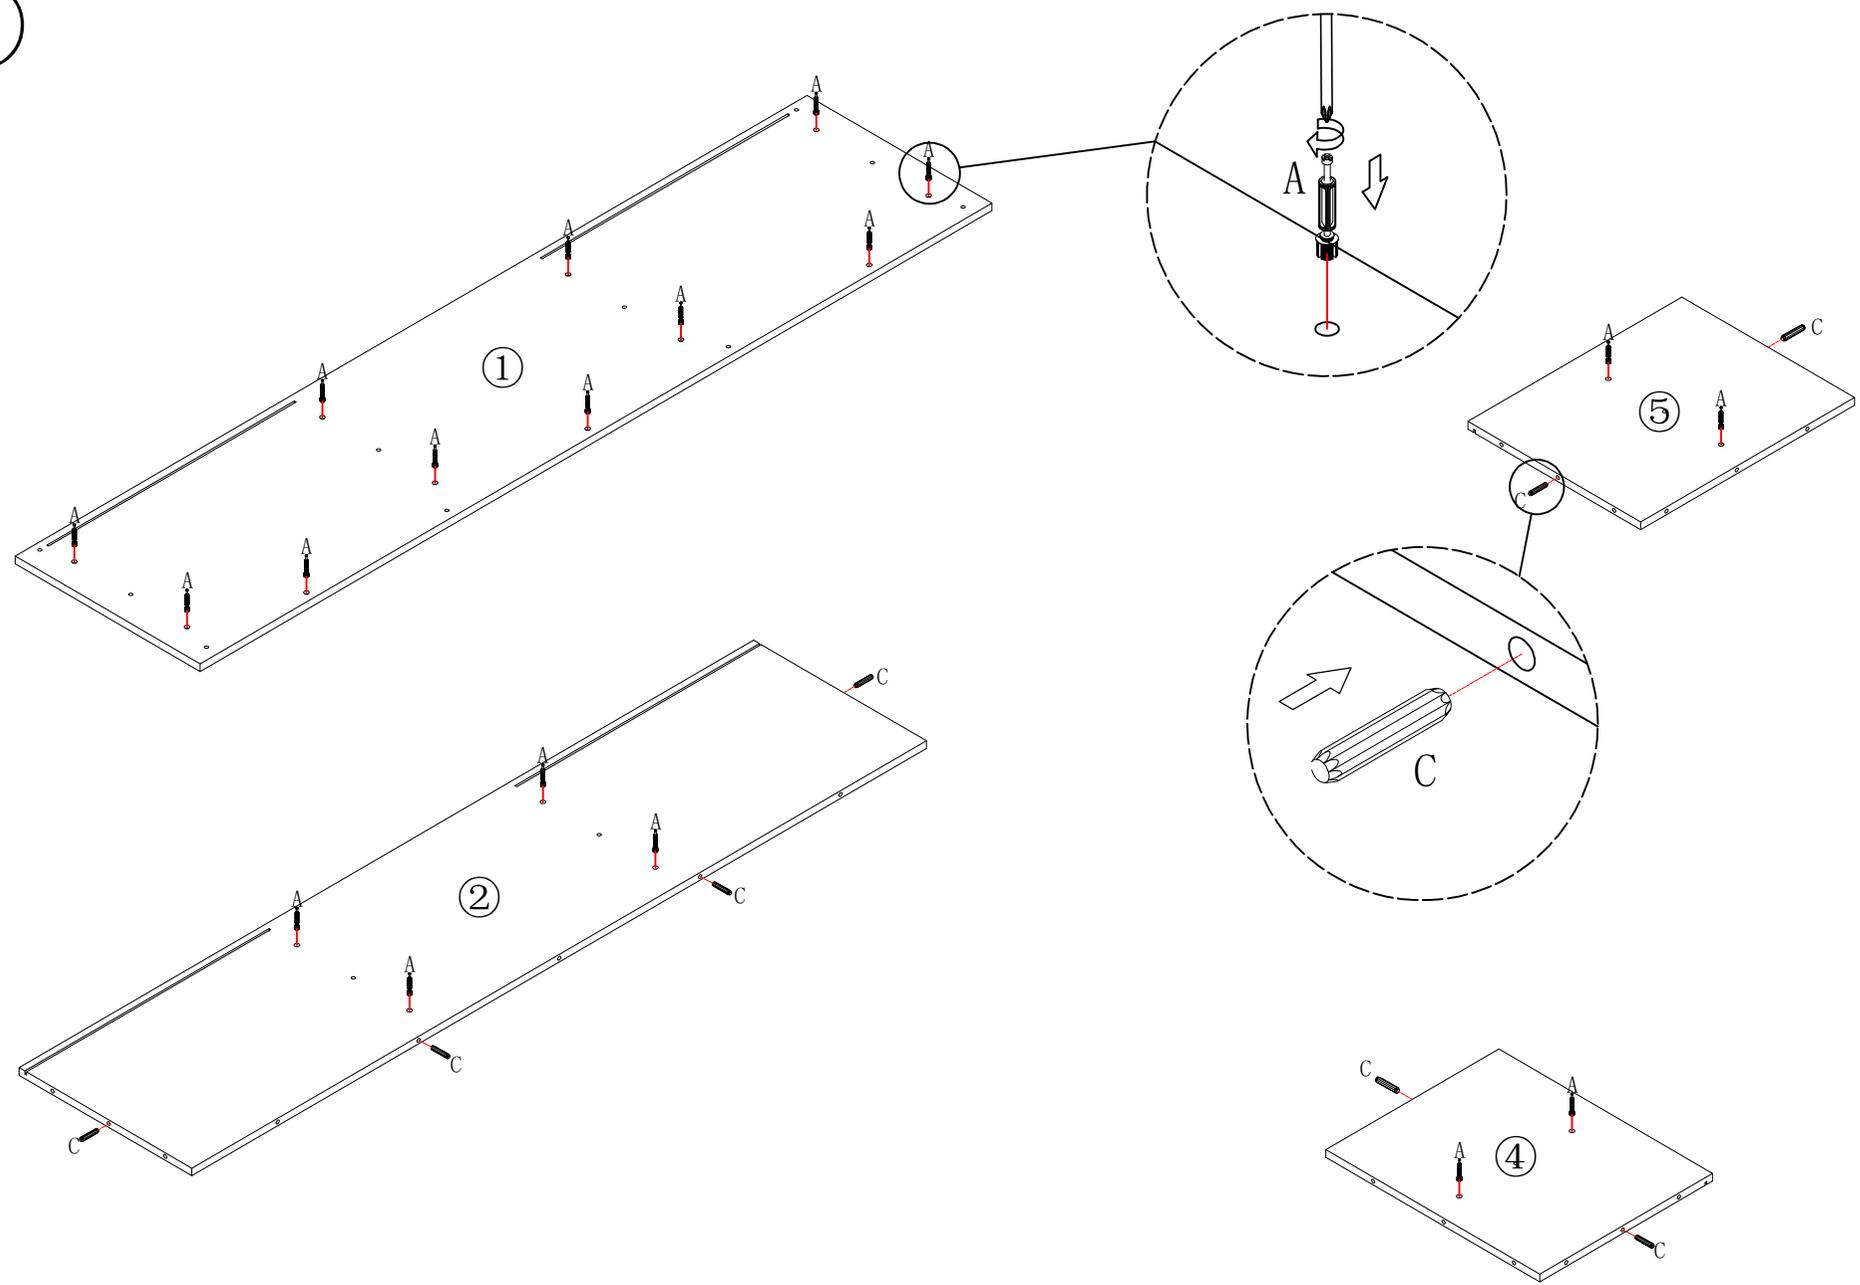


	A*19 put A on board ①②④⑤
	C*8 put C on board ②④⑤

2

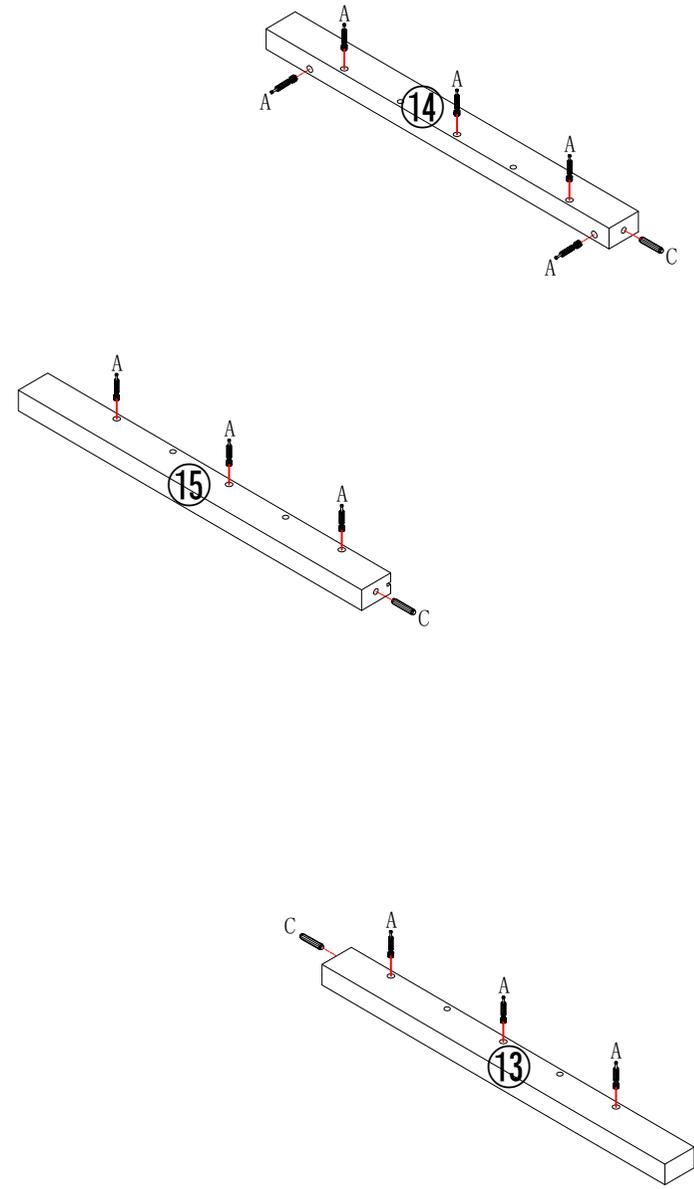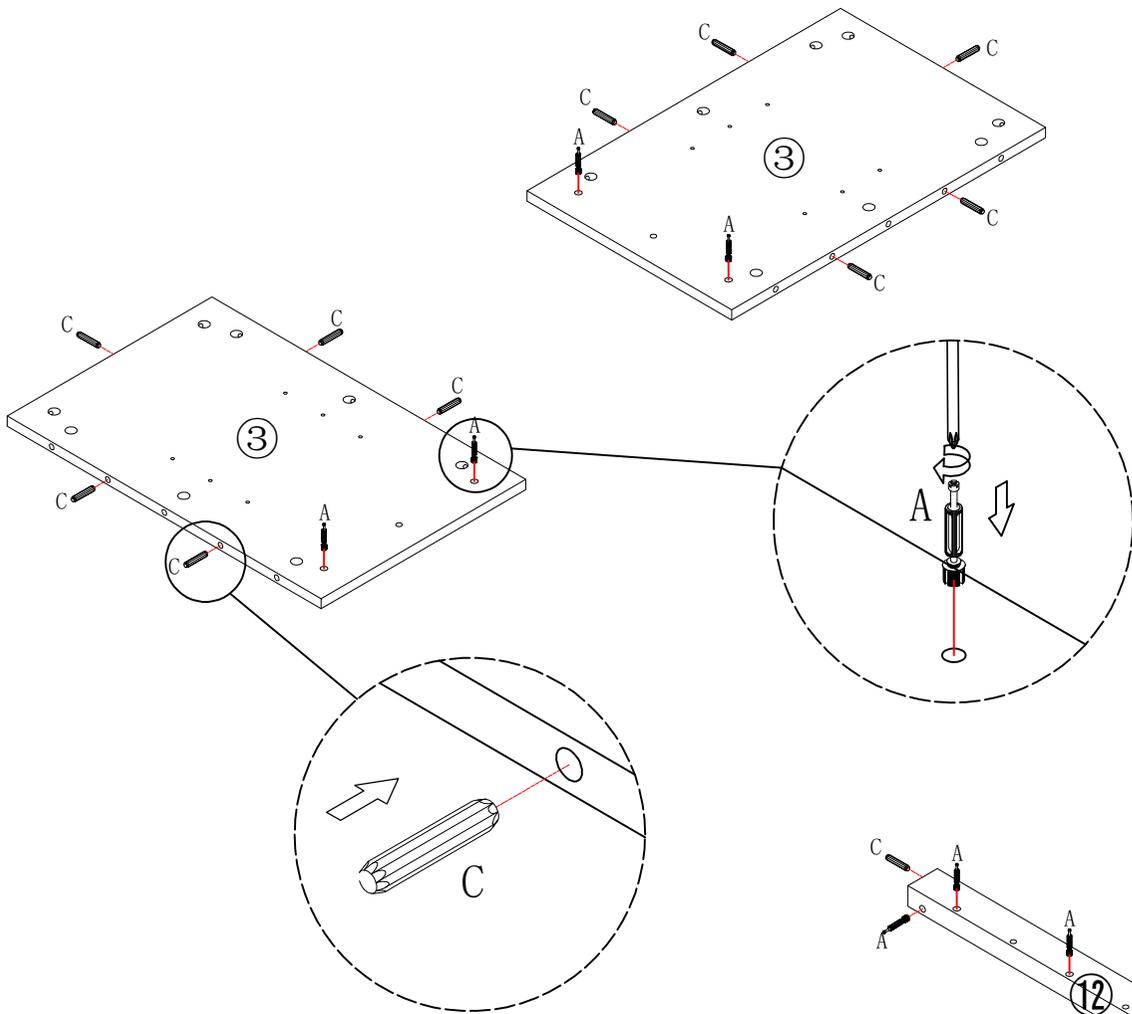

	A*20 put A on board ③⑫⑬⑭⑮
	C*14 put C on board ③⑫⑬⑭⑮

3

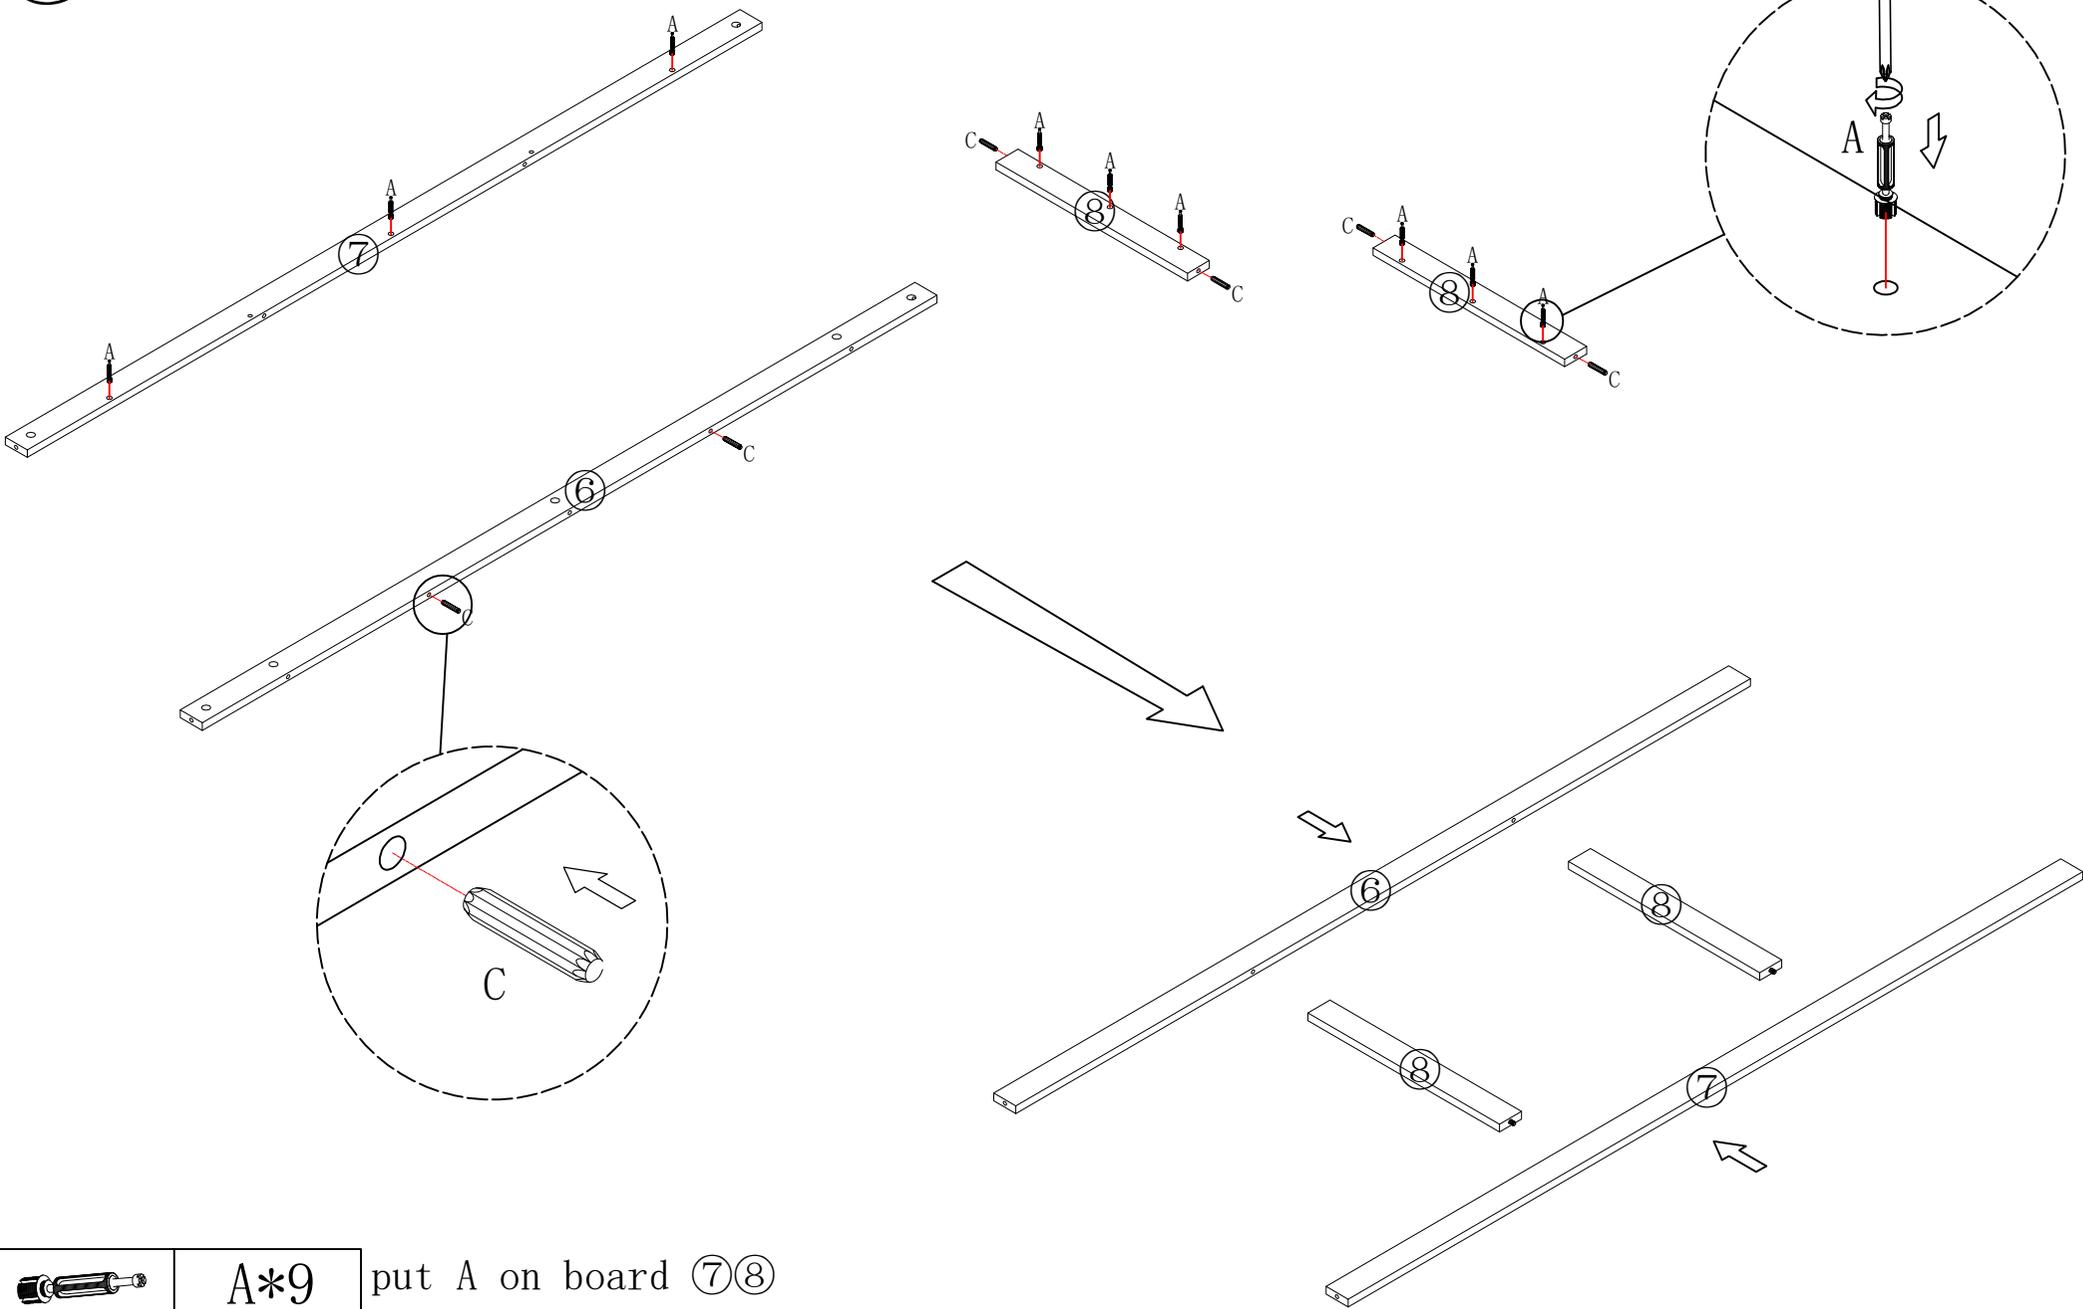


	A*9
	C*6

put A on board ⑦⑧

put C on board ⑥⑧

4

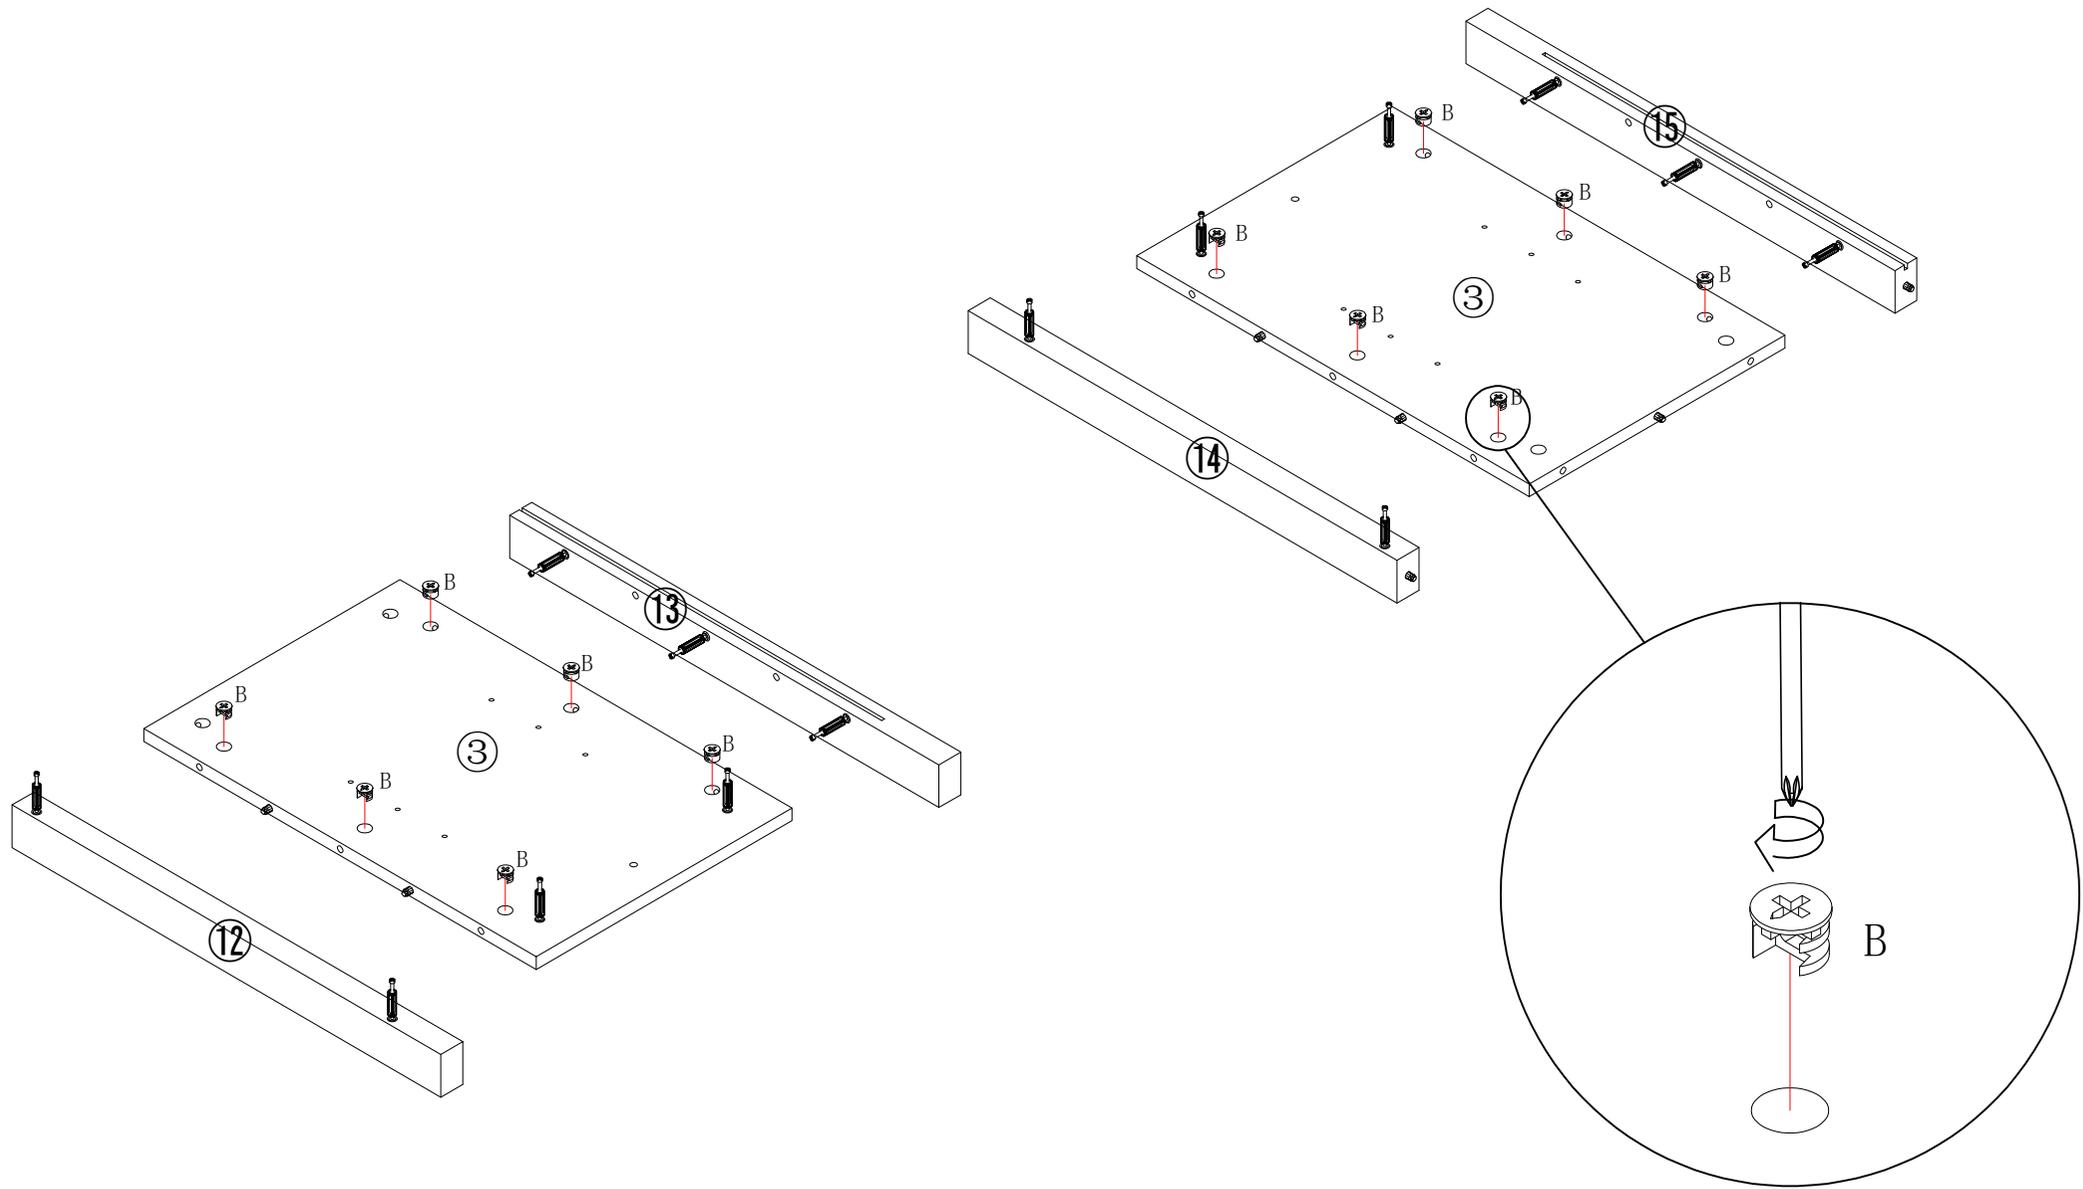


Make sure the arrow on the screw align to the hole on the side.




B*12 put B on board ③

5

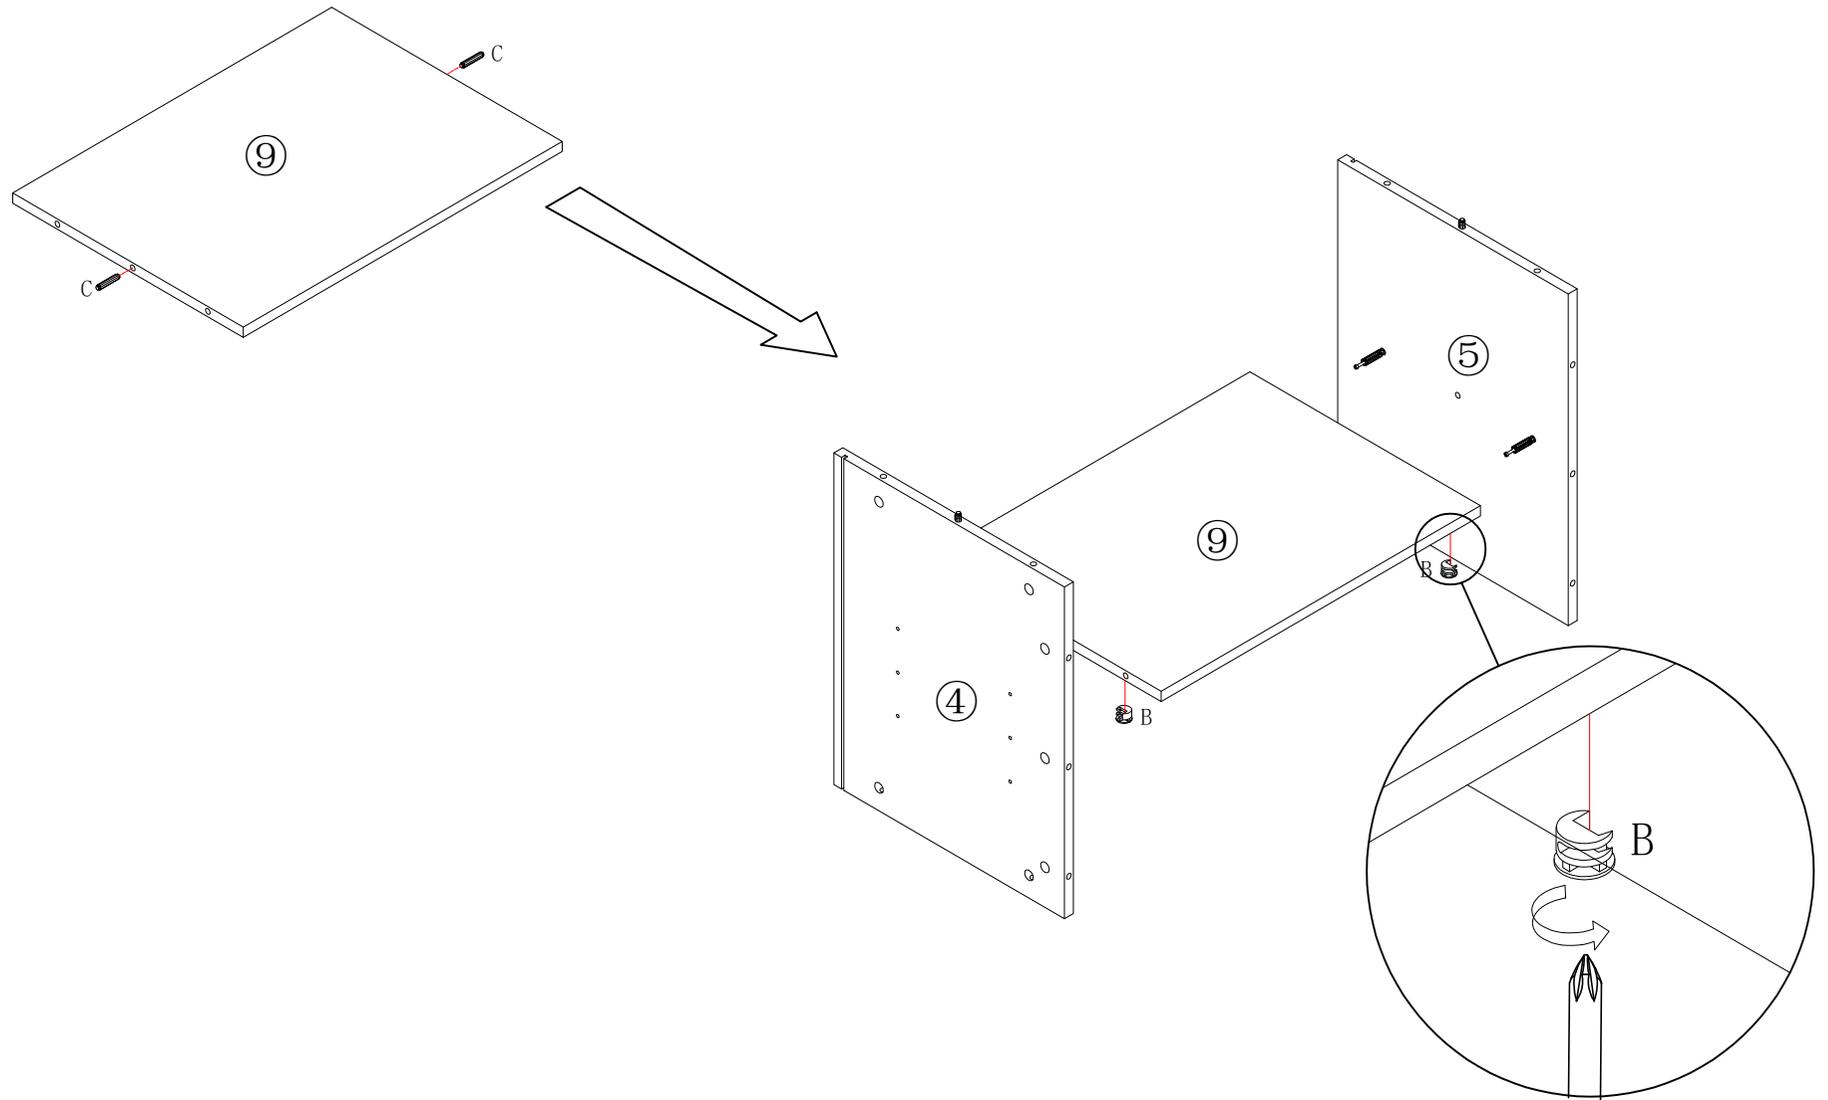

B*4

put B on board ⑨

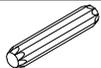


C*2

put C on board ⑨

Make sure the arrow on the screw align to the hole on the side.

6

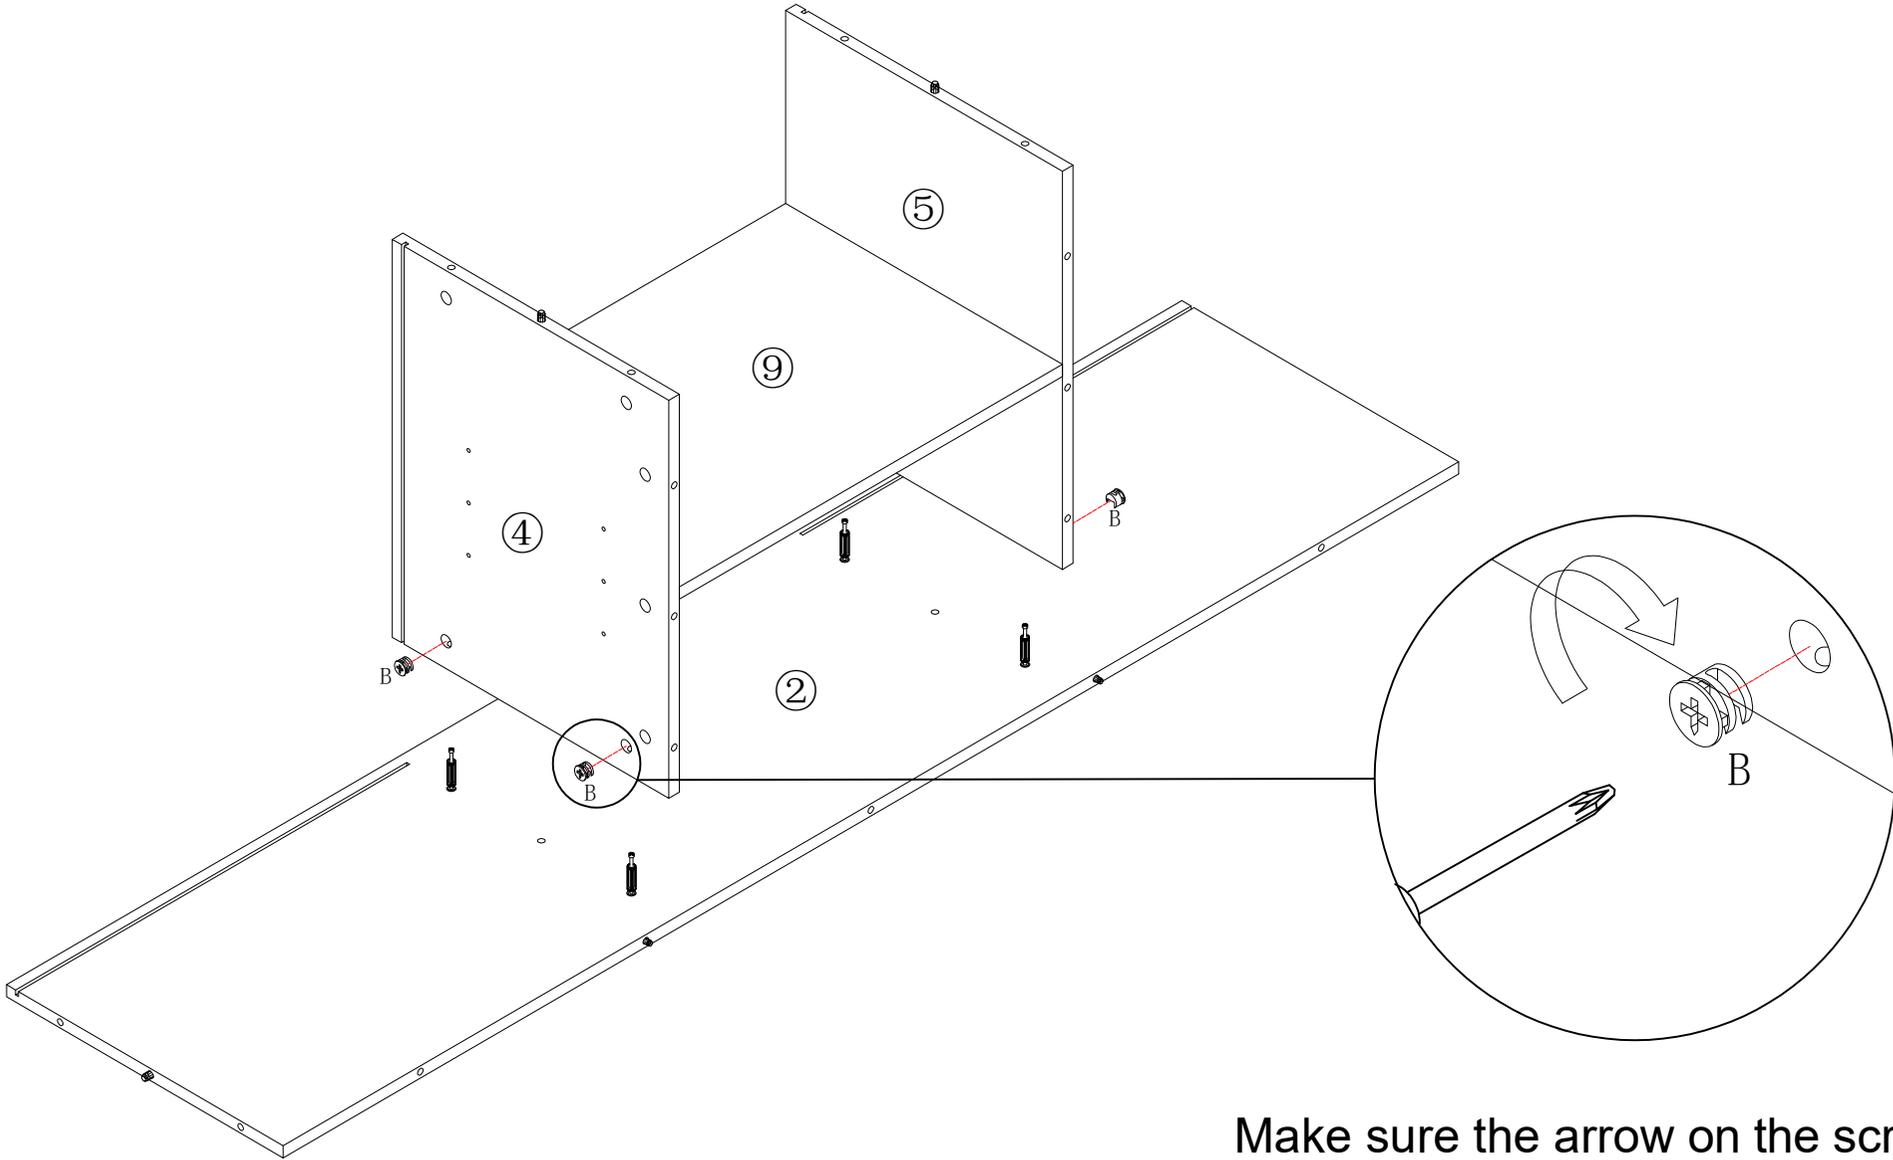


Make sure the arrow on the screw align to the hole on the side.



B*4

put B on board 4 5

7

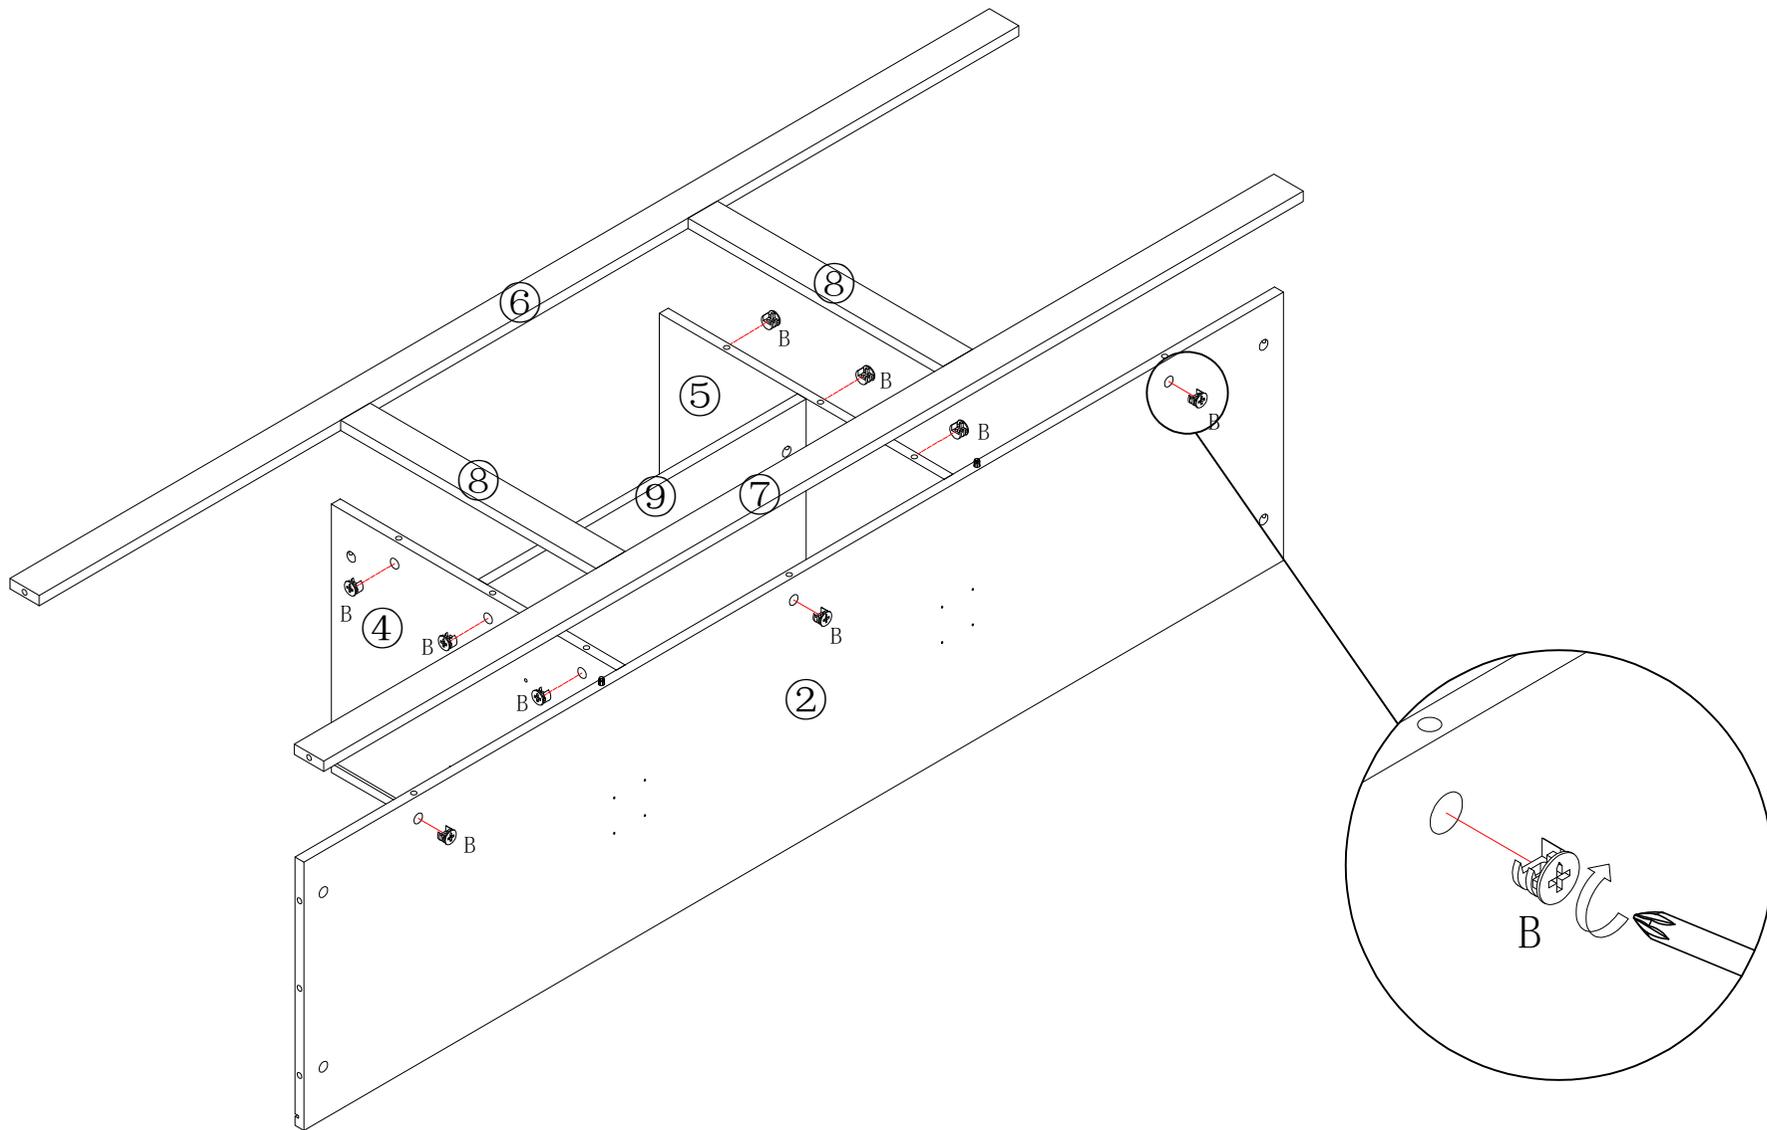


Make sure the arrow on the screw align to the hole on the side.



B*9

put B on board ②④⑤

8

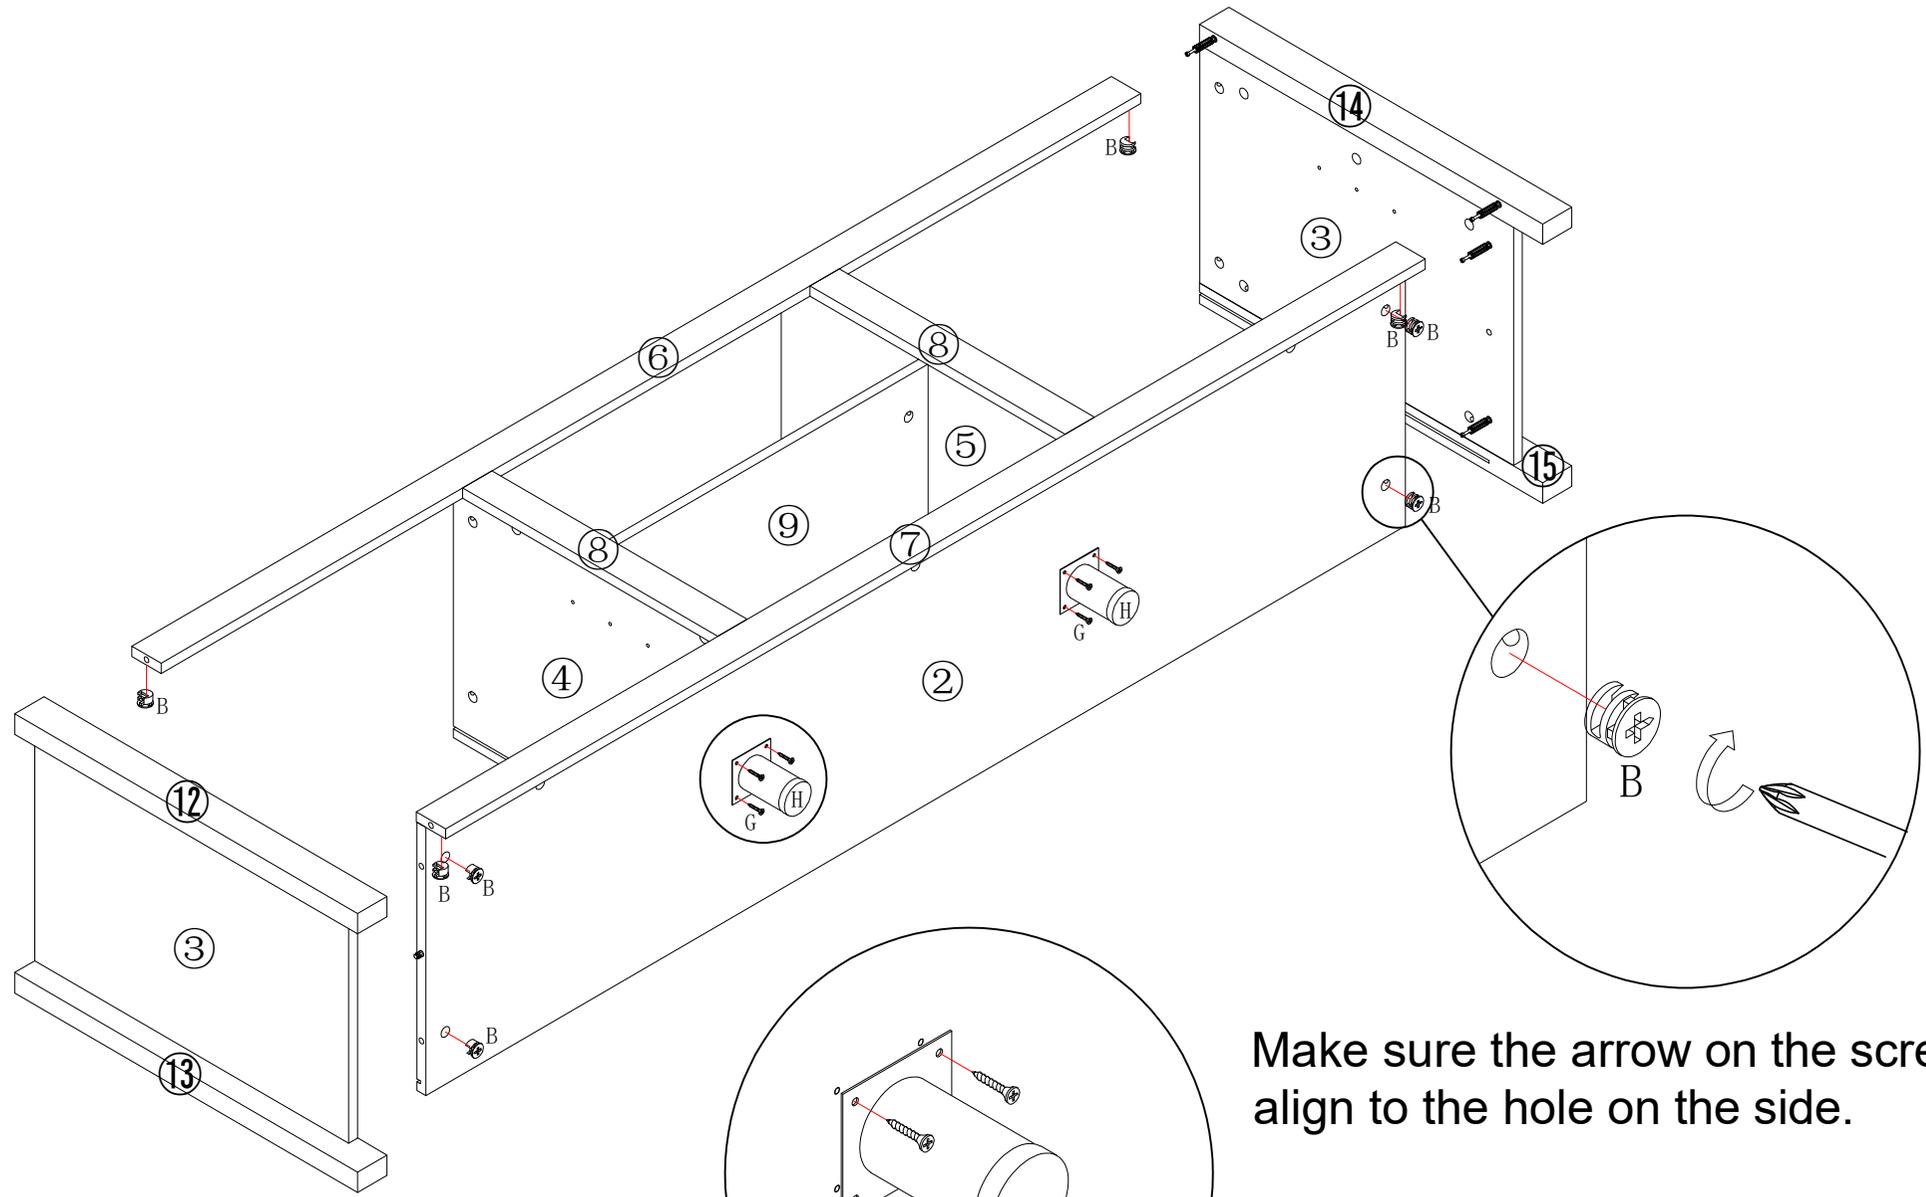


Make sure the arrow on the screw align to the hole on the side.


	B*8
	G*8
	H*2

put B on board ②⑥⑦

9

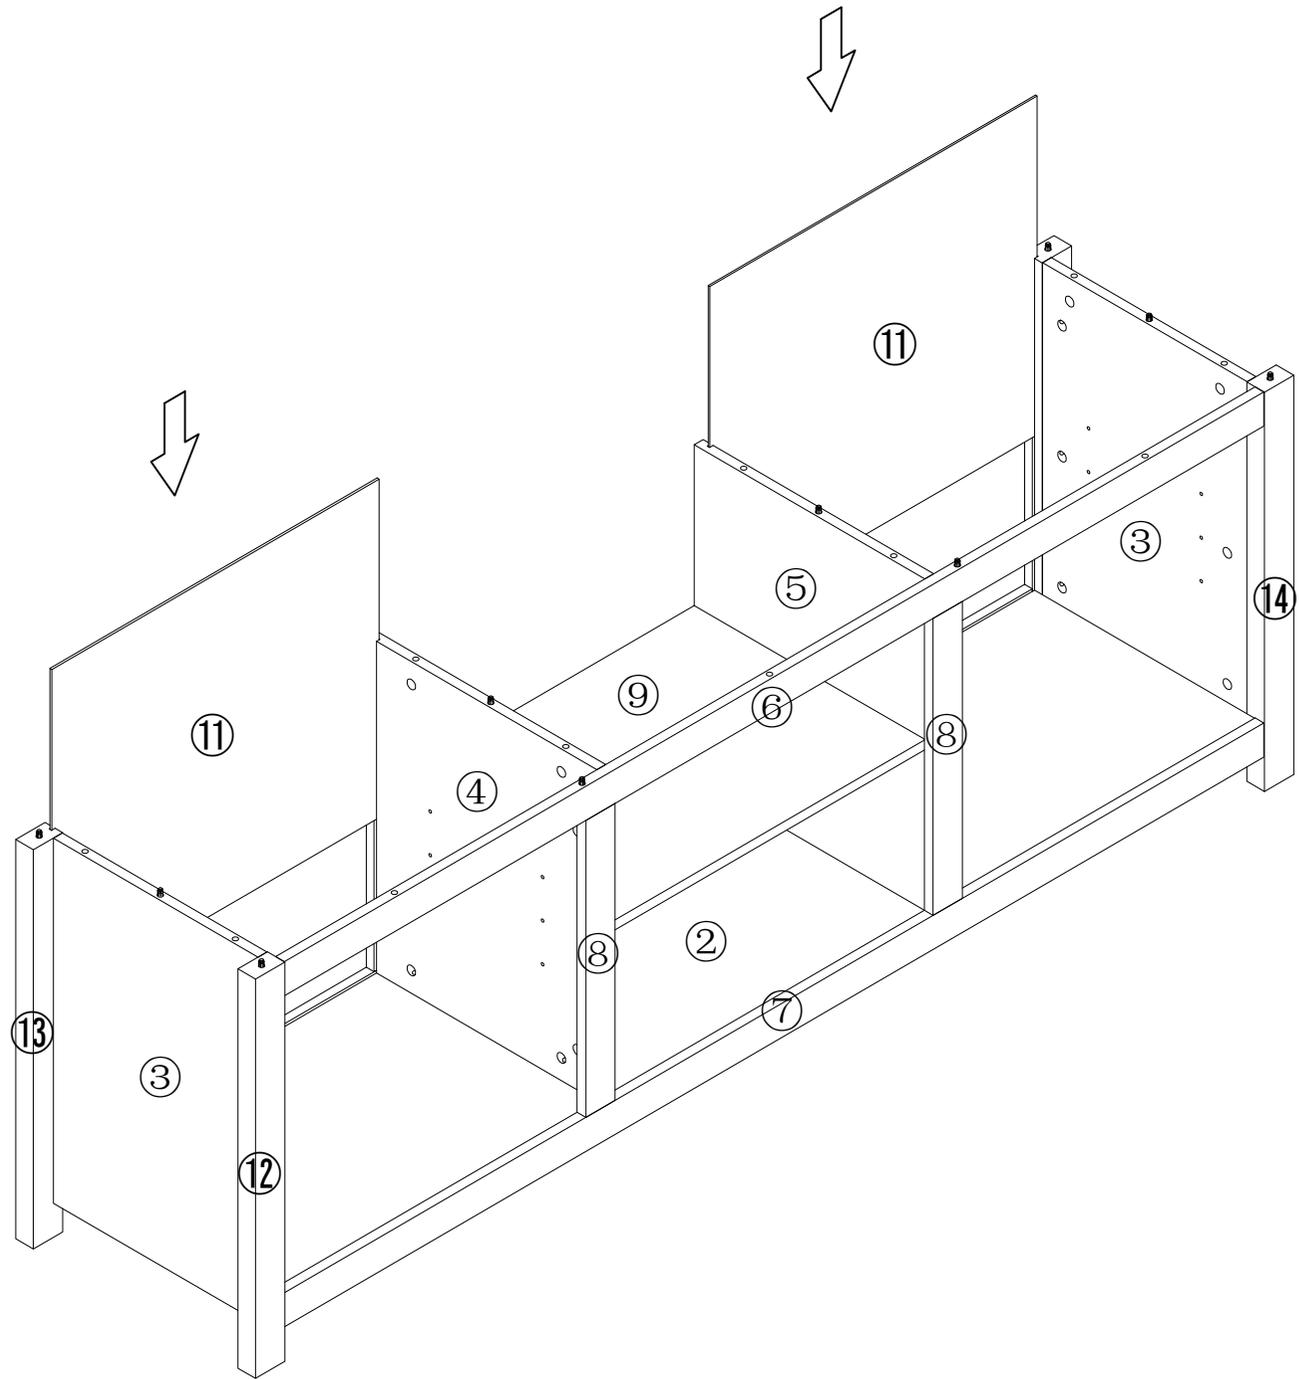

10


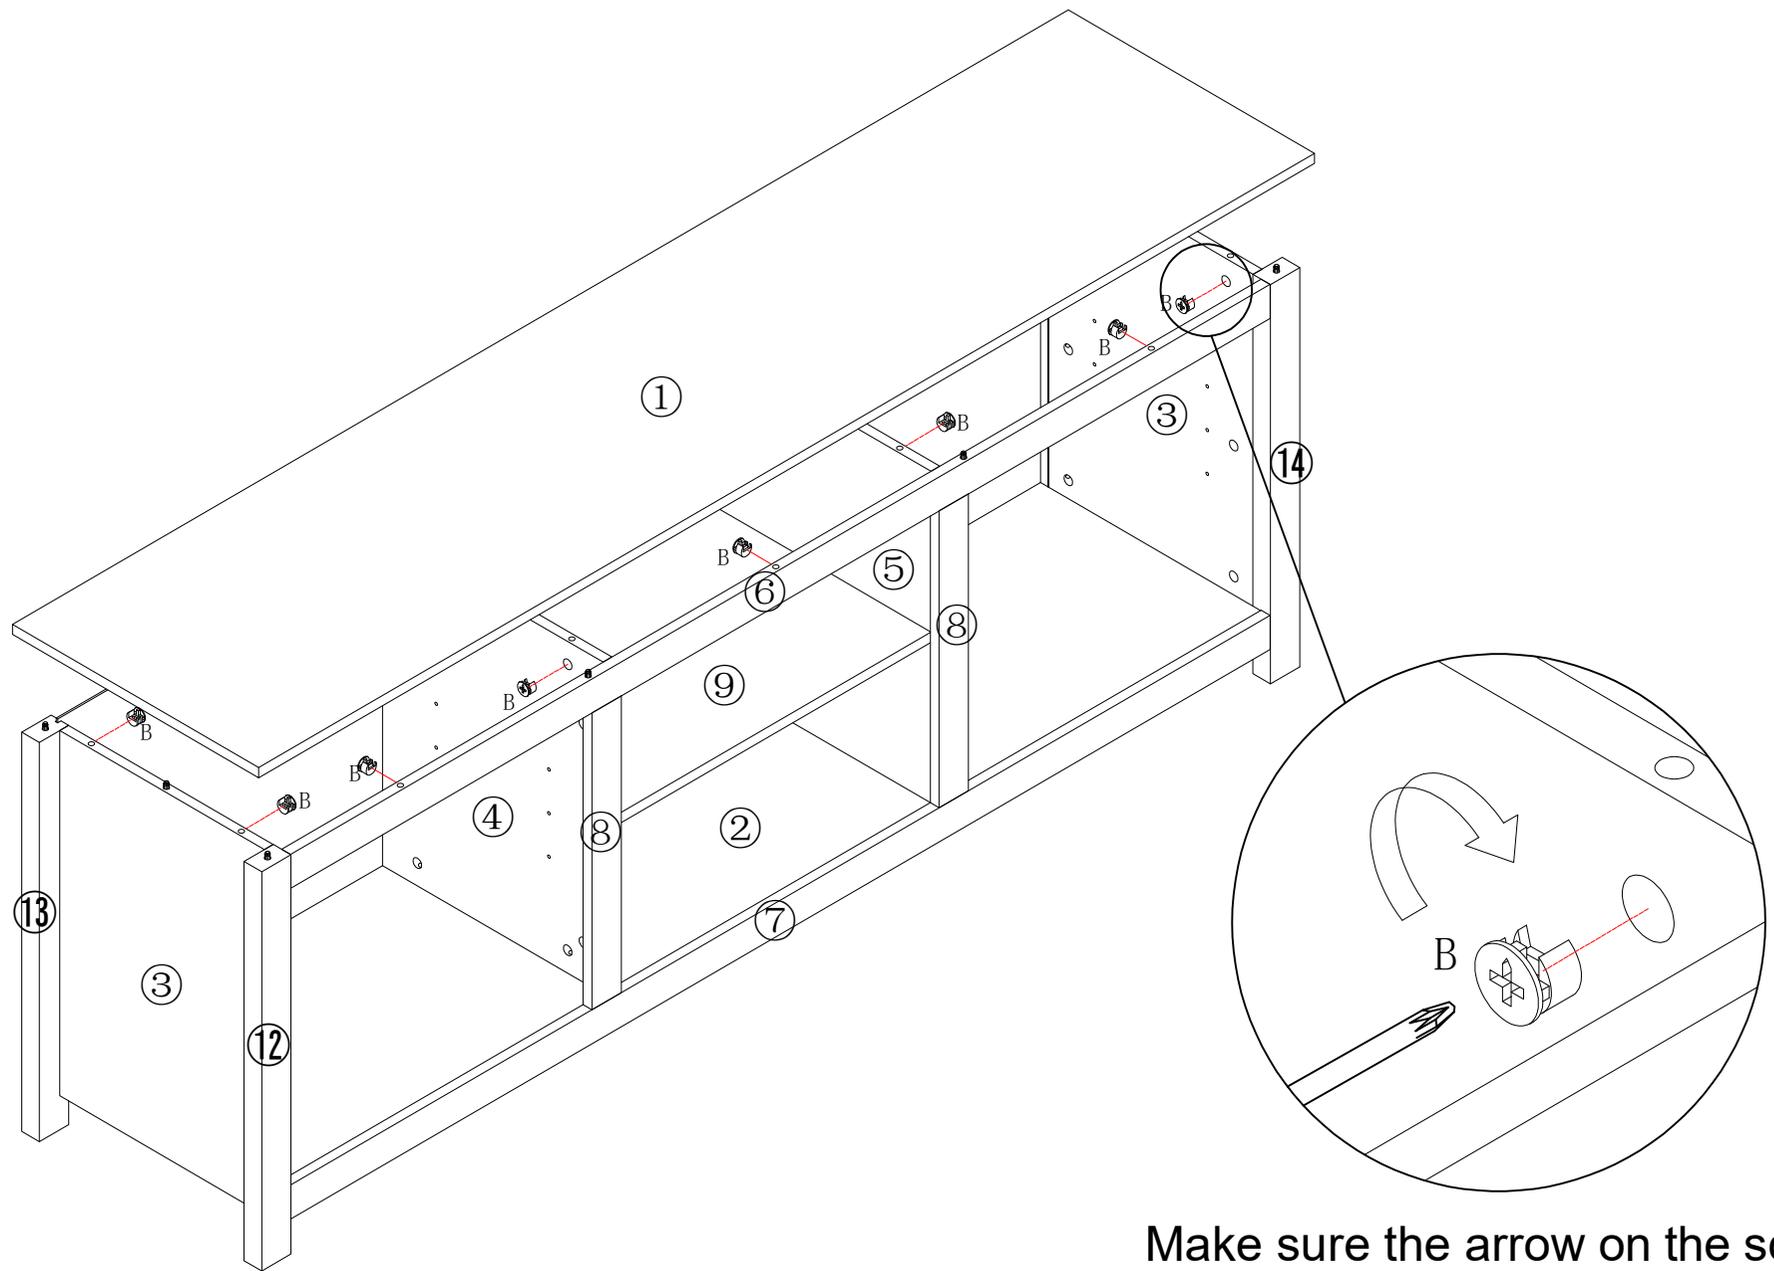


Make sure the arrow on the screw align to the hole on the side.




B*11 put B on board ③④⑤⑥

11

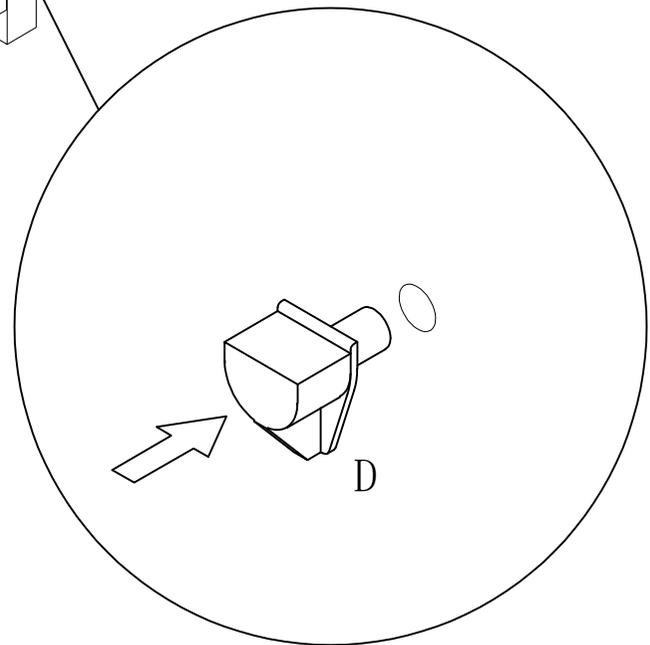
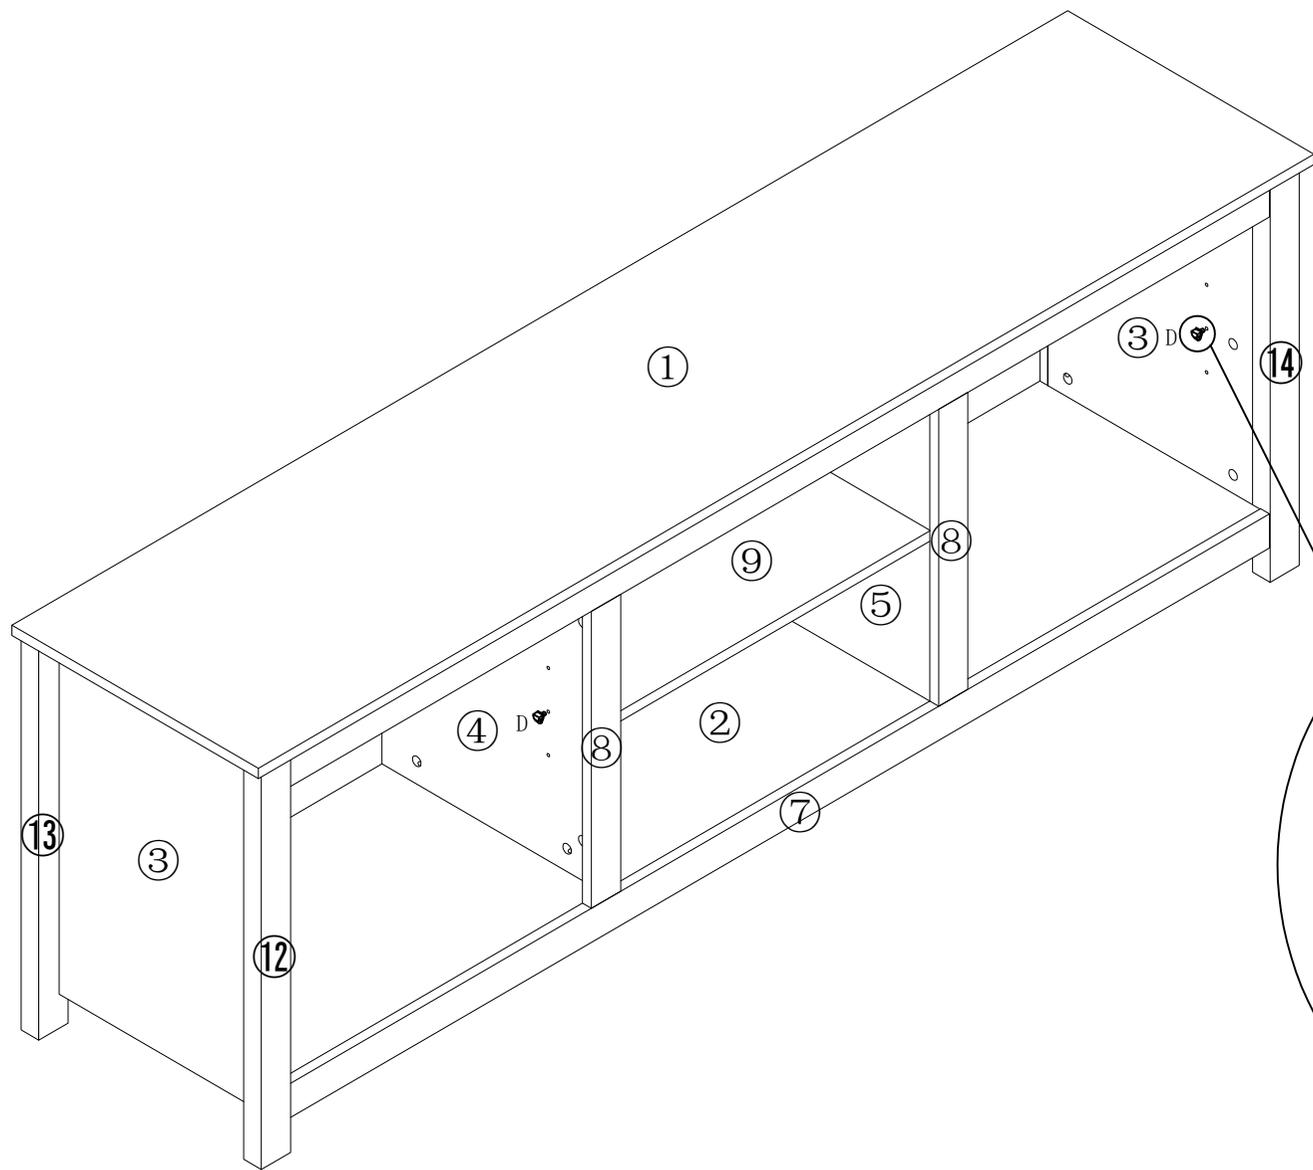


D*8

12

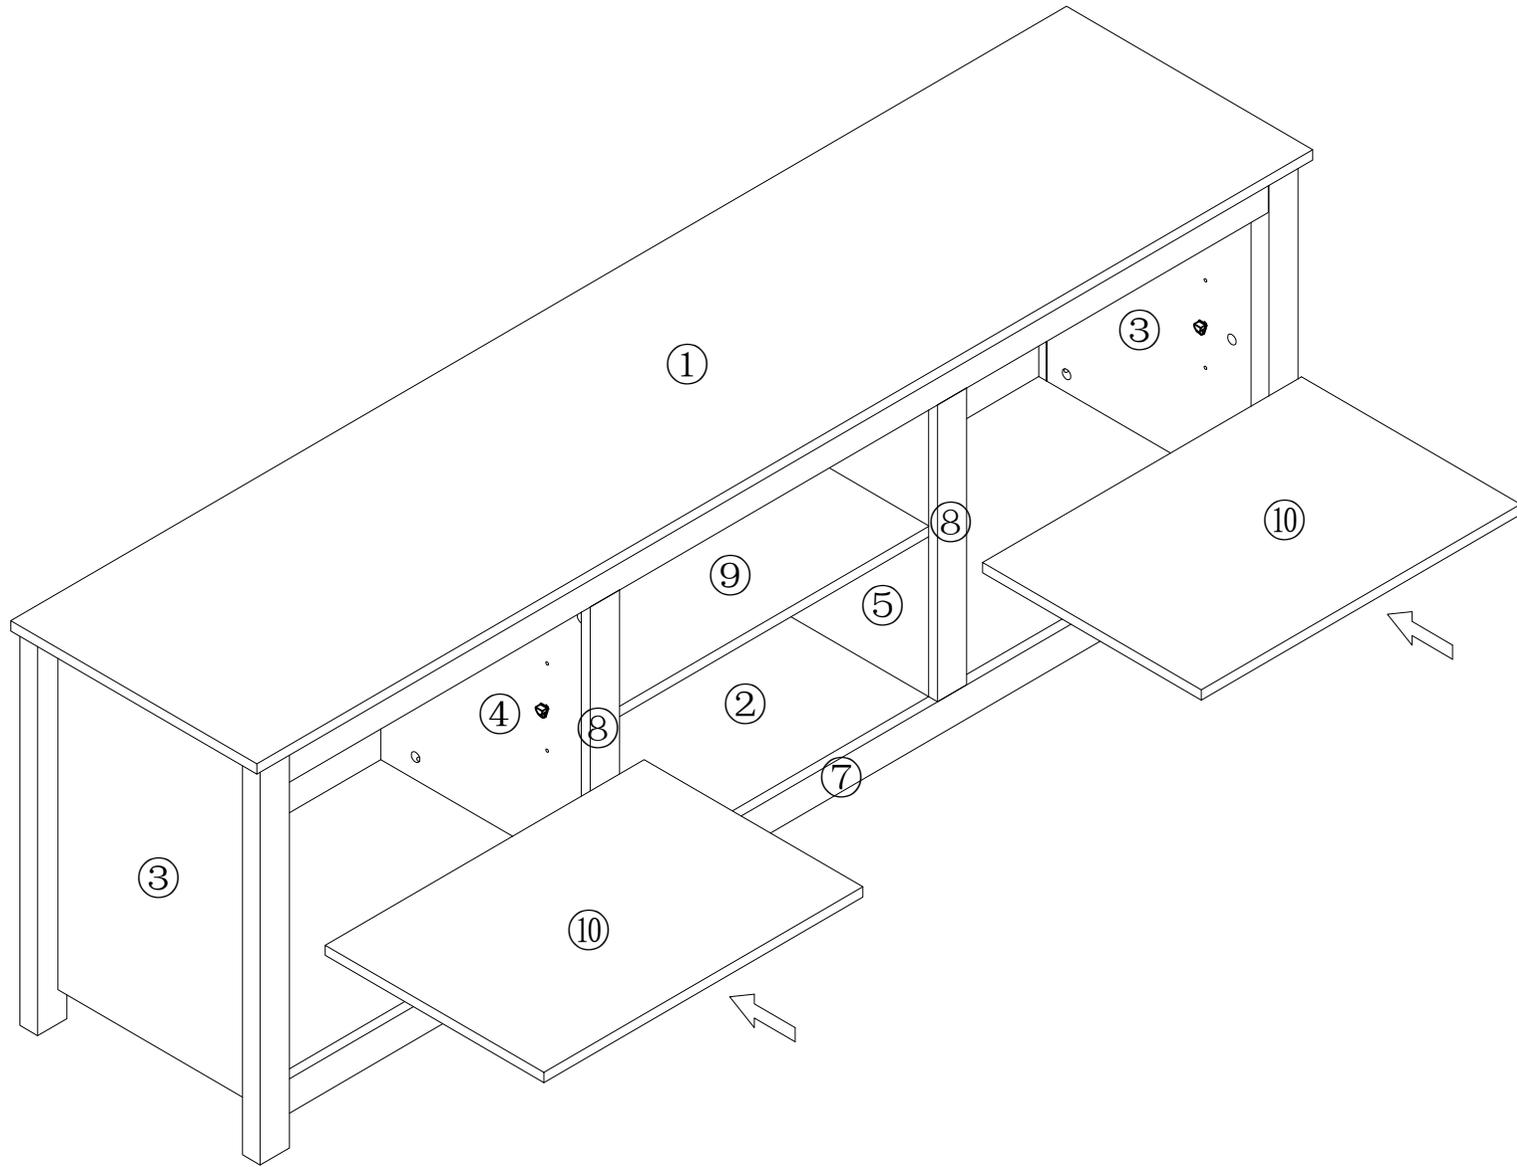

13


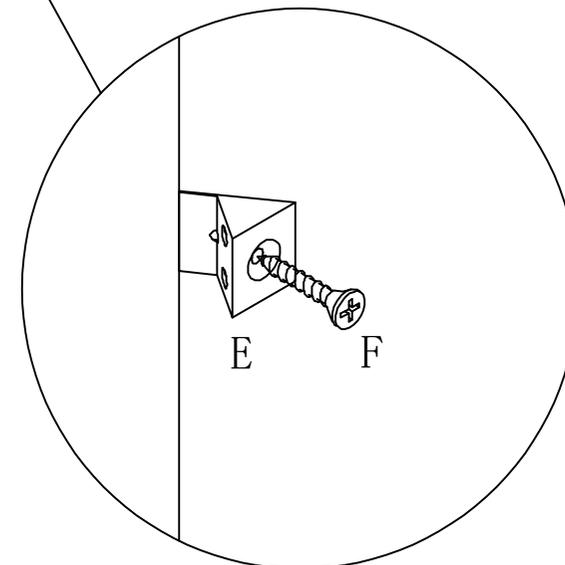
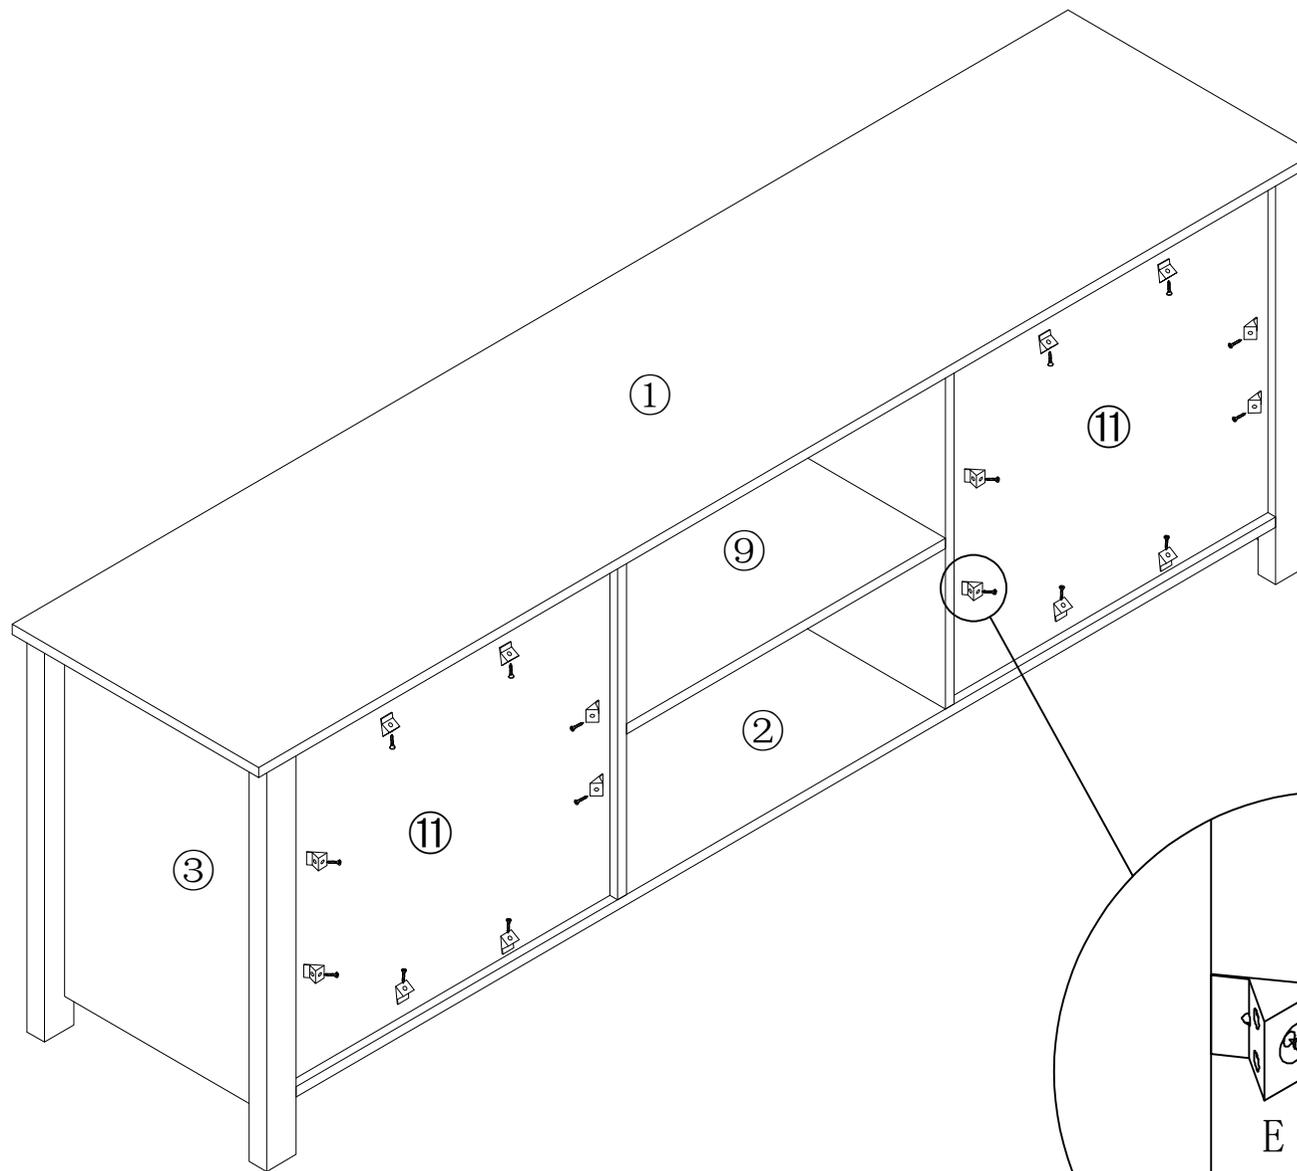


E*16




F*16

14

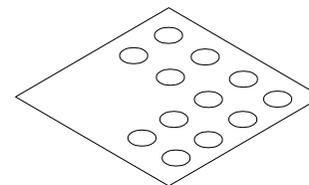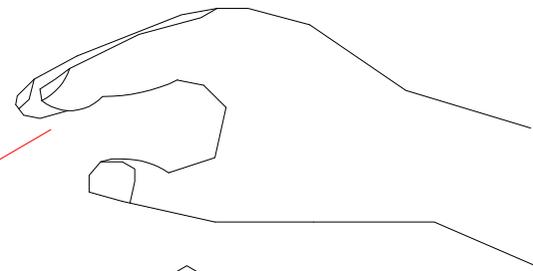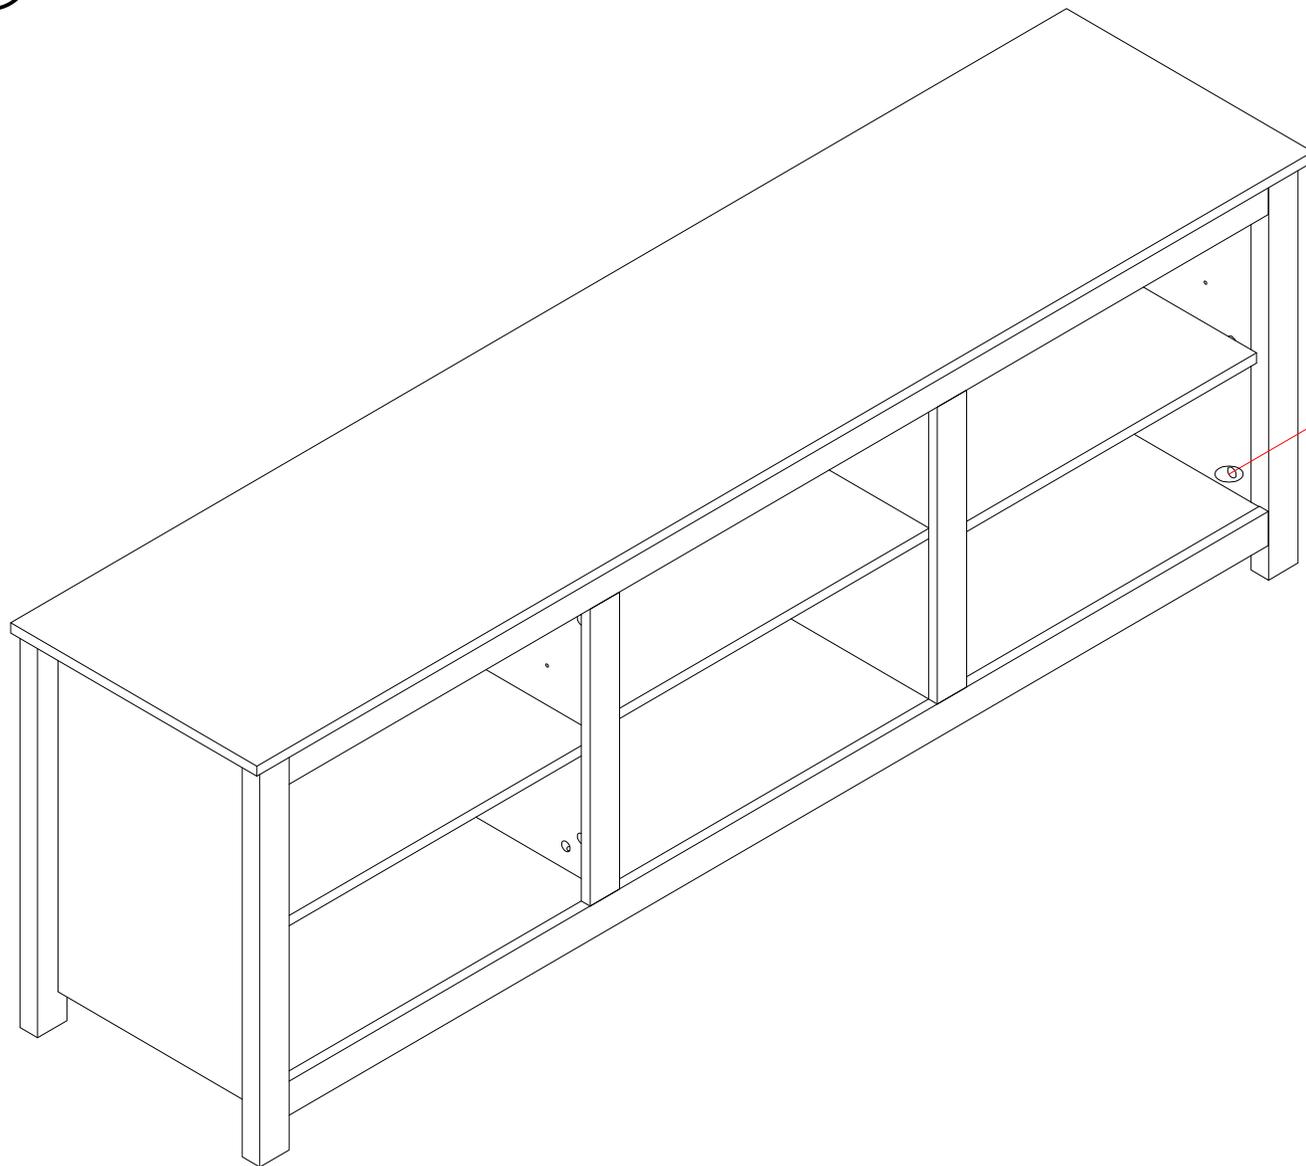


I

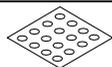

I*30

15

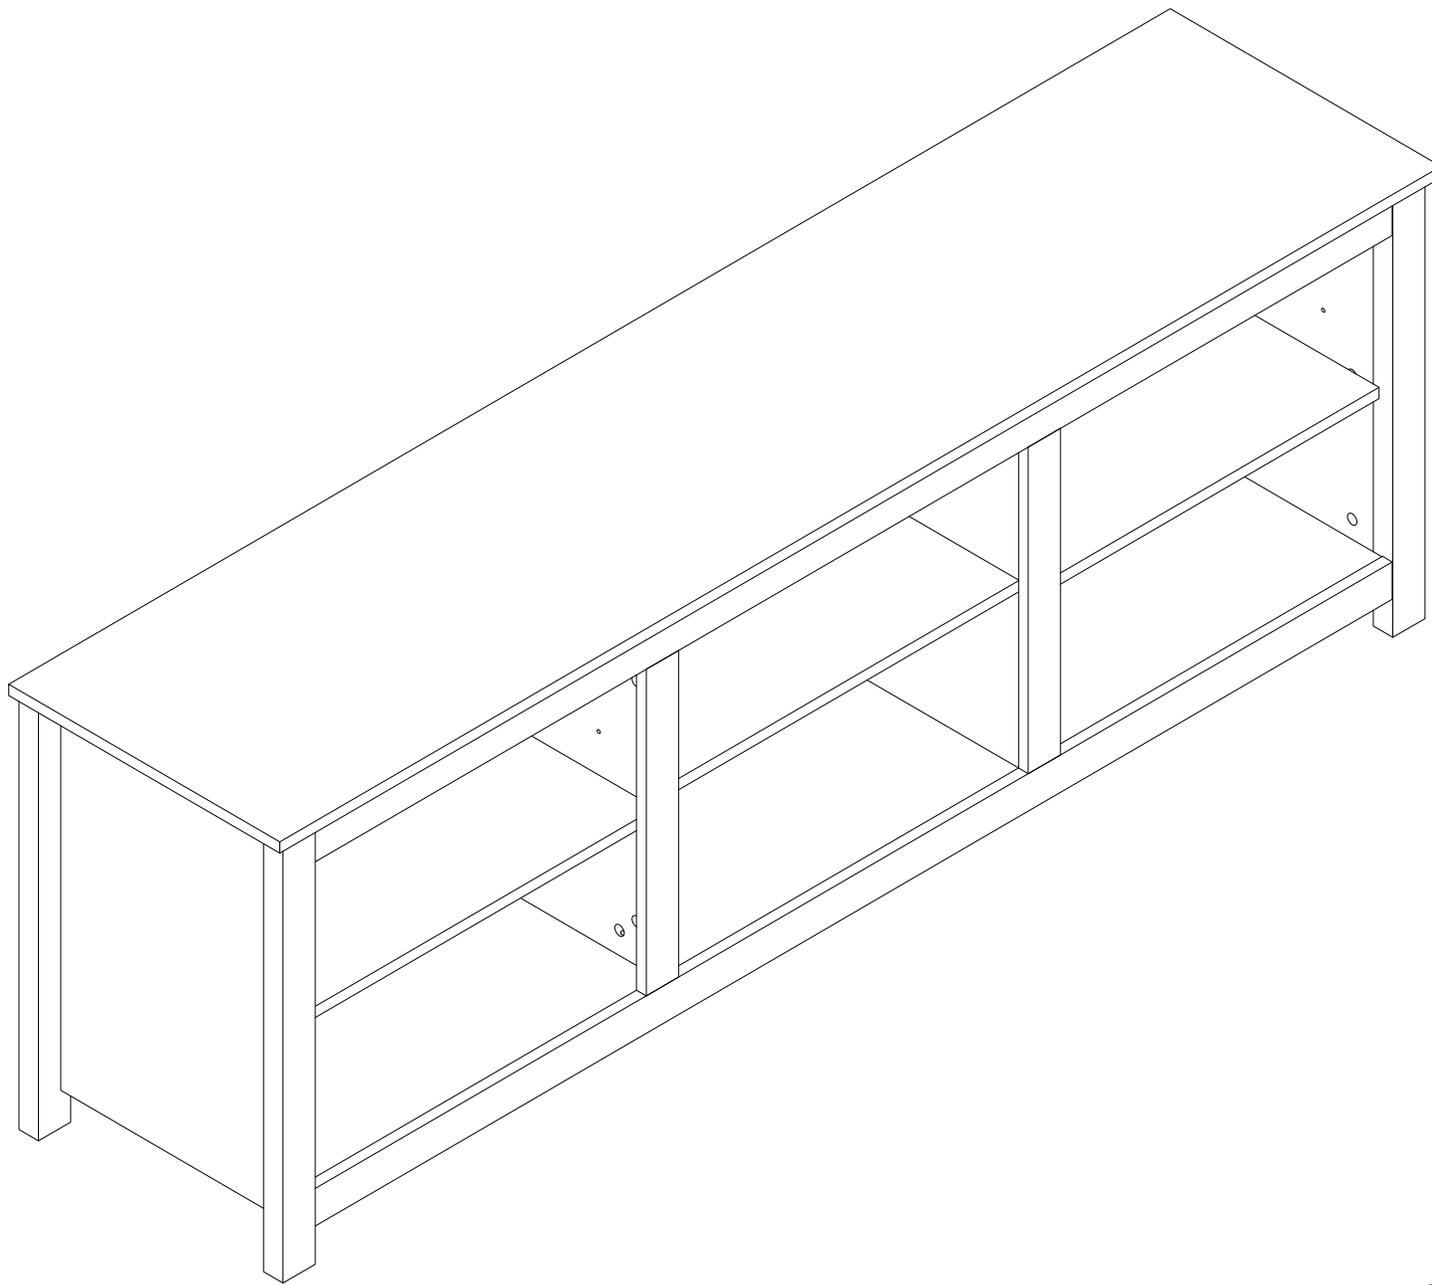

---END---