

P&Bhusri

PB-XSSS-1

Installation and operation Instructions



ELECTRIC
HEATED TOWEL RACK



Installation tutorial



After-sales service

Catalogue

Safety hazard prevention measures	01
Controller usage	02
Product related information	02
Product dimensions	03
Mounting Hole Pattern	03
Wiring diagram	04
Bill of Material	04
Exploded view	05
Installation Steps	06

| Safety hazard prevention measures

Instructions for safety

- Please read all the contents of this manual carefully before using this product.
- Keep this manual safe. If you transfer the product to a third party, please enclose this manual with the machine.
- Any operation not in accordance with the instructions may result in serious injury, property damage or damage to the product itself.

Note

- Avoid using harsh cleaning agents to clean the surface of the product, it is recommended to clean it with water.
- In the installation and operation of home appliances, it must be ensured that it is carried out in the case of power failure, and no live operation can be carried out to avoid electric shock and a threat to personal safety.
- To avoid injury to infants, appliances should be installed so that the lowest heated towel rack (or control section) is at least 600mm from the floor.
- The product connection must be grounded reliably.
- Do not install switches or fuses on ground wires and neutral wires, and do not connect ground wires to water mains, gas pipes or heating pipes.
- The connection with the power cord must be connected using a reliable terminal or ask a professional electrician to connect.

- Prolonged contact with skin may cause burns at low temperature ;
- Do not remove the labels on the upper and lower legs before installation ;
- The appliance is only used for dry washed textiles to prevent cleaning with corrosive materials ;
- Do not use water to extinguish a fire before the power is off ;
- The heater must not be placed directly under an electrical outlet ;


Do not use an electric towel rack if you notice any of the following, or if you are concerned about other safety issues. An explosion, a hissing sound, or a strong smell or smoke coming from inside the towel rack. These conditions generally occur when an internal electronic component fails in safe and controllable mode. However, the occurrence of these situations in general may also indicate that there is a security risk. Do not assume a safety failure, turn off the towel rack, cut off the power, and then contact the relevant technical support department for help.

Maintenance & Repair

- If you need to repair, please contact a professional electrician for repair treatment
- Wipe the product with water or water-based polishing wax.
- Cut off the power after use.
- The idle towel rack should not be electrified for a long time, which is easy to make the inside of the appliance damp and mildew or reduce the degree of insulation, and it should be run once every certain time.
- If the power cord is damaged, it must be replaced by the manufacturer, its maintenance department or a professional in a similar department in order to avoid danger.
- The switch should be placed in the shutdown position before the electrical appliance is powered on for trial operation. Power on, commissioning, shutdown and other processes should be strictly in accordance with the instructions pointed out in the order of operation, power after the occurrence of abnormal phenomenon, should immediately stop, and cut off the power.

Controller usage

Independent wall type thermostat

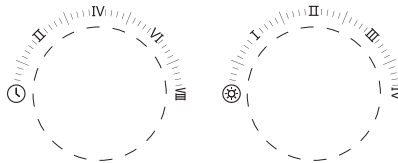

Left knob: Rotate the four gears to the right: II-2H, IV-4H, VI-6H, VIII-8H.

⌚ is long by default. Adjust the timing switch during the working process to restart the new timing.

Right knob: Rotate the four gears to the right respectively P1, P2, P3, P4.

0-OFF, I-20%, II-50%, III-70%, IV-100%.


At the end of each time, it is necessary to reset, readjust (rotate) the timing or work rate, and the product will work again.

Working status indicator: The product is powered on, and the product breathes (or flashes) when working.

Product related information


Product name	PB-XSSHINE&SHADOW-1-1700X475
Rated voltage	220V
Rated frequency	60Hz
Rated power	400W
Waterproofing grade	IPX4

Product dimensions

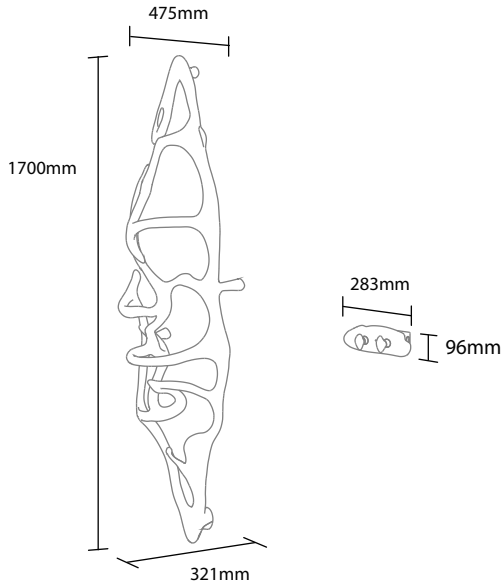


Mounting Hole Pattern

Subject to the actual product. The above is for design reference only.

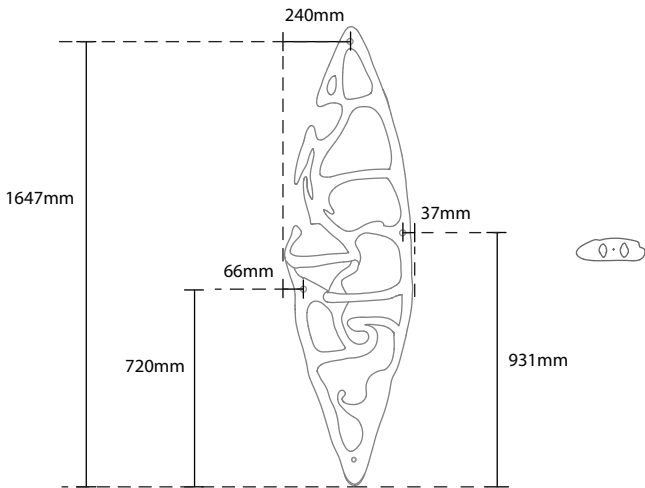





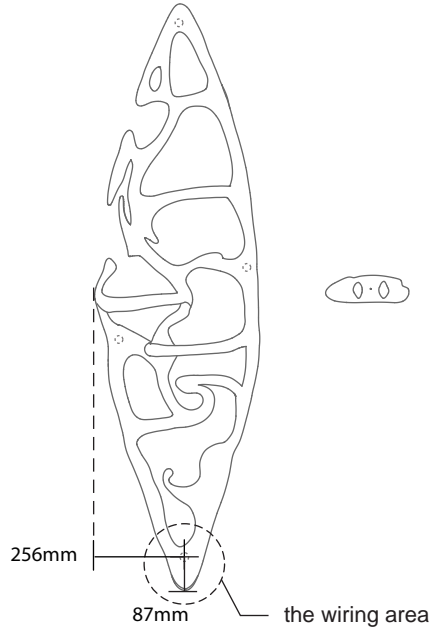






Wiring diagram


This illustration shows the front elevation view of the product.
 The wiring area is located directly below when facing the product's front elevation.
 Subject to the actual product. The above is for design reference only.



Bill of Material

①	 φ8X40	X3	②	 M5X12	X3	③	 ST4.8X38	X3	④	 M5X8	X3
⑤		X1	⑥	 M5X12	X1	⑦		X1	⑧	 M4X45	X2
⑨		X1	⑩	 M3X3	X2	⑪		X3			

Exploded view

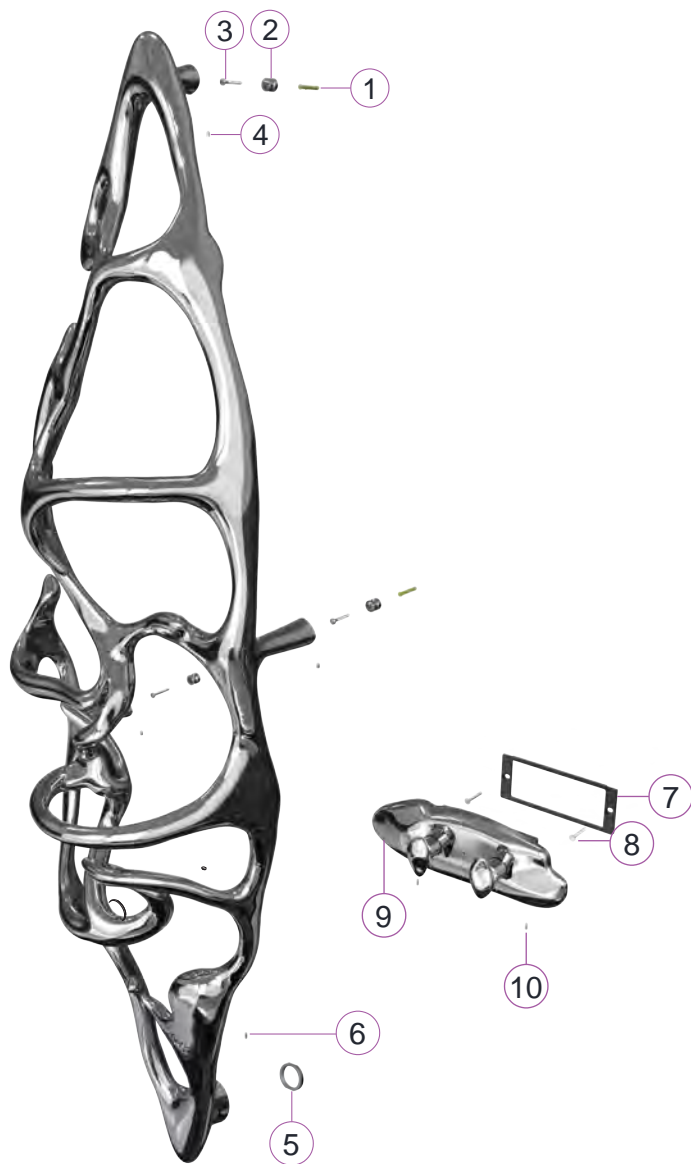

Installation steps

1.) Fix the joint of the embedded part

5



X1

Take off the protective cover



Assemble the fixing cover at the embedded joint and rotate it until it is flush with the wall surface



2.) Fix the auxiliary sticker

11



X3



Tear off the backing adhesive film at the middle position of the positioning sticker



Align the positioning sticker with the central hole of the wall-mounted part and stick it firmly

3.) Adjust to be horizontal

6



M5X12

X1



Retract the set screw of the bottom foot until it reaches the edge of the product



The protrusion of the power interface of the bottom foot must correspond to the recess of the power interface of the embedded part



4.) Mark the auxiliary sticker

After marking the position of the auxiliary sticker, the product needs to be removed



Give priority to ensuring that the product is properly connected to the interface of the embedded part, and avoid forceful installation.

5.) Mark the central point position



Note: During the marking process, please ensure that the positioning sticker does not shift. It is necessary to avoid the pre-installed wiring, water pipes, gas pipelines, etc. inside the wall

6.) Drill a hole



Use a $\varnothing 8\text{mm}$ drill bit to drill three fixing holes with a depth of 45mm at the positions marked on the positioning sticker

7.) Retract the set screw

④



X3



8.) Take out the wall-mounted part

②





X3





1		X3
---	---	----

9.) Installation of expanded rubber particles





2		X3	3		X3
				ST4.8X38	

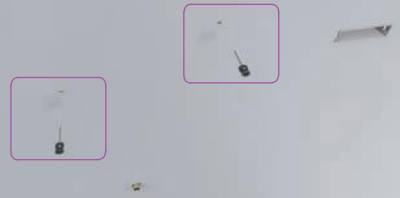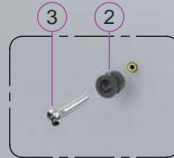

10.) Install top wall pieces

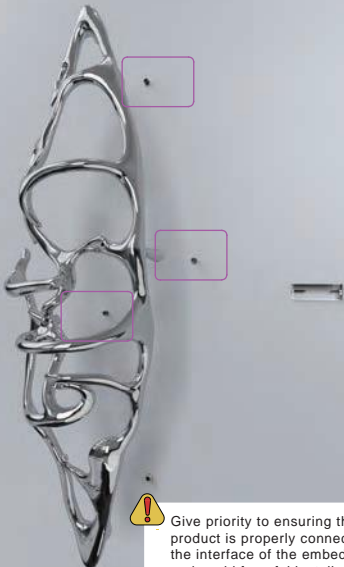


11.) Products on the Wall



 Give priority to ensuring that the product is properly connected to the interface of the embedded part, and avoid forceful installation.

4		X3	6		X1
M5X8			M5X12		


12.) Fixed products

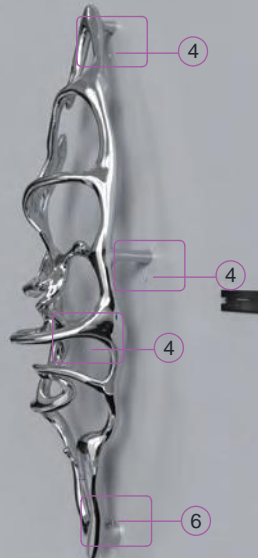

7		X1	8		X2
				M4X45	

13.) Fix the locking cover of the bottom plate

Please pre-build the cassette before tiling

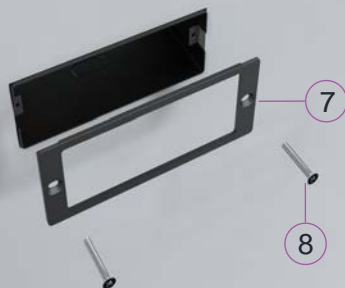


14.) Controller wiring



Note: On the thermostat, the 'OUT' marking indicates the output side for connecting the product power cable, while the 'IN' marking designates the input side for connecting the power supply cable.



The product power cord



The household input power cord



Please confirm the input and output wires in the junction box before making the wiring connections. Do not mix them up, and please have a professional electrician carry out the connection operation.

10		X2
	M3X3	

15.) Install the controller



10

After embedding the controller, tighten the set screw

16.) Complete installation



1. Please turn on the power switch to conduct a power test for confirmation that the product can work normally.
2. Please use a neutral cleaner to clean the surface of the product.



TOWEL RACK



Installation tutorial



After-sales service

After-sales service :

customer-service@pbhusri.com

WhatsApp : 07572282660

P&Bhusri Limited

Chase Business Centra 39-41 Chase Slde

