



HERCULUX
恒坤光电

Chengdu HercuLux Photoelectric
Technology Co.,Ltd
Product Approval

Approval number :

Customer :

Manufacturer : Chengdu HercuLux Photoelectric Technology Co.,Ltd

PN	Code	Product
HK-DX-62@30-15-D12-21-1g-1_PMMA	1. 01. 02566_PMMA	HK low glare 62@30-15 degree lens
HK-DX-62@30-24-D12-21-1g-1_PMMA	1. 01. 02548_PMMA	HK low glare 62@30-24 degree lens
HK-DX-62@30-36-D12-21-1g-1_PMMA	1. 01. 02573_PMMA	HK low glare 62@30-36 degree lens
HK-DX-62@30-60-D12-21-1g-1_PMMA	1. 01. 12805_PMMA	HK low glare 62@30-60 degree lens



Supplier confirmation				Client confirmation			
Proposed		DATE		Qualified ☐		DATE	
Project manager		DATE		Unqualified ☐			
Audit		DATE		Audit		DATE	
Approved		DATE		Approved		DATE	
Stamp		DATE		Stamp		DATE	

(Confirmation of acceptance by both parties must be signed and sealed)

Factory: Chengdu Shuangliu District, Iot industrial park 2 road HercuLux Photoelectric Park

Phone : 028-85887727 (801) 028-85887990 (801)

Fax : 028-85887730

<http://www.herculux.cn/>

Sales Dept: Shenzhen Nanshan District Nanshan Cloud Valley Innovation Industrial Park Comprehensive Service Building, 501-505

TEL: 0755-2937 1541

FAX: 0755-2907 5140

*Approval In duplicate , for both supplier and customer.

Disclaimer

Please use this product within the permitted range and environment according to the structure and material of the product. If the usage exceeds the recommended value, please test and verify by yourself. If the product is damaged due to out-of-range use, our company will not be responsible for the warranty.

Product material:

Customized products: The specifications and models of materials used are subject to the agreement between the two parties.

Conventional products: As a product that we continuously research and improve, under the premise of ensuring the quality and availability of the product, our company reserves the right to change the material. If the material specification and model change, without prior notice.

product data:

The measurement data and dimensional tolerances of the 2D drawings in the product data sheet of this acknowledgement are for reference only, and the final size shall prevail in kind.

The measurement data presented in this acknowledgment is a performance test of the product based on our company's internal test conditions and quality requirements, and the reported data is a typical value of the average results of multiple measurements. Therefore, in some cases, the actual product may deviate from the data provided. We reserve the right to notify you in advance of this data.

Product changes and improvements:

Changes and improvements of customized products are subject to the agreement between the two parties in the contract or technical documents.

As the conventional products that we continue to research and improve, our company reserves the right to make technical changes to its products, and reserves the right to make changes to data resulting from improvements without prior notice.

Operation cautions:

1. Please wear clean gloves during product assembly to prevent product surface contamination.
2. Try to avoid touching the optical surface of the lens when taking the lens.
3. When the surface of the product is polluted, please wipe it gently with a soft cotton cloth dipped in analytically pure neutral solvent. It is forbidden to use industrial solvents (alcohol, isopropanol, acetone, ether, toluene, xylene, carbon tetrachloride, MMA monomer, etc.) wipe.
4. The lens made of PC should not be exposed to direct sunlight in the storage and use environment. If the lens turns yellow or cracks due to long-term sunlight exposure, our company will not be responsible for the warranty.



HERCULUX
恒坤光电

Product Approval


TEL: 0755-2937 1541

FAX: 0755-2907 5140

<http://www.herculux.cn/>

Date updated: 2023/8/29


Product Picture:	
PN:	HK-DX-62@30-15-D12-21-1g-1_PMMA
Size(L*W*H/Φ*H):	Φ:62mm; H:30mm
Material:	PMMA
Effiency:	\
Temperature(Topr):	Material extreme temperature resistance : -40°C to +100°C long-term use temperature : -40°C to +80°C
FWHM:	15°、24°、36°、60°
Matched LES:	CREE 1820
Recommended MAX power:	30W

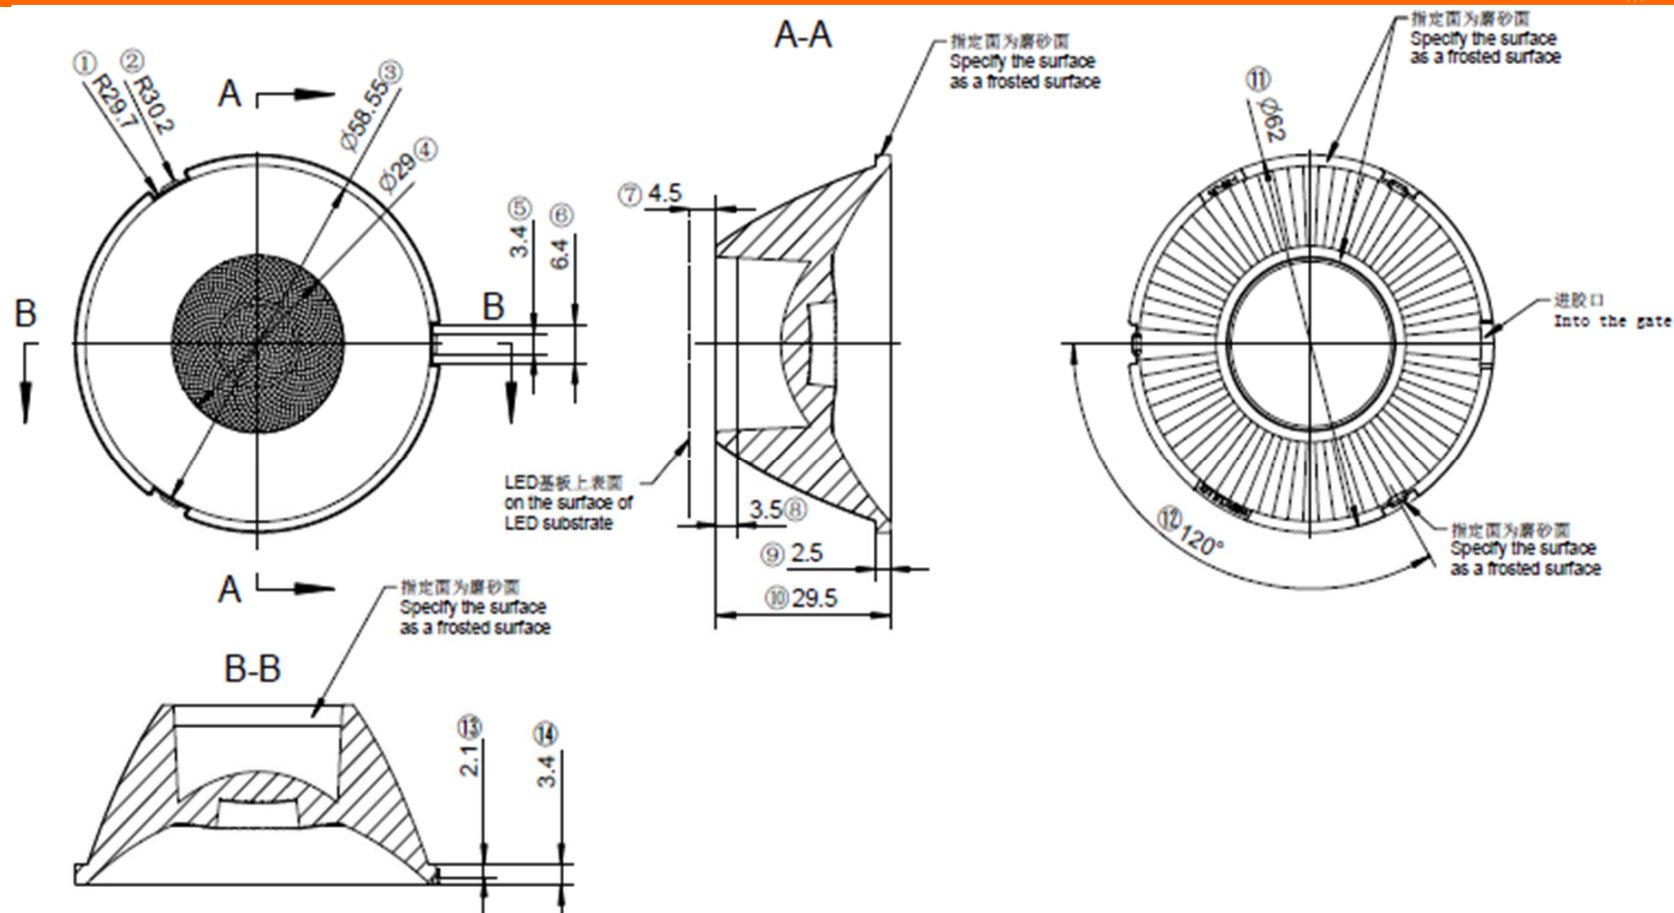**Technical remark:**

1. The 3D map is not indicated for rounded corners and draft angle.
2. The dimensional tolerances are not specified according to GB/T 14486 2008 MT5.
3. The surface has no flash, shrinkage, bubbles and other defects.

Optical design			HK low glare 62@30-15 degree lens			HK-DX-62@30-15-D12-21-1g-1_PMMA		
Structure design						1.01.02566_PMMA		
Review						umber of drawing	qty	weight
Validation			Material: PMMA			CDHK		


MT5 Tolerance table (mm)	Basic size	<3	3~10	24~65	65~140	140~250	250~450	>450		
	olerance valu	±0.1	±0.15	±0.35	±0.50	±0.80	±1.2	±2.0		

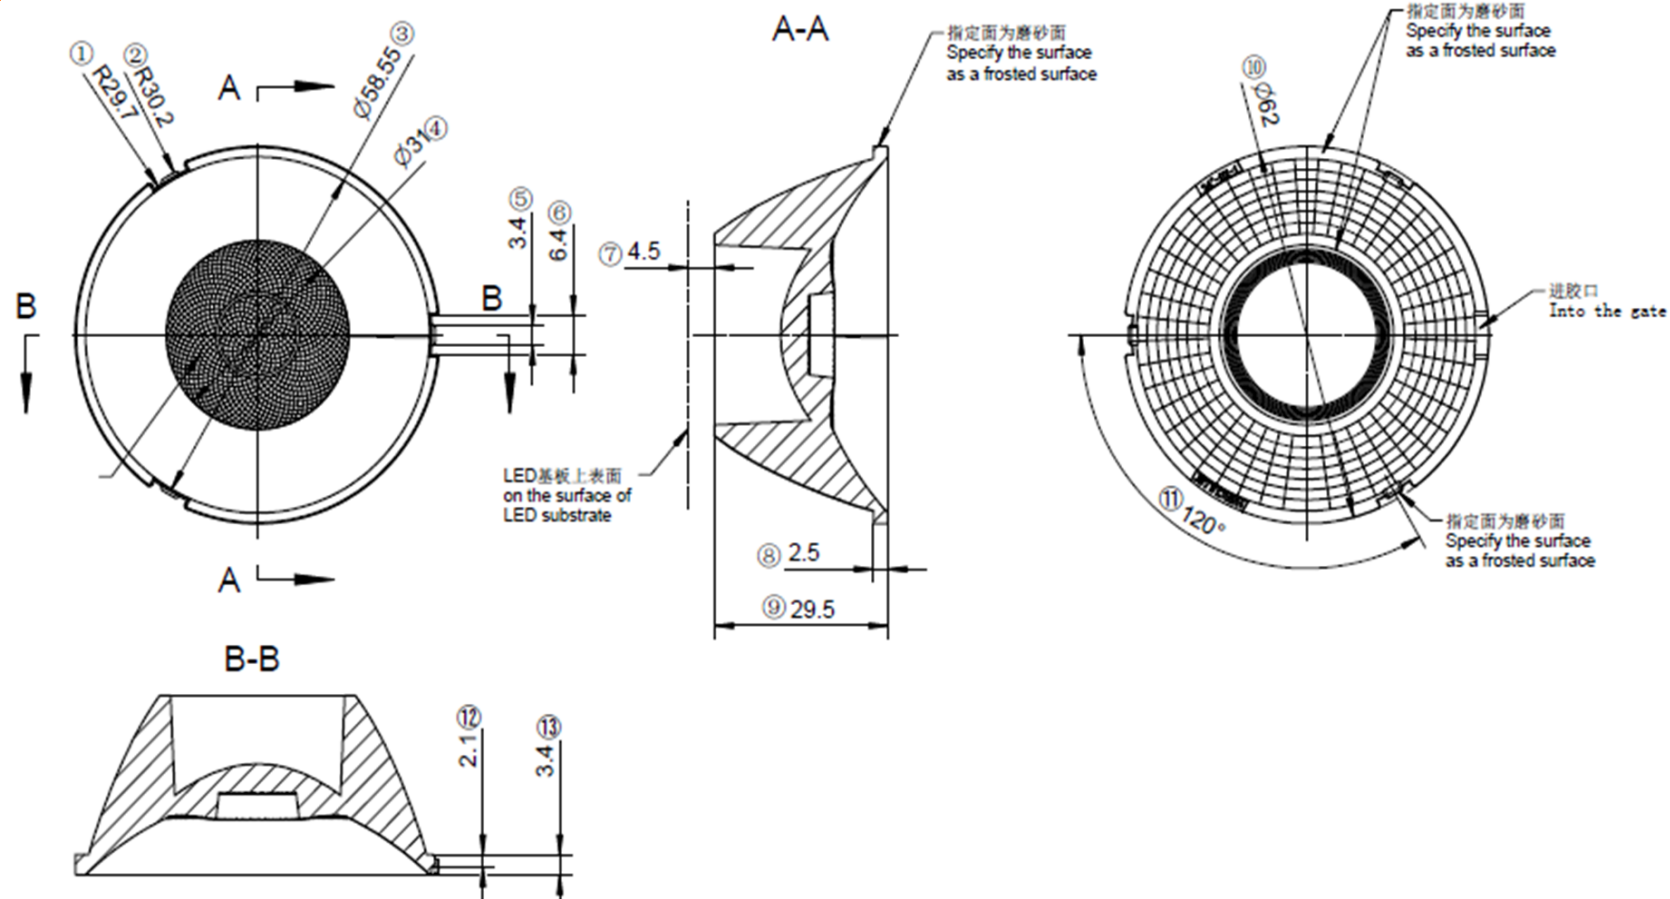**Technical remark:**

1. The 3D map is not indicated for rounded corners and draft angle.
2. The dimensional tolerances are not specified according to GB/T 14486 2008 MT5.
3. The surface has no flash, shrinkage, bubbles and other defects.

Optical design			HK low glare 62@30-24 degree lens	HK-DX-62@30-24-D12-21-1g-1_PMMA		
Structure design				1.01.02548_PMMA		
Review				umber of drawing	qty	weight
Validation			Material:	PMMA		CDHK


MT5 Tolerance table (mm)	Basic size	<3	3~10	24~65	65~140	140~250	250~450	>450			
	olerance valu	±0.1	±0.15	±0.35	±0.50	±0.80	±1.2	±2.0			

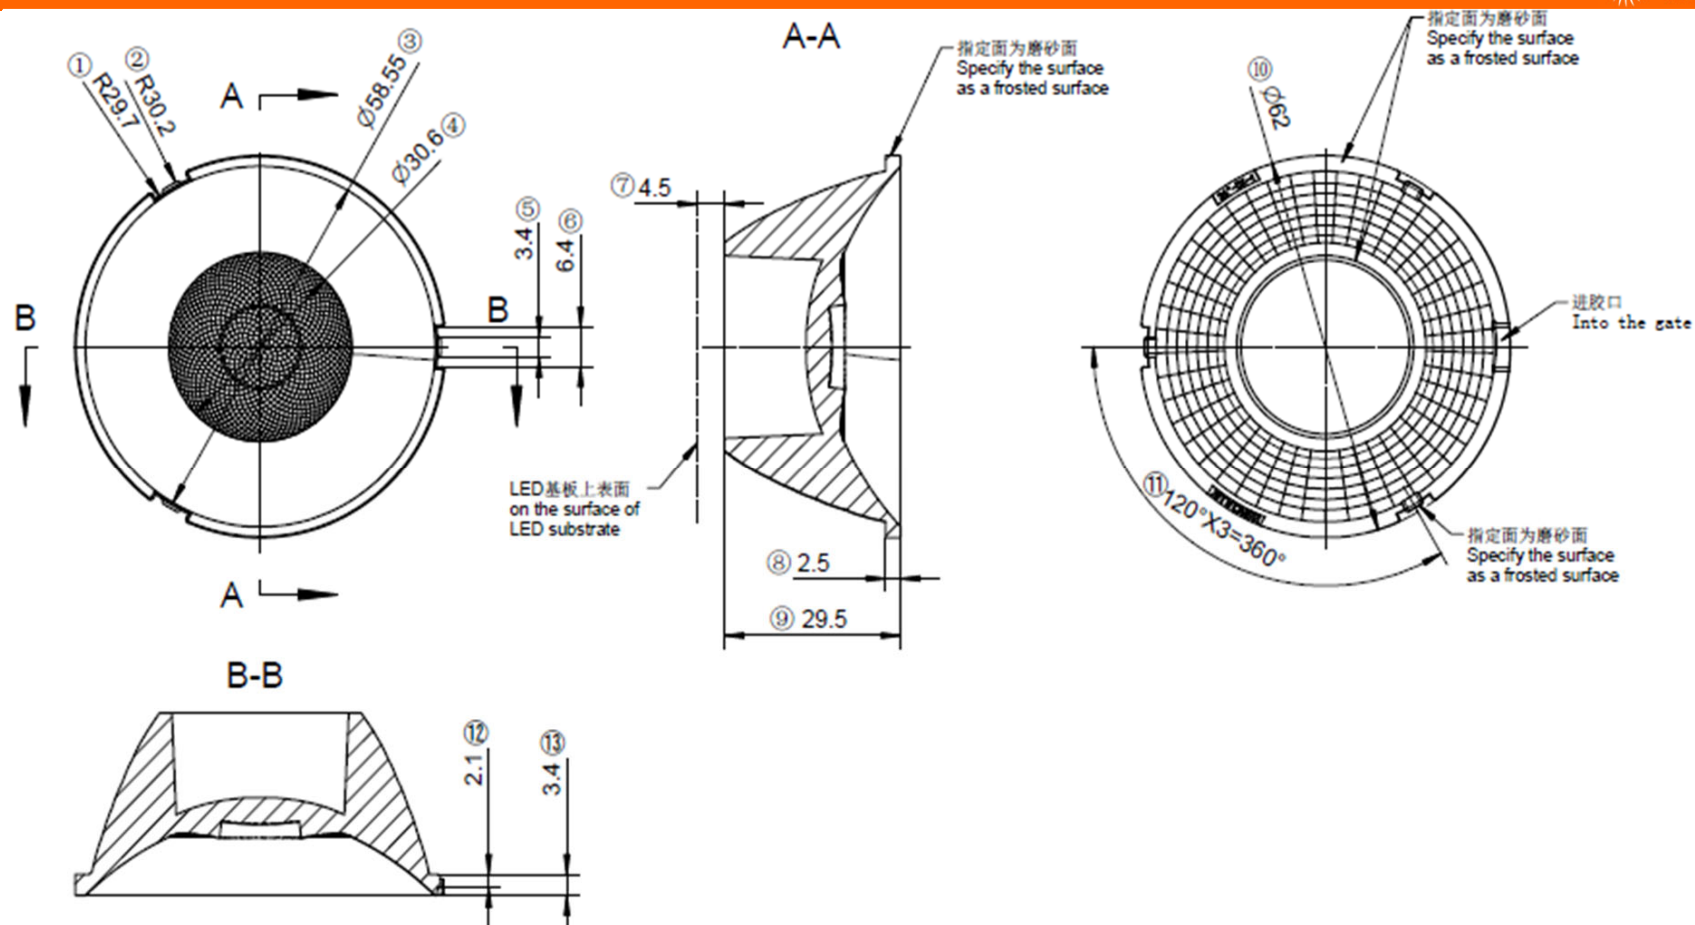**Technical remark:**

1. The 3D map is not indicated for rounded corners and draft angle.
2. The dimensional tolerances are not specified according to GB/T 14486 2008 MT5.
3. The surface has no flash, shrinkage, bubbles and other defects.

Optical design			HK low glare 62@30-36 degree lens			HK-DX-62@30-36-D12-21-1g-1_PMMA		
Structure design						1.01.02573_PMMA		
Review						umber of drawing	qty	weight
Validation			Material:		PMMA	CDHK		

MT5 Tolerance table (mm)	Basic size	<3	3~10	24~65	65~140	140~250	250~450	>450		
	olerance valu	±0.1	±0.15	±0.35	±0.50	±0.80	±1.2	±2.0		

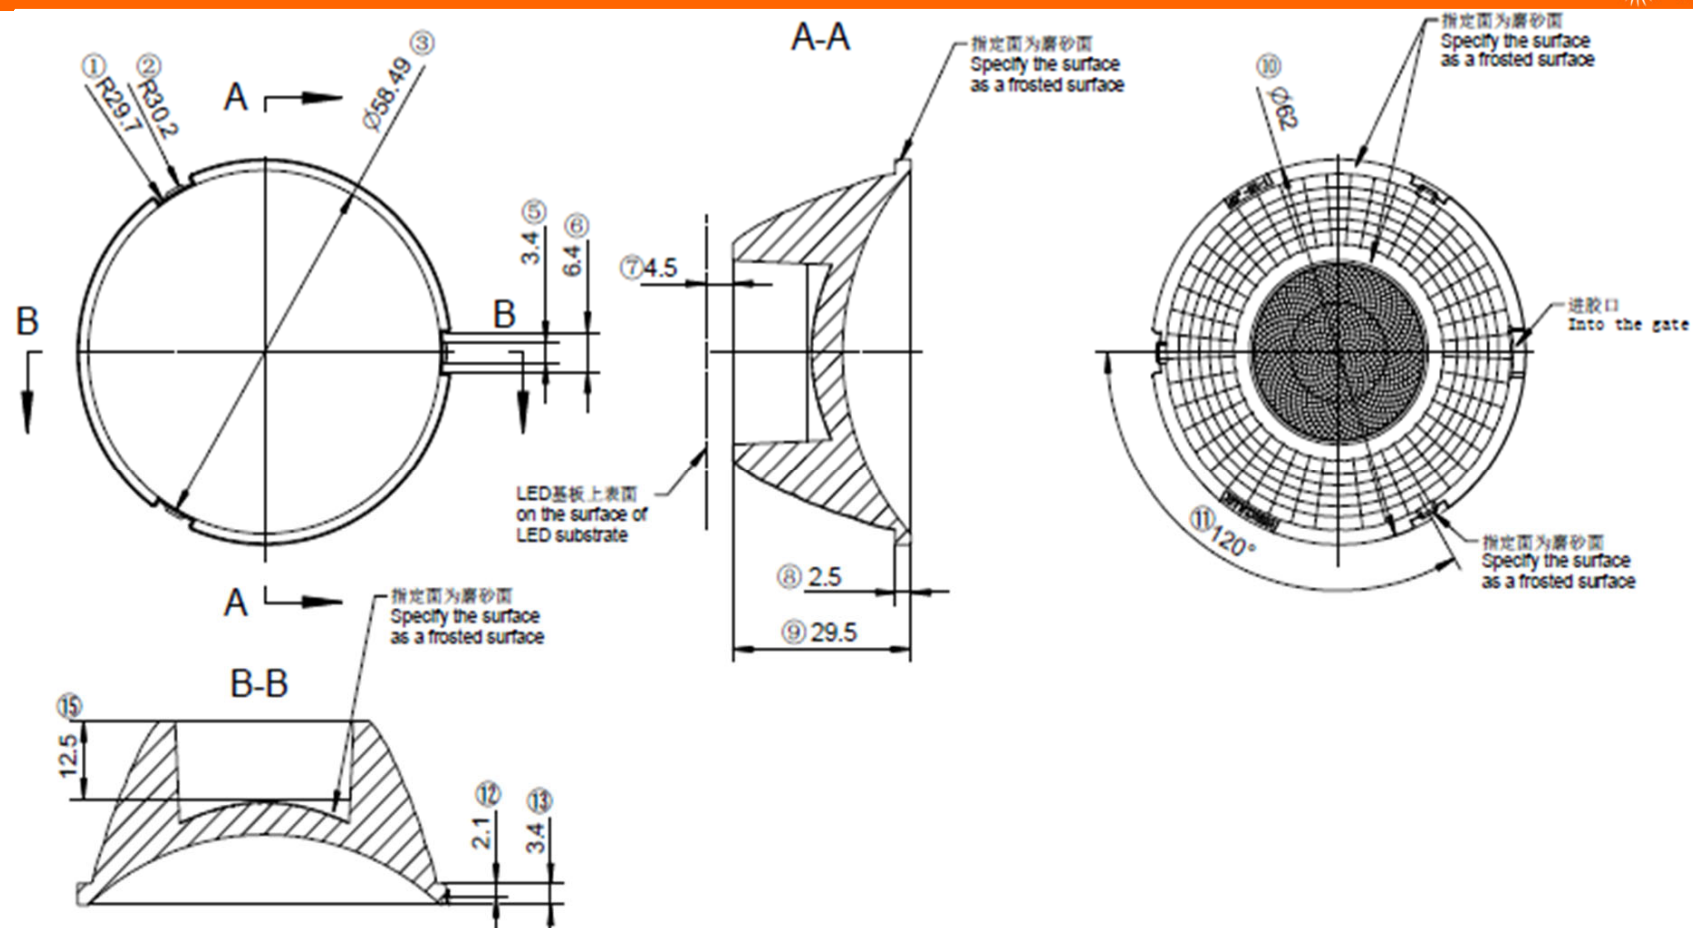**Technical remark:**



1. The 3D map is not indicated for rounded corners and draft angle.
2. The dimensional tolerances are not specified according to GB/T 14486 2008 MT5.
3. The surface has no flash, shrinkage, bubbles and other defects.

Optical design			HK low glare 62@30-60 degree lens	HK-DX-62@30-60-D12-21-1g-1_PMMA		
Structure design				1.01.12805_PMMA		
Review				umber of drawing	qty	weight
Validation			Material:	PMMA		CDHK

MT5 Tolerance table (mm)	Basic size	<3	3~10	24~65	65~140	140~250	250~450	>450			
	olerance valu	±0.1	±0.15	±0.35	±0.50	±0.80	±1.2	±2.0			



GO1900L GONIOPHOTOMETER Test Report Page 1 Of 2

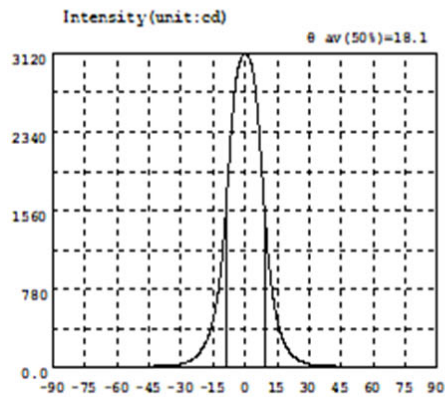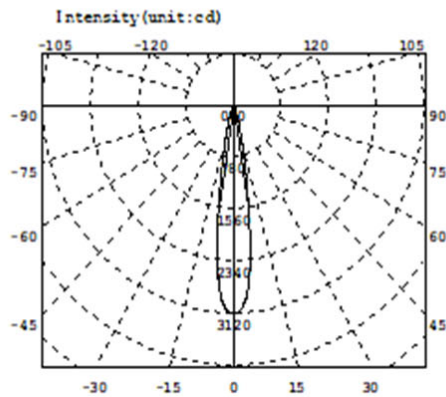

Intensity data: (deg , cd) C0-180

A	I	A	I	A	I	A	I	A	I	A	I
-90.0	0.8022	-58.5	8.178	-27.0	58.07	4.5	2831	36.0	22.44	67.5	4.523
-88.5	0.7566	-57.0	8.820	-25.5	73.30	6.0	2516	37.5	20.46	69.0	4.106
-87.0	0.7455	-55.5	9.441	-24.0	93.73	7.5	2069	39.0	18.80	70.5	3.693
-85.5	0.7698	-54.0	10.03	-22.5	122.4	9.0	1606	40.5	17.40	72.0	3.283
-84.0	0.9302	-52.5	10.66	-21.0	160.6	10.5	1198	42.0	16.19	73.5	2.813
-82.5	1.168	-51.0	11.33	-19.5	207.7	12.0	882.9	43.5	15.13	75.0	2.512
-81.0	1.438	-49.5	12.02	-18.0	268.6	13.5	648.5	45.0	14.14	76.5	2.135
-79.5	1.698	-48.0	12.68	-16.5	351.1	15.0	479.7	46.5	13.24	78.0	1.807
-78.0	1.981	-46.5	13.45	-15.0	465.2	16.5	359.1	48.0	12.49	79.5	1.506
-76.5	2.310	-45.0	14.35	-13.5	627.5	18.0	266.9	49.5	11.80	81.0	1.236
-75.0	2.660	-43.5	15.32	-12.0	849.2	19.5	203.8	51.0	11.11	82.5	1.008
-73.5	3.002	-42.0	16.36	-10.5	1155	21.0	155.6	52.5	10.46	84.0	0.7912
-72.0	3.468	-40.5	17.57	-9.0	1559	22.5	119.0	54.0	9.819	85.5	0.6409
-70.5	3.868	-39.0	19.03	-7.5	2013	24.0	92.08	55.5	9.255	87.0	0.5800
-69.0	4.277	-37.5	20.79	-6.0	2462	25.5	71.74	57.0	8.626	88.5	0.5851
-67.5	4.697	-36.0	22.80	-4.5	2804	27.0	56.84	58.5	7.963	90.0	0.5354
-66.0	5.103	-34.5	25.49	-3.0	2995	28.5	46.00	60.0	7.363		
-64.5	5.685	-33.0	28.87	-1.5	3078	30.0	38.30	61.5	6.749		
-63.0	6.319	-31.5	33.26	0.0	3115	31.5	32.59	63.0	6.126		
-61.5	6.963	-30.0	39.01	1.5	3087	33.0	28.34	64.5	5.491		
-60.0	7.559	-28.5	47.05	3.0	3005	34.5	25.04	66.0	4.940		

Electricity Parameter:



Current I: 0.1000A Power: 3.299W
Voltage V: 33.00V PF: 1.000

Optical Parameter (Distance=2.410m):

Equivalent Luminous flux: $\Phi_{eff}=437.51\text{lm}$ Efficiency: $Eff=132.64\text{lm/W}$
Diffuse angle: @ (25%): 25.0deg @ (50%): 18.1deg @ (75%): 13.0deg @ (50%): 18.1deg
Diffuse angle: @ (25%): 25.0deg @ (50%): 18.1deg @ (75%): 13.0deg @ (50%): 18.1deg
Imax=3115cd (C=0.0deg, G=0.0deg) C0-180Plane Imax= 3115cd(G=0.0deg)
C0-180Plane IO= 3115cd



GO1900L GONIOPHOTOMETER Test Report Page 1 Of 2

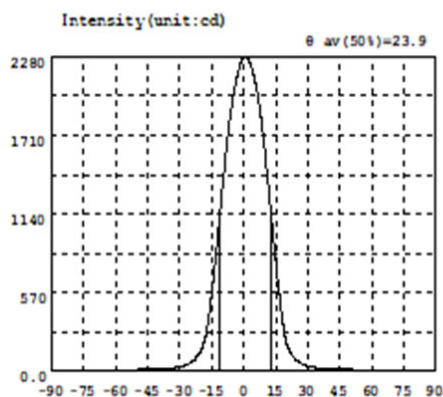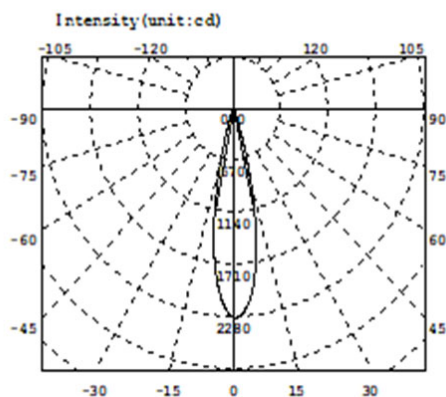

Intensity data: (deg , cd) C0-180

A	I	A	I	A	I	A	I	A	I	A	I
-90.0	0.7344	-58.5	8.086	-27.0	46.26	4.5	2157	36.0	22.85	67.5	4.854
-88.5	0.7228	-57.0	8.767	-25.5	57.10	6.0	2050	37.5	20.68	69.0	4.445
-87.0	0.7113	-55.5	9.418	-24.0	72.10	7.5	1902	39.0	18.84	70.5	4.014
-85.5	0.7341	-54.0	9.969	-22.5	93.34	9.0	1723	40.5	17.37	72.0	3.579
-84.0	0.8032	-52.5	10.50	-21.0	123.7	10.5	1512	42.0	16.15	73.5	3.059
-82.5	0.9503	-51.0	11.04	-19.5	168.6	12.0	1281	43.5	15.13	75.0	2.607
-81.0	1.122	-49.5	11.59	-18.0	245.9	13.5	1033	45.0	14.26	76.5	2.218
-79.5	1.317	-48.0	12.15	-16.5	377.7	15.0	793.9	46.5	13.50	78.0	1.882
-78.0	1.589	-46.5	12.73	-15.0	553.1	16.5	578.2	48.0	12.85	79.5	1.647
-76.5	1.918	-45.0	13.38	-13.5	766.4	18.0	392.3	49.5	12.23	81.0	1.368
-75.0	2.279	-43.5	14.13	-12.0	1002	19.5	239.0	51.0	11.66	82.5	1.144
-73.5	2.661	-42.0	15.01	-10.5	1249	21.0	162.6	52.5	11.07	84.0	0.9337
-72.0	3.164	-40.5	16.02	-9.0	1479	22.5	120.2	54.0	10.49	85.5	0.7638
-70.5	3.616	-39.0	17.24	-7.5	1694	24.0	91.58	55.5	9.923	87.0	0.7031
-69.0	4.056	-37.5	18.80	-6.0	1878	25.5	71.20	57.0	9.304	88.5	0.6589
-67.5	4.465	-36.0	20.65	-4.5	2025	27.0	56.46	58.5	8.596	90.0	0.7424
-66.0	4.844	-34.5	22.89	-3.0	2143	28.5	45.77	60.0	7.916		
-64.5	5.390	-33.0	25.38	-1.5	2228	30.0	38.00	61.5	7.279		
-63.0	6.058	-31.5	28.53	0.0	2273	31.5	32.54	63.0	6.625		
-61.5	6.746	-30.0	32.75	1.5	2274	33.0	28.37	64.5	5.969		
-60.0	7.431	-28.5	38.44	3.0	2231	34.5	25.39	66.0	5.356		

Electricity Parameter:



Current I: 0.1000A Power: 3.299W
Voltage V: 33.00V PF: 1.000

Optical Parameter(Distance=2.410m):

Equivalent Luminous flux: $\Phi_{eff}=440.9lm$ Efficiency: $Eff=133.67lm/W$
Diffuse angle: @ (25%): 31.3deg @ (50%): 23.9deg @ (75%): 16.4deg @ (50%): 23.9deg
Diffuse angle: @ (25%): 31.3deg @ (50%): 23.9deg @ (75%): 16.5deg @ (50%): 23.9deg
Imax=2278cd (C=0.0deg,G=1.0deg) C0-180Plane Imax= 2278cd(G=1.0deg)
C0-180Plane I0= 2273cd



G01900L GONIOPHOTOMETER Test Report Page 1 Of 2

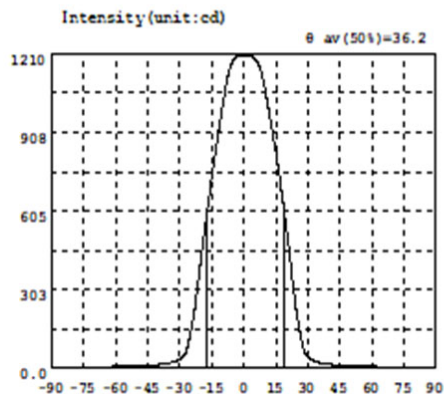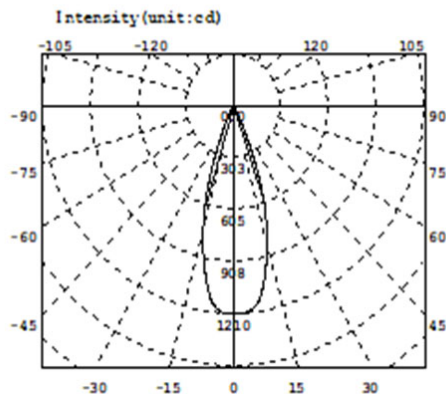

Intensity data:(deg , cd) C0-180



A	I	A	I	A	I	A	I	A	I	A	I
-90.0	0.7005	-58.5	7.097	-27.0	63.97	4.5	1197	36.0	20.67	67.5	4.340
-88.5	0.7003	-57.0	7.652	-25.5	112.0	6.0	1182	37.5	18.29	69.0	3.823
-87.0	0.6776	-55.5	8.216	-24.0	178.3	7.5	1155	39.0	16.38	70.5	3.409
-85.5	0.6882	-54.0	8.726	-22.5	258.4	9.0	1112	40.5	14.95	72.0	2.941
-84.0	0.7234	-52.5	9.199	-21.0	352.6	10.5	1049	42.0	13.78	73.5	2.537
-82.5	0.8391	-51.0	9.661	-19.5	454.6	12.0	979.7	43.5	12.78	75.0	2.156
-81.0	0.9341	-49.5	10.18	-18.0	554.7	13.5	906.1	45.0	12.05	76.5	1.801
-79.5	1.192	-48.0	10.60	-16.5	646.0	15.0	829.7	46.5	11.49	78.0	1.522
-78.0	1.418	-46.5	11.01	-15.0	732.7	16.5	746.9	48.0	11.05	79.5	1.273
-76.5	1.677	-45.0	11.49	-13.5	818.1	18.0	662.4	49.5	10.62	81.0	1.057
-75.0	1.962	-43.5	12.13	-12.0	902.3	19.5	569.8	51.0	10.20	82.5	0.8889
-73.5	2.322	-42.0	12.90	-10.5	980.8	21.0	470.9	52.5	9.661	84.0	0.7289
-72.0	2.688	-40.5	13.87	-9.0	1054	22.5	361.4	54.0	9.208	85.5	0.5943
-70.5	3.149	-39.0	15.08	-7.5	1120	24.0	258.5	55.5	8.700	87.0	0.5374
-69.0	3.514	-37.5	16.64	-6.0	1163	25.5	176.3	57.0	8.149	88.5	0.5233
-67.5	3.884	-36.0	18.58	-4.5	1188	27.0	108.1	58.5	7.577	90.0	0.5219
-66.0	4.391	-34.5	21.06	-3.0	1202	28.5	62.60	60.0	7.041		
-64.5	4.964	-33.0	23.96	-1.5	1203	30.0	43.61	61.5	6.531		
-63.0	5.520	-31.5	27.88	0.0	1200	31.5	33.46	63.0	5.999		
-61.5	6.088	-30.0	33.89	1.5	1199	33.0	27.50	64.5	5.436		
-60.0	6.586	-28.5	44.02	3.0	1200	34.5	23.60	66.0	4.892		

Electricity Parameter:

Current I: 0.1000A Power: 3.299W
Voltage V: 33.00V PF: 1.000

Optical Parameter(Distance=2.410m):

Equivalent Luminous flux: $\Phi_{eff}=444.4lm$ Efficiency: $Eff=134.72lm/W$
Diffuse angle: $\theta(25\%): 45.1deg \theta(50\%): 36.2deg \theta(75\%): 25.4deg \theta(50\%): 36.2deg$
Diffuse angle: $\theta(25\%): 45.1deg \theta(50\%): 36.2deg \theta(75\%): 25.6deg \theta(50\%): 36.2deg$
 $I_{max}=1204cd (C=0.0deg, C=-2.0deg)$ C0-180Plane $I_{max}=1204cd (C=-2.0deg)$
C0-180Plane $I_0=1200cd$

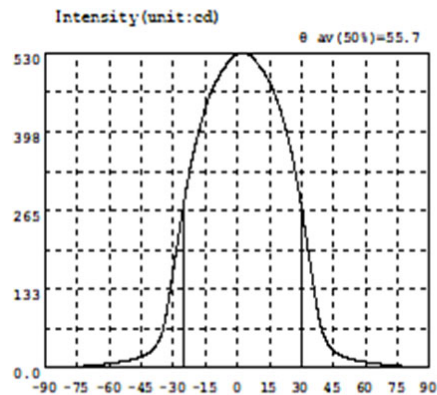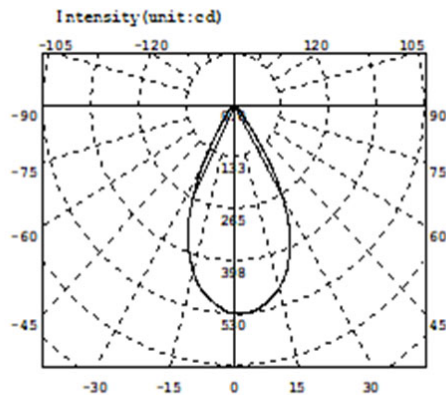

Intensity data:(deg , cd) C0-180


A	I	A	I	A	I	A	I	A	I	A	I
-90.0	0.8474	-58.5	7.996	-27.0	233.0	4.5	528.6	36.0	130.7	67.5	6.252
-88.5	0.8362	-57.0	8.788	-25.5	266.6	6.0	525.2	37.5	97.52	69.0	5.568
-87.0	0.8024	-55.5	9.518	-24.0	299.2	7.5	520.4	39.0	71.47	70.5	4.850
-85.5	0.7912	-54.0	10.30	-22.5	328.8	9.0	514.0	40.5	53.85	72.0	4.293
-84.0	0.7810	-52.5	11.17	-21.0	354.0	10.5	507.4	42.0	42.46	73.5	3.783
-82.5	0.8156	-51.0	12.17	-19.5	376.8	12.0	499.8	43.5	34.38	75.0	3.301
-81.0	1.008	-49.5	13.49	-18.0	398.1	13.5	491.0	45.0	28.78	76.5	2.896
-79.5	1.251	-48.0	15.18	-16.5	418.3	15.0	481.1	46.5	24.64	78.0	2.464
-78.0	1.461	-46.5	16.71	-15.0	436.0	16.5	469.8	48.0	21.55	79.5	2.069
-76.5	1.734	-45.0	18.55	-13.5	452.5	18.0	456.5	49.5	19.15	81.0	1.743
-75.0	2.020	-43.5	20.85	-12.0	466.5	19.5	441.3	51.0	17.25	82.5	1.406
-73.5	2.361	-42.0	23.75	-10.5	478.5	21.0	423.3	52.5	15.63	84.0	1.145
-72.0	2.748	-40.5	27.70	-9.0	488.4	22.5	403.3	54.0	14.28	85.5	0.9586
-70.5	3.168	-39.0	33.12	-7.5	497.4	24.0	383.1	55.5	12.96	87.0	0.7459
-69.0	3.625	-37.5	40.84	-6.0	505.7	25.5	360.7	57.0	11.65	88.5	0.6577
-67.5	4.144	-36.0	51.97	-4.5	513.1	27.0	333.0	58.5	10.64	90.0	0.5591
-66.0	4.674	-34.5	69.37	-3.0	520.3	28.5	302.9	60.0	9.803		
-64.5	5.313	-33.0	96.44	-1.5	525.7	30.0	271.4	61.5	9.025		
-63.0	6.036	-31.5	129.9	0.0	528.3	31.5	236.8	63.0	8.261		
-61.5	6.708	-30.0	164.8	1.5	529.7	33.0	201.1	64.5	7.550		
-60.0	7.366	-28.5	199.1	3.0	529.7	34.5	165.7	66.0	6.884		

Electricity Parameter:

Current I: 0.1000A Power: 3.299W
Voltage V: 33.00V PF: 1.000

Optical Parameter(Distance=2.410m):


Equivalent Luminous flux: $\Phi_{eff}=432.2lm$ Efficiency: $Eff=131.02lm/W$
Diffuse angle: @ (25%): 67.2deg @ (50%): 55.7deg @ (75%): 40.9deg @ (50%): 55.7deg
Diffuse angle: @ (25%): 67.3deg @ (50%): 55.9deg @ (75%): 41.1deg @ (50%): 55.9deg
Imax=529.9cd (C=0.0deg,G=2.0deg) C0-180Plane Imax= 529.9cd(G=2.0deg)
C0-180Plane I0= 528.3cd

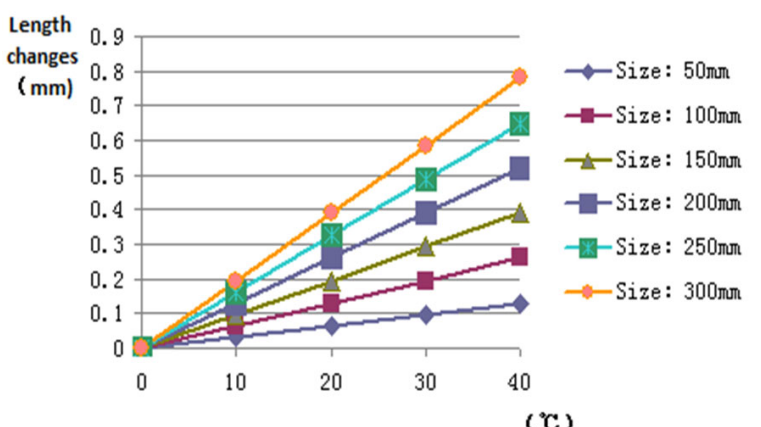1.Size		Standard size	Upper Size limit	Lower size limit	Test result1	Test result2	Test result3	Test result4	Judgment	Remarks
	highly	29.5			29.66	29.68	29.66	29.68		
	The diameter of	62			62	61.96	62	62		Test environment: In 20℃ -25℃ environment to achieve thermal equilibrium after the test.
	The thickness of the	2.5			2.56	2.58	2.55	2.54		
	Gate shear can not affect the appearance of the lamp									
See attachment "Appearance Inspection Standards"										
2.Appearance Quality		See attachment "Appearance Inspection Standards"	E	No burr	No burr	No burr	No burr	OK		
				No stains	No stains	No stains	No stains			
3.Material		PMMA				Color	Transparent		OK	
4.Optical index	Testing LED	CREE 1820								
	The recommended size and power rating of the LED light source recommended for this lens should be comparable to the source of the test, if it is required to be out of range. According to the heat dissipation capability of the lamp and the actual conditions of the use environment, the lens should be fully tested and tested to prevent the lens life.									
	FWHM	See light distribution curve								
	K-value			7.1	7	7.1	7.1			
	angle			18.1°	18.3°	18°	18.1°			
	Efficiency			92.50%	92.00%	92.30%	91.70%			
Facula	See the signature sample									
Comprehensive judgment		Qualified								
Remarks:		PC product size changes with temperature table 								
Precautions.										
1. Please wear clean gloves during the lens assembly process to prevent the lens surface from being contaminated.										
2. Try to avoid touching the total reflection surface when taking the lens.										
3. The lens surface is contaminated. Only use a soft cotton cloth dipped in analytically pure neutral solvent to wipe gently. Do not wipe with industrial solvents (alcohol, isopropanol, acetone, ether, toluene, xylene, carbon tetrachloride, MMA Body, etc.).										
4. The working temperature of the lens should be within the temperature resistance limit of the lens material. Exceeding the temperature resistance limit will cause the lens to crack or melt and affect the service life of the lens. It is recommended that										

1.Size		Standard size	Upper Size limit	Lower size limit	Test result1	Test result2	Test result3	Test result4	Judgment	Remarks
	highly	29.5			29.71	29.74	29.75	29.71		
	The diameter of	62			61.96	61.76	61.9	61.78		Test environment: In 20℃ -25℃ environment to achieve thermal equilibrium after the test.
	The thickness of the	2.5			2.6	2.61	2.66	2.65		
	Gate shear can not affect the appearance of the lamp									
	See attachment "Appearance Inspection Standards"									
2.Appearance Quality		See attachment "Appearance Inspection Standards"	E	No burr	No burr	No burr	No burr	OK		
				No stains	No stains	No stains	No stains			
3.Material		PMMA				Color	Transparent		OK	
4.Optical index	Testing LED	CREE 1820								
	The recommended size and power rating of the LED light source recommended for this lens should be comparable to the source of the test, if it is required to be out of range. According to the heat dissipation capability of the lamp and the actual conditions of the use environment, the lens should be fully tested and tested to prevent the lens life.									
	FWHM	See light distribution curve								
	K-value					5.1	5.1	5	5	
	angle					23.9°	24°	24.1°	24.2°	
	Efficiency					93.00%	92.30%	92.50%	92.70%	
	Facula	See the signature sample								
Comprehensive judgment		Qualified								
Remarks:		1、Tool Number: V-Vernier Caliper 2D-Quadratic H-Height Gauge M-Tool Microscope P-Needle T-Thick Gauge R-Radius Gauge E-Visual. 2、Ambient temperature on the size of the product refer to the table on the right PC product size changes with temperature table Length changes (mm) 0.9 0.8 0.7 0.6 0.5 0.4 0.3 0.2 0.1 0 0 10 20 30 40 Size: 50mm Size: 100mm Size: 150mm Size: 200mm Size: 250mm Size: 300mm								
Precautions.		1. Please wear clean gloves during the lens assembly process to prevent the lens surface from being contaminated. 2. Try to avoid touching the total reflection surface when taking the lens. 3. The lens surface is contaminated. Only use a soft cotton cloth dipped in analytically pure neutral solvent to wipe gently. Do not wipe with industrial solvents (alcohol, isopropanol, acetone, ether, toluene, xylene, carbon tetrachloride, MMA Body, etc.). 4. The working temperature of the lens should be within the temperature resistance limit of the lens material. Exceeding the temperature resistance limit will cause the lens to crack or melt and affect the service life of the lens. It is recommended that								

1.Size		Standard size	Upper Size limit	Lower size limit	Test result1	Test result2	Test result3	Test result4	Judgment	Remarks
	highly	29.5			29.78	29.71	29.7	29.78		
	The diameter of	62			61.92	61.9	61.9	61.86		Test environment: In 20℃ -25℃ environment to achieve thermal equilibrium after the test.
	The thickness of the	2.5			2.6	2.61	2.6	2.6		
	Gate shear can not affect the appearance of the lamp									
	See attachment "Appearance Inspection Standards"									
2.Appearance Quality		See attachment "Appearance Inspection Standards"	E	No burr	No burr	No burr	No burr	OK		
				No stains	No stains	No stains	No stains			
3.Material		PMMA				Color	Transparent		OK	
4.Optical index	Testing LED	CREE 1820								
	The recommended size and power rating of the LED light source recommended for this lens should be comparable to the source of the test, if it is required to be out of range. According to the heat dissipation capability of the lamp and the actual conditions of the use environment, the lens should be fully tested and tested to prevent the lens life.									
	FWHM	See light distribution curve								
	K-value				2.7	2.7	2.5	2.6		
	angle				36.2°	36°	37°	36.5°		
	Efficiency				93.50%	93.00%	93.10%	92.80%		
Facula	See the signature sample									
Comprehensive judgment		Qualified								
Remarks:		1、Tool Number: V-Vernier Caliper 2D-Quadratic H-Height Gauge M-Tool Microscope P-Needle T-Thick Gauge R-Radius Gauge E-Visual. 2、Ambient temperature on the size of the product refer to the table on the right PC product size changes with temperature table Length changes (mm) 0.9 0.8 0.7 0.6 0.5 0.4 0.3 0.2 0.1 0 0 10 20 30 40 Size: 50mm Size: 100mm Size: 150mm Size: 200mm Size: 250mm Size: 300mm								
Precautions.		1. Please wear clean gloves during the lens assembly process to prevent the lens surface from being contaminated. 2. Try to avoid touching the total reflection surface when taking the lens. 3. The lens surface is contaminated. Only use a soft cotton cloth dipped in analytically pure neutral solvent to wipe gently. Do not wipe with industrial solvents (alcohol, isopropanol, acetone, ether, toluene, xylene, carbon tetrachloride, MMA Body, etc.). 4. The working temperature of the lens should be within the temperature resistance limit of the lens material. Exceeding the temperature resistance limit will cause the lens to crack or melt and affect the service life of the lens. It is recommended that								





1.Size		Standard size	Upper Size limit	Lower size limit	Test result1	Test result2	Test result3	Test result4	Judgment	Remarks
	highly	29.5			29.68	29.66	29.71	29.68		
	The diameter of	62			61.96	61.99	62	61.97		Test environment: In 20℃ -25℃ environment to achieve thermal equilibrium after the test.
	The thickness of the	2.5			2.53	2.54	2.56	2.57		
	Gate shear can not affect the appearance of the lamp									
	See attachment "Appearance Inspection Standards"									
2.Appearance Quality		See attachment "Appearance Inspection Standards"	E	No burr	No burr	No burr	No burr	OK		
				No stains	No stains	No stains	No stains			
3.Material		PMMA				Color	Transparent		OK	
4.Optical index	Testing LED	CREE 1820								
	The recommended size and power rating of the LED light source recommended for this lens should be comparable to the source of the test, if it is required to be out of range. According to the heat dissipation capability of the lamp and the actual conditions of the use environment, the lens should be fully tested and tested to prevent the lens life.									
	FWHM	See light distribution curve								
	K-value									
	angle			55.7°	55°	56°	56.5°			
	Efficiency			91.50%	91.30%	91.70%	91.00%			
Facula		See the signature sample								
Comprehensive judgment		Qualified								
Remarks:		1、Tool Number: V-Vernier Caliper 2D-Quadratic H-Height Gauge M-Tool Microscope P-Needle T-Thick Gauge R-Radius Gauge E-Visual. 2、Ambient temperature on the size of the product refer to the table on the right PC product size changes with temperature table Length changes (mm) 0.9 0.8 0.7 0.6 0.5 0.4 0.3 0.2 0.1 0 0 10 20 30 40 Size: 50mm Size: 100mm Size: 150mm Size: 200mm Size: 250mm Size: 300mm (℃)								
Precautions.										
1. Please wear clean gloves during the lens assembly process to prevent the lens surface from being contaminated.										
2. Try to avoid touching the total reflection surface when taking the lens.										
3. The lens surface is contaminated. Only use a soft cotton cloth dipped in analytically pure neutral solvent to wipe gently. Do not wipe with industrial solvents (alcohol, isopropanol, acetone, ether, toluene, xylene, carbon tetrachloride, MMA Body, etc.).										
4. The working temperature of the lens should be within the temperature resistance limit of the lens material. Exceeding the temperature resistance limit will cause the lens to crack or melt and affect the service life of the lens. It is recommended that										

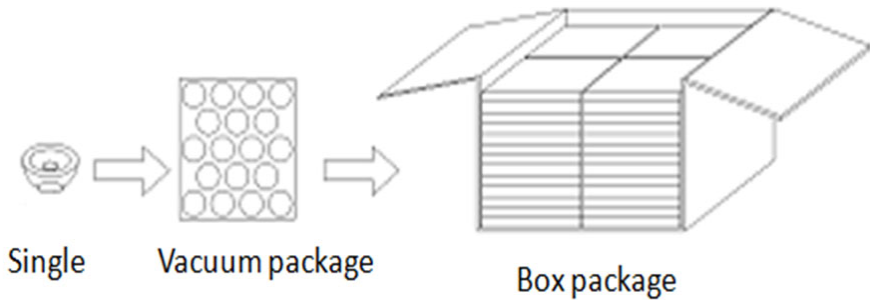PN		HK-DX-62@30-15-D12-21-1g-1_PMMA		Product Name	HK low glare 62@30-15 degree lens		
Product material		PMMA		Customer			
Package diagram		 Single Vacuum package Box package					
Product packing		9	A/ Box	4	pcs/Layer		
		9	Layer/Box	324	A/ Carton		
Packaging Materials	NO.	Part No	Part name	Size	Dosage	Unit	Remarks
	1	2. 07. 0078	Blister box	23cm*21cm	36	BAG	
	2	2. 08. 0001	PE film	25cm*27cm	36	PCS	
	3	2. 06. 0005	Reel label paper	62mm*42mm	36	PCS	
	4	2. 06. 0005	Box label paper	62mm*70mm	1	PCS	
	5	2. 06. 0003	big plate	46cm*42cm	10	PCS	
	6	2. 06. 0011	big flat carton	48cm*44cm*37cm	1	PCS	
Remarks	Scattered packaging is not restricted by this specification, the customer has the requirements of the customer shall prevail						

Special notice

When glue pass through holes, columns and other structures, or part of the thin structure, will form a weld line. The product which uses multi-point injection welding line will appear because of the combination of sol, as shown below:

Syntner

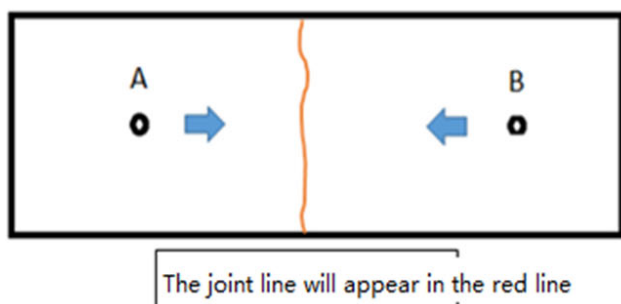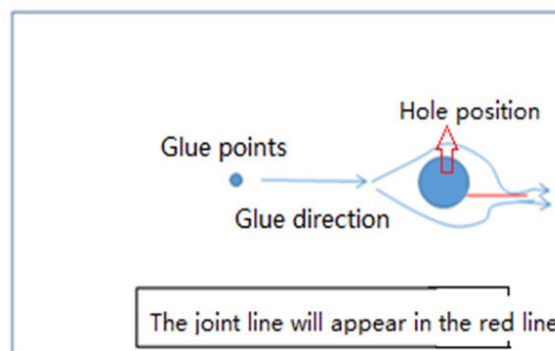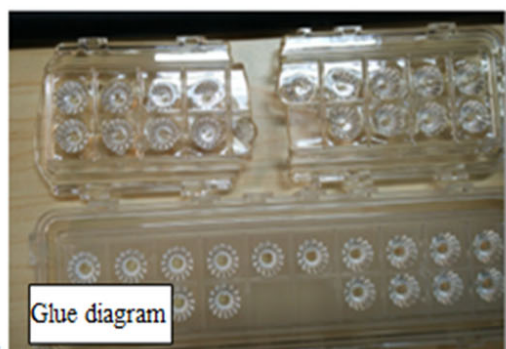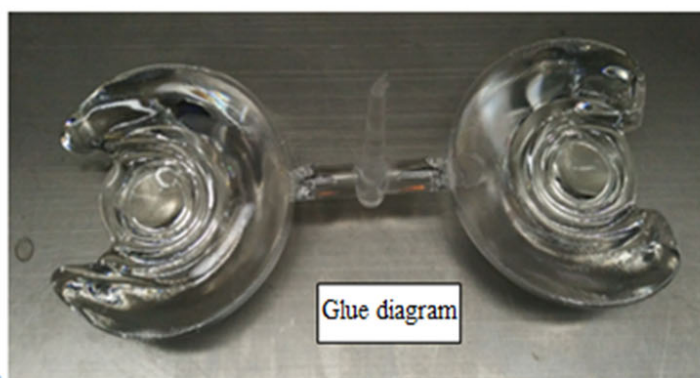

Please note :

The appearance of lines in the structure of the product as well as at the screw hole is a normal phenomenon, will not affect the actual use of the product, and can not be avoided at this stage.

Appearance inspection standards

1 Operating procedures

1.1.1 Sampling standards, sampling plan and AQL

Test level : GB/T2828.1-2012 The first part is according to the acceptance quality limit (AQL) retrieval batch inspection sampling plan, general inspection level II level, CR class defect coefficient 0, MA defect rejection level AQL = 0.65, MI class defect rejection level AQL = 1.0; defect level please see 5.4.

2 Code table

Code	Code description	Unit	Code		Code description	Unit
N	Amount/pcs	pcs	D		Diameter	mm
L	Length	mm	H		Depth	mm
W	Width	mm	DS		Distance	mm
S	Proportion	mm ²	SS		Offset	mm

3 Test conditions

3.1 Sight distance and working hours: Sight distance should be 30-35cm, each side of the inspection time does not exceed 12s, the visual angle of 45-135 degrees;

3.2 Light: 2x40w cool white fluorescent lamp, the light source is 500-550mm away from the lens surface; in order to make the appearance defect can be correctly recognized, the illumination should be 500-1000Lux, and the observation time is 10 seconds.

3.3 Visual inspection staff should be 1.0 (including corrected visual acuity) above, no color blindness, color weakness.

4 Appearance inspection standards

Test items	Judging standard	Inspection equipment	Defect level		
		Testing method	MI	MA	CR
Check the sample	When start the machine and process, all products have to check the appearance of the sample, the appearance of the sample is divided into qualified samples and limited samples.	Sample comparison , visual			√
	1: Qualified sample refers to the appearance and structure standard of the product which recognized by the client, the sample size should be confirmed before mass production;				

	2: The limited sample refers to the limit of a particular exceptionally developed sample. Limit the sample only for its specific point of exception to confirm; The priority is higher than the other criteria in this table. When there is a limited sample, the limit sample shall prevail.				
Raw edge	Not allowed to affect the size and assembly	Visual, point card		√	
Scratch	1: Non-optical surface and non-exposed surface scratches should be visually insignificant and the length is less than 1/10 of the maximum surface size.	Visual, point card, calipers		√	
Fingerprint	Fingerprints are not allowed on all products	Visual		√	
Foreign objects, black spots, white spots	The product may not be attached to foreign objects, including oil, fiber, dregs of water gap and so on				√
Deformation	Insufficient filling shall not affect the appearance of the assembly and the exposed surfaces.	Visual, feeler			√
Poor ejection	Products may not appear bad ejection, including no convex top, thimble printed on the assembly surface shall not be higher than the product surface, non-assembled surface thimble height should not exceed the product size tolerances; thimble printing should be less than the product surface and no more than 0.3; thimble surface treatment should be consistent with the product side.	Visual, point card		√	
	Ejection strain: the optical surface and the appearance of the exposed surface after assembly are not allowed to have a strain, and the structural surface does not allow visual obvious strain.				
Insufficient filling	Insufficient filling shall not affect the appearance of the assembly and the exposed surfaces , The signature sample shall prevail.	Visual, point card		√	
Shrink	When the entire surface of the product shrinks, the optical properties and dimensions must meet the requirements, and the visual will not significantly affect the appearance.Part shrink reference point defects	Visual, point card		√	
Flow marks、Welding line	1 : Product does not allow the presence of flow marks and welding lines unless the structure can not be avoided;	Visual		√	
	2: The remaining flow marks shall not appear in the optical surface, a single L ≤ 10mm, no more than two				

Bubble	No bubbles are allowed	Visual		√	
Foreign objects, black spots, white spots	Not obvious or $D \leq 0.3\text{mm}$ black spots and foreign bodies in the area of 100x100mm not more than 1; Exceeded foreign matter black spots is judged bad.	Visual, point card	√		
Damaged	No damage is allowed	Visual			√
Cold glue	Optical surface may not have cold glue, non-optical surface cold glue should meet the visual is not obvious.	Visual	√		
Bad incision	1: Do not affect the product size, shall not penetrate the optical surface, the cut should be smooth;	Visual			√
	2: Laser cutting products, the optical surface burns shall not occur after the processing is completed. Beading must not affect product installation				
	3: Three molds and hot runner gate shall not appear residue.				
Scrub	Scrub surface should be uniform, off the scrub phenomenon should not be obvious , A single off scrub imprint requires $D \leq 1\text{ mm}$ and no more than 1 area within a 50x50 mm area	Visual		√	