



HERCULUX
恒坤光电



Chengdu HercuLux Photoelectric
Technology Co.,Ltd
Product Approval

Approval number:

Customer:

Manufacturer: Chengdu HercuLux Photoelectric Technology Co.,Ltd

PN	Code	Product
HK-30@15-15-D4-01-1g-1	1. 01. 91816	HK 30@15-15° lens
HK-30@15-24-D6-01-1g-1	1. 01. 91817	HK 30@15-24° lens
HK-30@15-36-D6-01-1g-1	1. 01. 91818	HK 30@15-36° lens
HK-30@15-50-D6-01-1g-1	1. 01. 91979	HK 30@15-50° lens

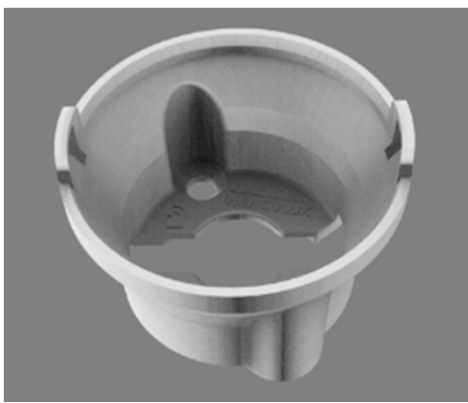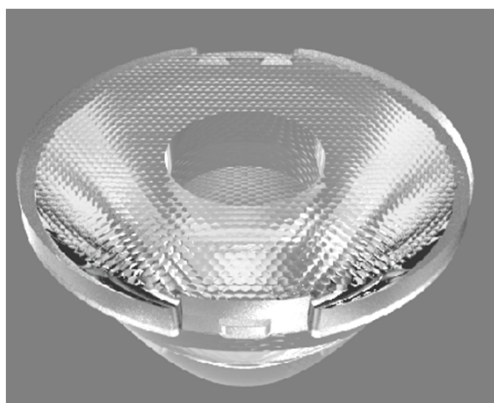

Supplier confirmation				Client confirmation			
Proposed		DATE		Qualified ☐		DATE	
Project manager		DATE		Unqualified ☐		DATE	
Audit		DATE		Audit		DATE	
Approved		DATE		Approved		DATE	
Stamp		DATE		Stamp		DATE	

(Confirmation of acceptance by both parties must be signed and sealed)

Factory: Chengdu Shuangliu District, lot industrial park 2 road HercuLux Photoelectric Park

Phone: 028-85887727 (801) 028-85887990 (801)

Fax: 028-85887730

<http://www.herculux.cn/>

Sales Dept: Shenzhen Nanshan District Nanshan Cloud Valley Innovation Industrial Park Comprehensive Service Building,

TEL: 0755-2937 1541

FAX: 0755-2907 5140

*Approval In duplicate, for both supplier and customer.

Please use this product within the permitted range and environment according to the structure and material of the product. If the usage exceeds the recommended value, please test and verify by yourself. If the product is damaged due to out-of-range use, our company will not be responsible for the warranty.

Product material:

Customized products: The specifications and models of materials used are subject to the agreement between the two parties.

Conventional products: As a product that we continuously research and improve, under the premise of ensuring the quality and availability of the product, our company reserves the right to change the material. If the material specification and model change, without prior notice.

product data:

The measurement data and dimensional tolerances of the 2D drawings in the product data sheet of this acknowledgement are for reference only, and the final size shall prevail in kind.

The measurement data presented in this acknowledgment is a performance test of the product based on our company's internal test conditions and quality requirements, and the reported data is a typical value of the average results of multiple measurements. Therefore, in some cases, the actual product may deviate from the data provided. We reserve the right to notify you in advance of this data.

Product changes and improvements:

Changes and improvements of customized products are subject to the agreement between the two parties in the contract or technical documents.

As the conventional products that we continue to research and improve, our company reserves the right to make technical changes to its products, and reserves the right to make changes to data resulting from improvements without prior notice.

Operation cautions:

1. Please wear clean gloves during product assembly to prevent product surface contamination.
2. Try to avoid touching the optical surface of the lens when taking the lens.
3. When the surface of the product is polluted, please wipe it gently with a soft cotton cloth dipped in analytically pure neutral solvent. It is forbidden to use industrial solvents (alcohol, isopropanol, acetone, ether, toluene, xylene, carbon tetrachloride, MMA monomer, etc.) wipe.
4. The lens made of PC should not be exposed to direct sunlight in the storage and use environment. If the lens turns yellow or cracks due to long-term sunlight exposure, our company will not be responsible for the warranty.



HERCULUX
恒坤光电



Product Approval


TEL: 0755-2937 1541

FAX: 0755-2907 5140

<http://www.herculux.cn/>

Date updated: 2023/12/6

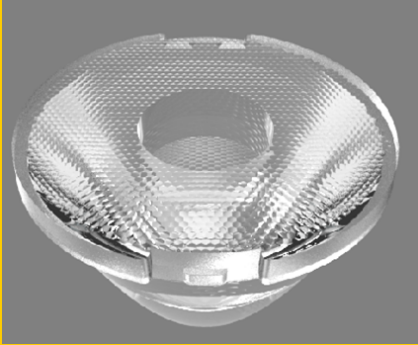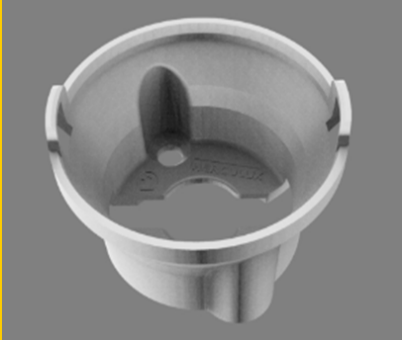Product Picture:	 
Size(L*W*H/Φ*H):	Φ:30mm; H:14.9mm
Material:	PC
Efficiency:	\
Temperature(Topr):	Material extreme temperature resistance: -40°C to +120°C long-term use temperature: -40°C to +100°C
FWHM:	15°、24°、36°、50°
Matched LES:	15°-LED D4 24°、36°、50°LED D6

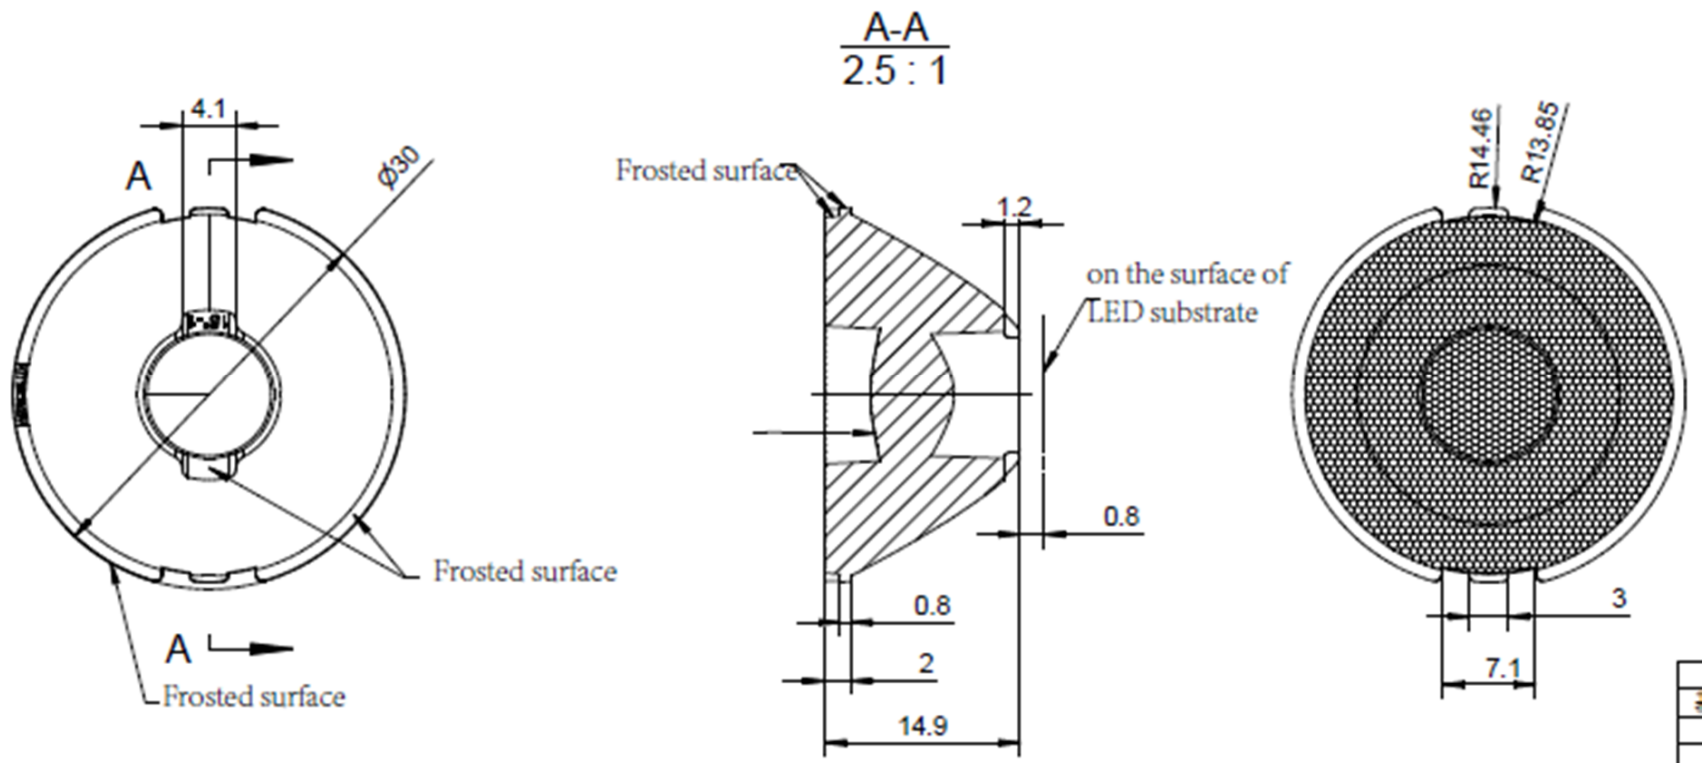


Technical remark:

- 1. The 3D map is not indicated for rounded corners and draft angle.
- 2. The dimensional tolerances are not specified according to GB/T 14486 2008 MT5.
- 3. The surface has no flash, shrinkage, bubbles and other defects.

Optical design			HK 30@15-15 ⁹ lens		HK-30@15-15-D4-01-1g-1		
Structure design					1.01.91816		
Review					number of drawing	qty	weight
Validation			Material:	PC	CDHK		

MT5 Tolerance table	Basic size	<3	3~10	10~24	24~65	65~140	140~250	250~450	>450		
	olerance val	±0.1	±0.15	±0.20	±0.35	±0.50	±0.80	±1.2	±2.0		

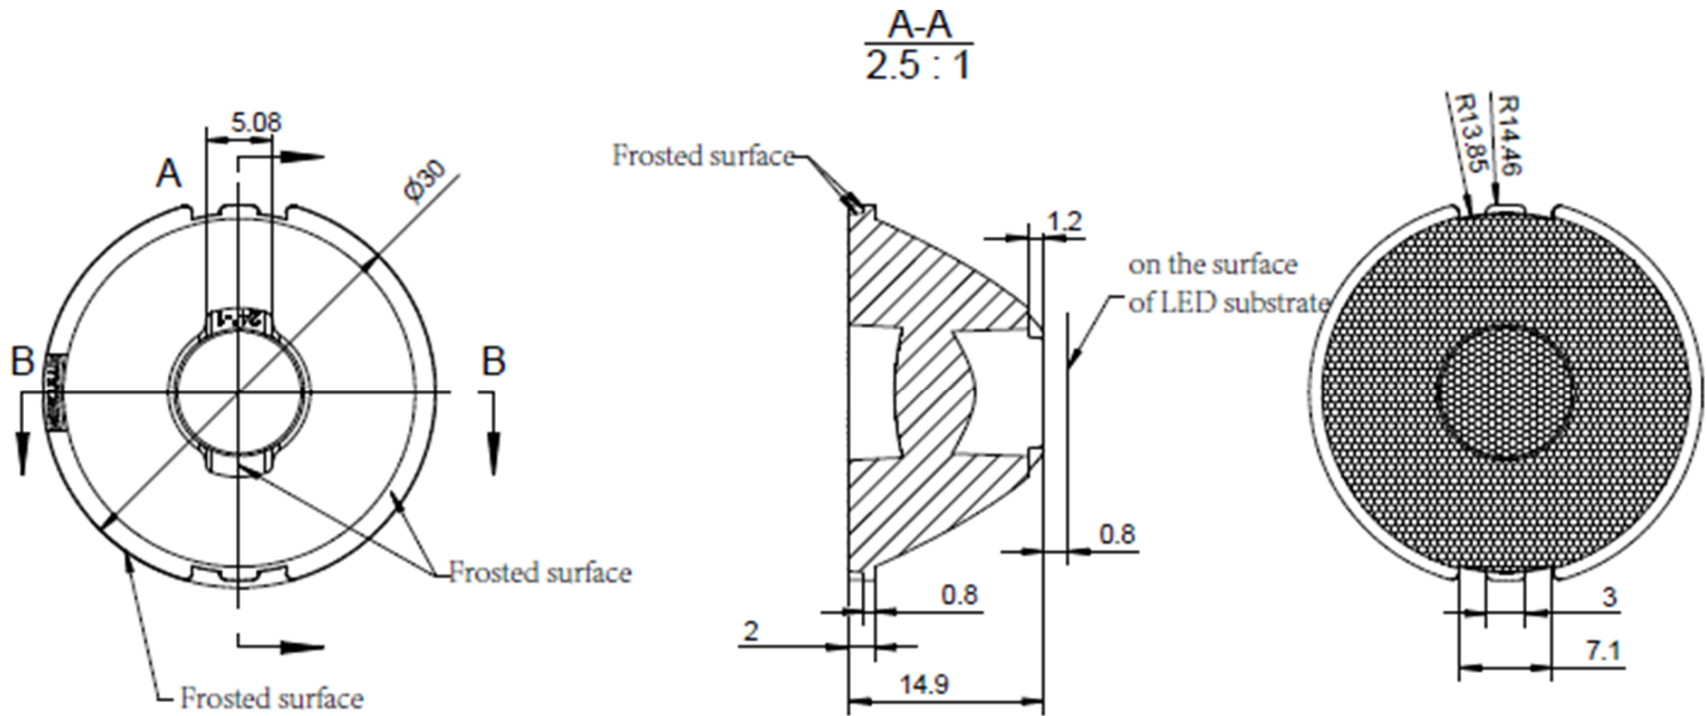


Technical remark:

1. The 3D map is not indicated for rounded corners and draft angle.
2. The dimensional tolerances are not specified according to GB/T 14486 2008 MT5.
3. The surface has no flash, shrinkage, bubbles and other defects.

Optical design			HK 30@15-24@lens		HK-30@15-24-D6-01-1g-1		
Structure design					1.01.91817		
Review					number of drawing	qty	weight
Validation			Material:	PC	CDHK		

MT5	Basic size	<3	3~10	10~24	24~65	65~140	140~250	250~450	>450			
Tolerance table	olerance val	±0.1	±0.15	±0.20	±0.35	±0.50	±0.80	±1.2	±2.0			

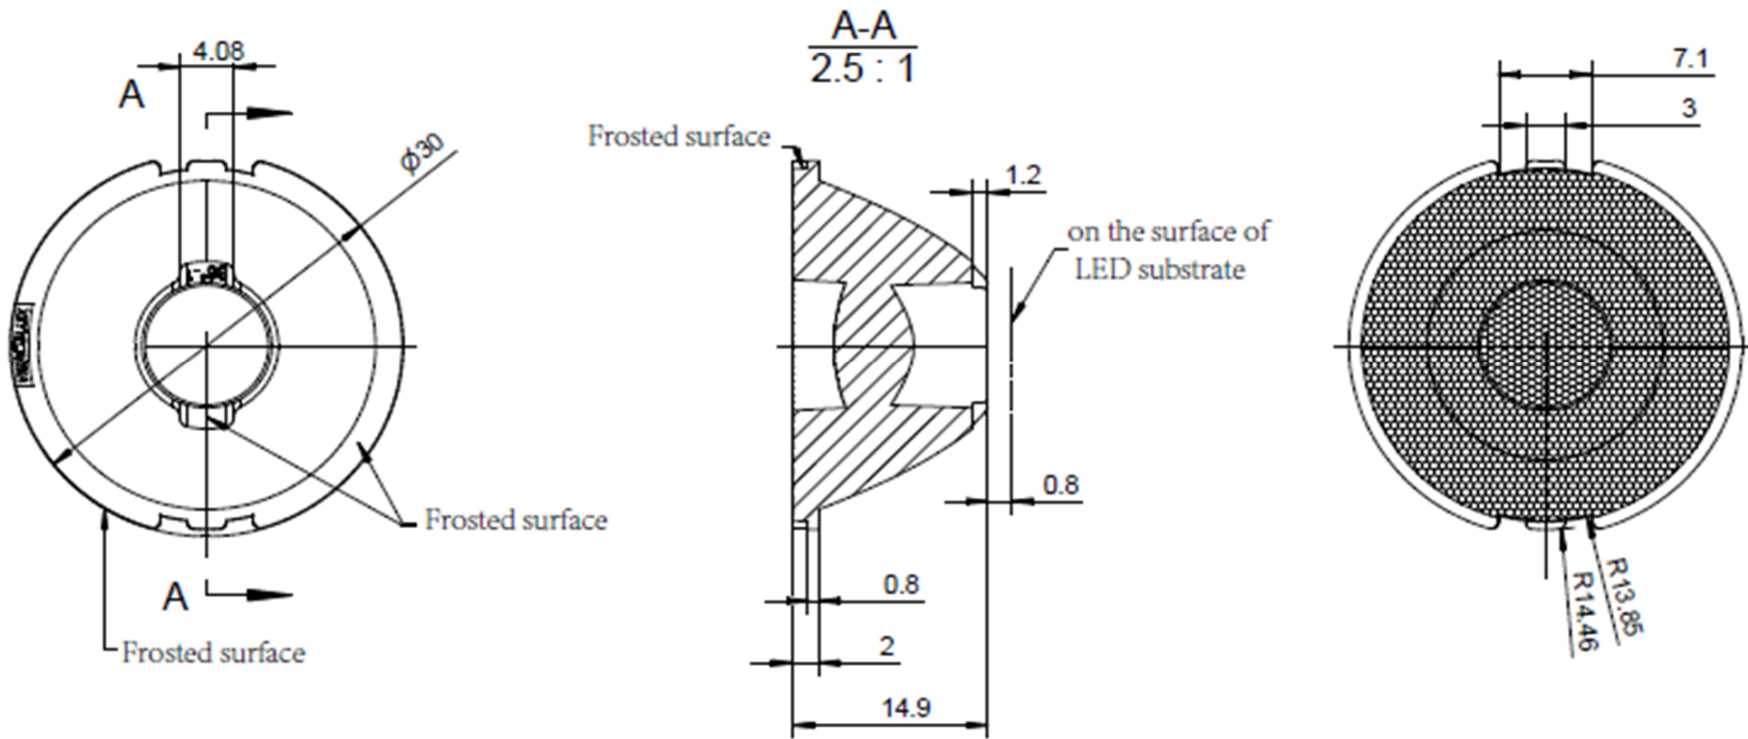


Technical remark:

1. The 3D map is not indicated for rounded corners and draft angle.
2. The dimensional tolerances are not specified according to GB/T 14486 2008 MT5.
3. The surface has no flash, shrinkage, bubbles and other defects.

Optical design			HK 30@15-36 ⁹ lens		HK-30@15-36-D6-01-1g-1		
Structure design						1.01.91818	
Review					number of drawing	qty	weight
Validation			Material:	PC	CDHK		

MT5	Basic size	<3	3~10	10~24	24~65	65~140	140~250	250~450	>450			
Tolerance table	olerance val	±0.1	±0.15	±0.20	±0.35	±0.50	±0.80	±1.2	±2.0			

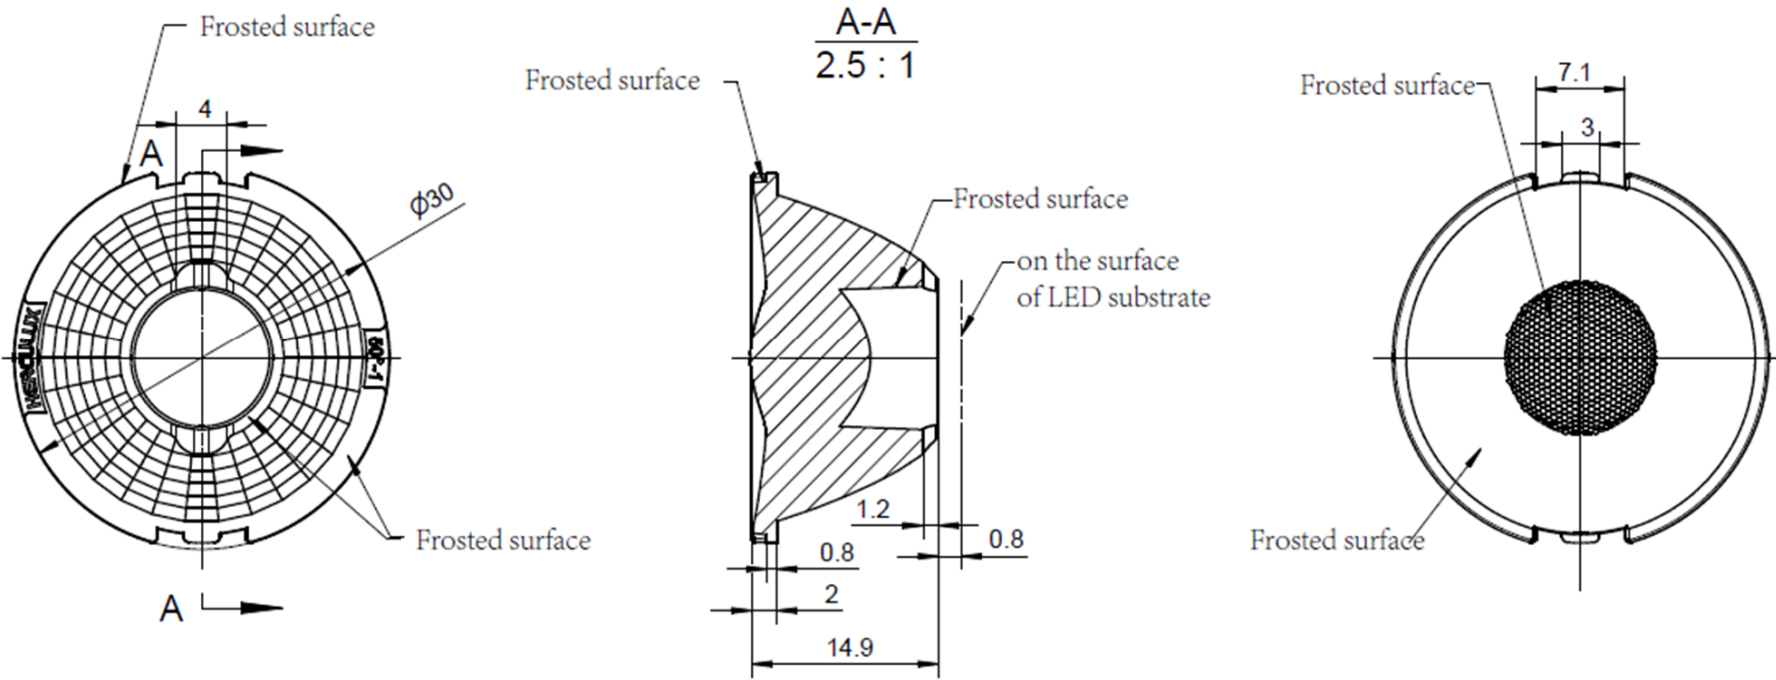


Technical remark:

1. The 3D map is not indicated for rounded corners and draft angle.
2. The dimensional tolerances are not specified according to GB/T 14486 2008 MT5.
3. The surface has no flash, shrinkage, bubbles and other defects.

Optical design			HK 30@15-50@lens		HK-30@15-50-D6-01-1g-1		
Structure design						1.01.91979	
Review					number of drawing	qty	weight
Validation			Material:	PC	CDHK		

MT5	Basic size	<3	3~10	10~24	24~65	65~140	140~250	250~450	>450			
Tolerance table	olerance val	±0.1	±0.15	±0.20	±0.35	±0.50	±0.80	±1.2	±2.0			

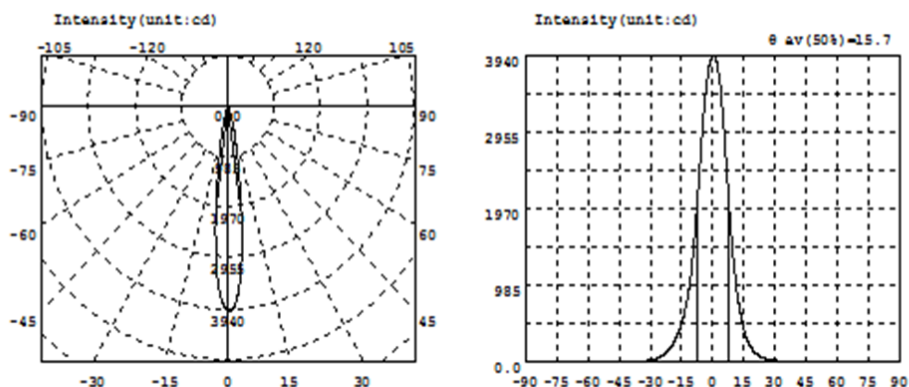

Intensity data: (deg , cd) CO-180


A	I	A	I	A	I	A	I	A	I	A	I
-90.0	0.3057	-58.5	3.577	-27.0	51.38	4.5	3292	36.0	14.54	67.5	1.447
-88.5	0.2931	-57.0	4.231	-25.5	68.47	6.0	2744	37.5	12.95	69.0	1.294
-87.0	0.3055	-55.5	4.920	-24.0	92.26	7.5	2157	39.0	11.64	70.5	1.189
-85.5	0.3312	-54.0	5.593	-22.5	124.9	9.0	1617	40.5	10.49	72.0	1.085
-84.0	0.3698	-52.5	6.265	-21.0	168.0	10.5	1172	42.0	9.623	73.5	0.9542
-82.5	0.4209	-51.0	6.824	-19.5	220.4	12.0	838.5	43.5	8.823	75.0	0.8623
-81.0	0.4476	-49.5	7.409	-18.0	288.8	13.5	593.9	45.0	8.125	76.5	0.7685
-79.5	0.5243	-48.0	7.935	-16.5	380.5	15.0	420.4	46.5	7.487	78.0	0.7047
-78.0	0.5875	-46.5	8.456	-15.0	497.4	16.5	289.8	48.0	6.852	79.5	0.6752
-76.5	0.6888	-45.0	8.944	-13.5	648.0	18.0	209.2	49.5	6.321	81.0	0.6260
-75.0	0.7672	-43.5	9.509	-12.0	847.8	19.5	151.9	51.0	5.819	82.5	0.6097
-73.5	0.8811	-42.0	10.15	-10.5	1131	21.0	111.8	52.5	5.346	84.0	0.5860
-72.0	0.9959	-40.5	10.98	-9.0	1531	22.5	83.09	54.0	4.839	85.5	0.5620
-70.5	1.113	-39.0	12.10	-7.5	2041	24.0	62.76	55.5	4.385	87.0	0.5718
-69.0	1.215	-37.5	13.48	-6.0	2595	25.5	48.36	57.0	3.855	88.5	0.6101
-67.5	1.333	-36.0	15.24	-4.5	3148	27.0	38.18	58.5	3.338	90.0	0.6369
-66.0	1.485	-34.5	17.59	-3.0	3572	28.5	31.04	60.0	2.840		
-64.5	1.688	-33.0	20.66	-1.5	3830	30.0	25.79	61.5	2.400		
-63.0	1.977	-31.5	24.92	0.0	3936	31.5	21.93	63.0	2.026		
-61.5	2.420	-30.0	30.76	1.5	3887	33.0	18.86	64.5	1.765		
-60.0	2.935	-28.5	39.23	3.0	3664	34.5	16.46	66.0	1.575		

Electricity Parameter:

Current I: 0.1000A Power: 3.210W
Voltage V: 32.09V PF: 1.000

Optical Parameter (Distance=2.559m):

Equivalent Luminous flux: $\Phi_{\text{eff}} = 424.01\text{lm}$ Efficiency: $\text{Eff} = 132.10\text{lm/W}$
Diffuse angle: @ (25%): 22.4deg @ (50%): 15.7deg @ (75%): 10.4deg @ (50%): 15.7deg
Diffuse angle: @ (25%): 22.4deg @ (50%): 15.7deg @ (75%): 10.4deg @ (50%): 15.7deg
 $I_{\text{max}} = 3937\text{cd}$ (C=0.0deg, G=0.5deg) CO-180Plane $I_{\text{max}} = 3937\text{cd}$ (G=0.5deg)
CO-180Plane $I_{0} = 3936\text{cd}$

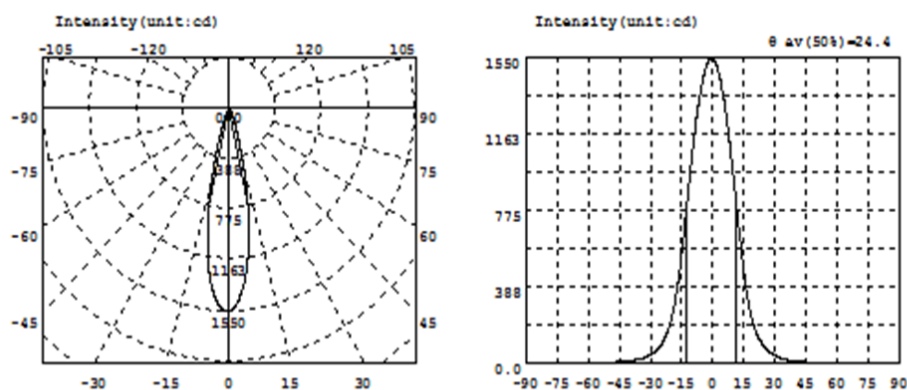

Intensity data: (deg , cd) CO-180



θ	I	θ	I	θ	I	θ	I	θ	I	θ	I
-90.0	0.3312	-58.5	4.091	-27.0	71.16	4.5	1386	36.0	19.72	67.5	1.679
-88.5	0.3313	-57.0	4.632	-25.5	88.83	6.0	1290	37.5	17.04	69.0	1.546
-87.0	0.3441	-55.5	5.219	-24.0	111.8	7.5	1171	39.0	14.93	70.5	1.398
-85.5	0.3949	-54.0	5.807	-22.5	144.1	9.0	1034	40.5	13.18	72.0	1.250
-84.0	0.4462	-52.5	6.418	-21.0	188.9	10.5	886.6	42.0	11.81	73.5	1.138
-82.5	0.4982	-51.0	7.068	-19.5	247.8	12.0	736.6	43.5	10.61	75.0	1.010
-81.0	0.5677	-49.5	7.850	-18.0	326.1	13.5	592.8	45.0	9.584	76.5	0.9087
-79.5	0.7026	-48.0	8.649	-16.5	431.5	15.0	463.6	46.5	8.640	78.0	0.8320
-78.0	0.8041	-46.5	9.506	-15.0	558.7	16.5	344.1	48.0	7.849	79.5	0.7319
-76.5	0.9317	-45.0	10.44	-13.5	702.9	18.0	262.9	49.5	7.082	81.0	0.6806
-75.0	1.071	-43.5	11.55	-12.0	855.0	19.5	200.9	51.0	6.381	82.5	0.6276
-73.5	1.201	-42.0	12.86	-10.5	1006	21.0	155.3	52.5	5.730	84.0	0.5987
-72.0	1.343	-40.5	14.52	-9.0	1146	22.5	122.1	54.0	5.117	85.5	0.5875
-70.5	1.508	-39.0	16.50	-7.5	1269	24.0	97.45	55.5	4.535	87.0	0.6228
-69.0	1.674	-37.5	19.03	-6.0	1371	25.5	78.10	57.0	4.001	88.5	0.6497
-67.5	1.867	-36.0	22.22	-4.5	1451	27.0	62.87	58.5	3.465	90.0	0.6752
-66.0	2.074	-34.5	26.36	-3.0	1507	28.5	50.71	60.0	3.015		
-64.5	2.333	-33.0	31.61	-1.5	1538	30.0	41.11	61.5	2.616		
-63.0	2.681	-31.5	38.31	0.0	1541	31.5	33.55	63.0	2.301		
-61.5	3.100	-30.0	46.76	1.5	1515	33.0	27.70	64.5	2.045		
-60.0	3.566	-28.5	57.56	3.0	1462	34.5	23.19	66.0	1.845		

Electricity Parameter:

Current I: 0.1000A Power: 3.550W
Voltage V: 35.50V PF: 1.000

Optical Parameter(Distance=2.559m):

Equivalent Luminous flux: Φ_{eff}=337.4lm Efficiency: Eff=95.06lm/W
Diffuse angle: θ(25%): 33.0deg θ(50%): 24.4deg θ(75%): 16.4deg θ(50%): 24.4deg
Diffuse angle: θ(25%): 33.0deg θ(50%): 24.4deg θ(75%): 16.4deg θ(50%): 24.4deg
I_{max}=1543cd (C=0.0deg, G=-0.5deg) CO-180Plane I_{max}= 1543cd (G=-0.5deg)
CO-180Plane I₀= 1541cd

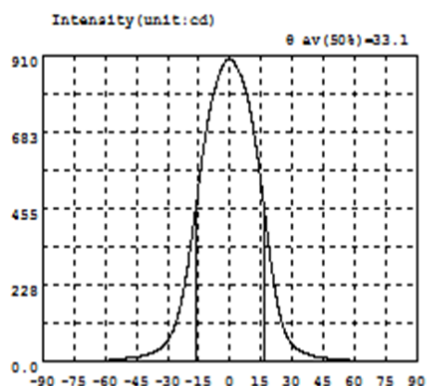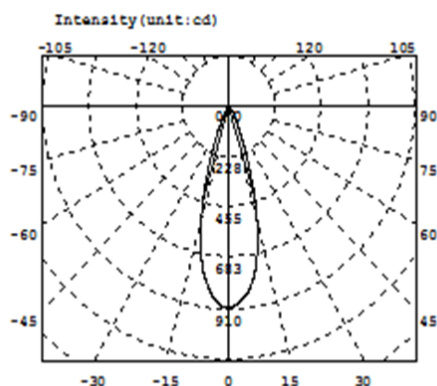

Intensity data: (deg , cd) C0-180

A	I	A	I	A	I	A	I	A	I	A	I
-90.0	1.057	-58.5	5.570	-27.0	100.0	4.5	858.8	36.0	26.40	67.5	2.283
-88.5	1.044	-57.0	6.390	-25.5	127.4	6.0	836.9	37.5	22.95	69.0	2.076
-87.0	0.9681	-55.5	7.254	-24.0	163.1	7.5	807.8	39.0	19.96	70.5	1.905
-85.5	0.9690	-54.0	8.210	-22.5	207.2	9.0	769.1	40.5	17.53	72.0	1.729
-84.0	1.056	-52.5	9.200	-21.0	258.5	10.5	718.5	42.0	15.59	73.5	1.555
-82.5	1.084	-51.0	10.24	-19.5	318.9	12.0	659.1	43.5	13.92	75.0	1.384
-81.0	1.149	-49.5	11.38	-18.0	386.3	13.5	593.2	45.0	12.55	76.5	1.216
-79.5	1.249	-48.0	12.55	-16.5	458.1	15.0	523.5	46.5	11.36	78.0	1.050
-78.0	1.353	-46.5	13.84	-15.0	530.2	16.5	453.1	48.0	10.32	79.5	0.8631
-76.5	1.504	-45.0	15.27	-13.5	600.3	18.0	373.7	49.5	9.392	81.0	0.7461
-75.0	1.620	-43.5	16.86	-12.0	664.0	19.5	302.5	51.0	8.553	82.5	0.6404
-73.5	1.762	-42.0	18.76	-10.5	719.4	21.0	238.0	52.5	7.748	84.0	0.5367
-72.0	1.902	-40.5	21.17	-9.0	766.5	22.5	182.3	54.0	6.971	85.5	0.4601
-70.5	2.069	-39.0	23.99	-7.5	804.6	24.0	138.2	55.5	6.240	87.0	0.4459
-69.0	2.250	-37.5	27.32	-6.0	837.3	25.5	104.8	57.0	5.550	88.5	0.4599
-67.5	2.444	-36.0	31.47	-4.5	864.3	27.0	80.84	58.5	4.883	90.0	0.4841
-66.0	2.701	-34.5	36.80	-3.0	885.2	28.5	63.68	60.0	4.289		
-64.5	3.036	-33.0	43.63	-1.5	897.1	30.0	51.48	61.5	3.721		
-63.0	3.551	-31.5	52.43	0.0	899.4	31.5	42.57	63.0	3.207		
-61.5	4.123	-30.0	63.88	1.5	890.9	33.0	35.85	64.5	2.815		
-60.0	4.811	-28.5	79.36	3.0	876.7	34.5	30.61	66.0	2.493		

Electricity Parameter:

Current I: 0.1000A Power: 4.138W
Voltage V: 41.40V PF: 1.000

Optical Parameter (Distance=2.559m):

Equivalent Luminous flux: $\Phi_{\text{eff}} = 325.3\text{lm}$ Efficiency: $\text{Eff} = 78.63\text{lm/W}$



Diffuse angle: @ (25%): 43.2deg @ (50%): 33.1deg @ (75%): 23.3deg @ (50%): 33.1deg

Diffuse angle: @ (25%): 43.2deg @ (50%): 33.1deg @ (75%): 23.3deg @ (50%): 33.1deg

$I_{\text{max}} = 900.0\text{cd}$ (C=0.0deg, G=-0.5deg)

C0-180Plane $I_{\text{max}} = 900.0\text{cd}$ (G=-0.5deg)

C0-180Plane $I_0 = 899.4\text{cd}$

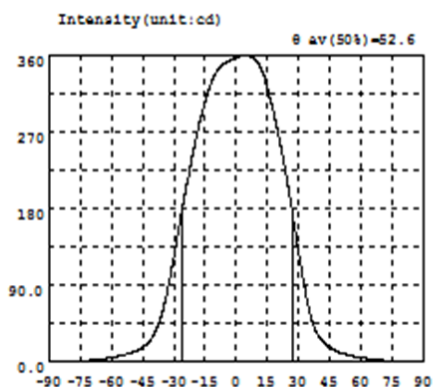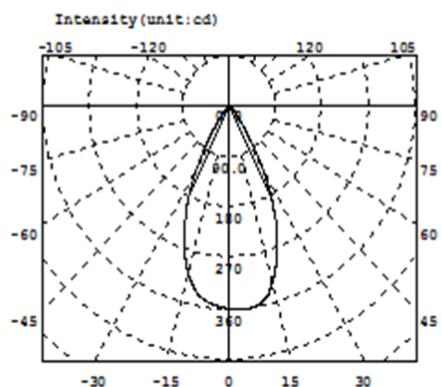

Intensity data: (deg , cd) C0-180

A	I	A	I	A	I	A	I	A	I	A	I
-90.0	0.2938	-58.5	6.242	-27.0	166.2	4.5	359.1	36.0	51.83	67.5	2.895
-88.5	0.3047	-57.0	7.004	-25.5	187.1	6.0	358.6	37.5	40.85	69.0	2.508
-87.0	0.3155	-55.5	7.808	-24.0	206.7	7.5	357.3	39.0	32.94	70.5	2.168
-85.5	0.3261	-54.0	8.665	-22.5	223.7	9.0	354.7	40.5	27.15	72.0	1.857
-84.0	0.3383	-52.5	9.618	-21.0	243.4	10.5	350.1	42.0	22.85	73.5	1.561
-82.5	0.3954	-51.0	10.69	-19.5	260.1	12.0	343.6	43.5	19.53	75.0	1.303
-81.0	0.5351	-49.5	11.94	-18.0	276.6	13.5	333.7	45.0	16.96	76.5	1.080
-79.5	0.6839	-48.0	13.39	-16.5	291.8	15.0	319.7	46.5	14.91	78.0	0.9039
-78.0	0.8668	-46.5	15.20	-15.0	305.5	16.5	306.5	48.0	13.22	79.5	0.7440
-76.5	1.071	-45.0	17.44	-13.5	317.2	18.0	291.5	49.5	11.78	81.0	0.5972
-75.0	1.328	-43.5	20.27	-12.0	327.7	19.5	274.9	51.0	10.58	82.5	0.4422
-73.5	1.632	-42.0	23.87	-10.5	335.9	21.0	257.2	52.5	9.484	84.0	0.3320
-72.0	1.988	-40.5	28.71	-9.0	341.9	22.5	238.5	54.0	8.526	85.5	0.2780
-70.5	2.253	-39.0	35.07	-7.5	346.4	24.0	218.4	55.5	7.639	87.0	0.2449
-69.0	2.583	-37.5	43.52	-6.0	349.6	25.5	196.6	57.0	6.831	88.5	0.2432
-67.5	2.939	-36.0	54.55	-4.5	352.2	27.0	173.9	58.5	6.099	90.0	0.2191
-66.0	3.340	-34.5	68.52	-3.0	354.1	28.5	150.7	60.0	5.442		
-64.5	3.804	-33.0	85.01	-1.5	355.9	30.0	127.8	61.5	4.837		
-63.0	4.339	-31.5	103.6	0.0	357.4	31.5	105.3	63.0	4.285		
-61.5	4.819	-30.0	123.5	1.5	358.5	33.0	84.49	64.5	3.785		
-60.0	5.551	-28.5	144.9	3.0	358.9	34.5	66.30	66.0	3.321		


Electricity Parameter:

Current I: 0.1000A Power: 3.358W
Voltage V: 33.59V PF: 1.000


Optical Parameter(Distance=2.410m):

Equivalent Luminous flux: $\Phi_{\text{eff}} = 277.4\text{lm}$ Efficiency: $\text{Eff} = 82.61\text{lm/W}$
Diffuse angle: @ (25%): 65.2deg @ (50%): 52.6deg @ (75%): 38.5deg @ (50%): 52.6deg
Diffuse angle: @ (25%): 65.2deg @ (50%): 52.7deg @ (75%): 38.8deg @ (50%): 52.7deg
 $I_{\text{max}} = 359.1\text{cd}$ (C=0.0deg, C=4.5deg) C0-180Plane $I_{\text{max}} = 359.1\text{cd}$ (C=4.5deg)
C0-180Plane $I_0 = 357.4\text{cd}$


1.Size		Standard size	Upper Size limit	Lower size limit	Test result1	Test result2	Test result3	Test result4	Judgment	Remarks																																									
	diameter	30			30	29.95	29.95	30		Test environment: In 20℃ -25℃ environment to achieve thermal equilibrium after the test.																																									
	thickness	2			2.02	2.02	2.01	2.01																																											
	height	14.9			14.93	14.91	14.93	14.93																																											
	Gate shear can not affect the appearance of the lamp																																																		
See attachment "Appearance Inspection Standards"																																																			
2.Appearance Quality		See attachment "Appearance Inspection Standards"	E	No burr	No burr	No burr	No burr	OK																																											
				No stains	No stains	No stains	No stains																																												
3.Material		PC				Color	Transparent		OK																																										
4.Optical index	Testing LED		15°-LED D4																																																
	The recommended size and power rating of the LED light source recommended for this lens should be comparable to the source of the test, if it is required to be out of range. According to the heat dissipation capability of the lamp and the actual conditions of the use environment, the lens should be fully tested and tested to prevent the lens life.																																																		
	FWHM		See light distribution curve																																																
	angle				15.7	14.8	15.2	14.8																																											
	K-value				9.29	9.62	9.48	9.36																																											
	Efficiency				84.80%	80.60%	84.60%	85.60%																																											
Facula		See the signature sample																																																	
Comprehensive judgment		Qualified																																																	
Remarks: 1、Tool Number: V-Vernier Caliper 2D-Quadratic H-Height Gauge M-Tool Microscope P-Needle T-Thick Gauge R-Radius Gauge E-Visual. 2、Ambient temperature on the size of the product refer to the table on the right		PC product size changes with temperature table <table border="1"><thead><tr><th>Temperature (°C)</th><th>50mm</th><th>100mm</th><th>150mm</th><th>200mm</th><th>250mm</th><th>300mm</th></tr></thead><tbody><tr><td>0</td><td>0.00</td><td>0.00</td><td>0.00</td><td>0.00</td><td>0.00</td><td>0.00</td></tr><tr><td>10</td><td>0.05</td><td>0.08</td><td>0.10</td><td>0.12</td><td>0.15</td><td>0.20</td></tr><tr><td>20</td><td>0.08</td><td>0.12</td><td>0.18</td><td>0.25</td><td>0.32</td><td>0.40</td></tr><tr><td>30</td><td>0.10</td><td>0.18</td><td>0.28</td><td>0.38</td><td>0.48</td><td>0.58</td></tr><tr><td>40</td><td>0.15</td><td>0.25</td><td>0.38</td><td>0.52</td><td>0.65</td><td>0.80</td></tr></tbody></table>								Temperature (°C)	50mm	100mm	150mm	200mm	250mm	300mm	0	0.00	0.00	0.00	0.00	0.00	0.00	10	0.05	0.08	0.10	0.12	0.15	0.20	20	0.08	0.12	0.18	0.25	0.32	0.40	30	0.10	0.18	0.28	0.38	0.48	0.58	40	0.15	0.25	0.38	0.52	0.65	0.80
		Temperature (°C)	50mm	100mm	150mm	200mm	250mm	300mm																																											
0	0.00	0.00	0.00	0.00	0.00	0.00																																													
10	0.05	0.08	0.10	0.12	0.15	0.20																																													
20	0.08	0.12	0.18	0.25	0.32	0.40																																													
30	0.10	0.18	0.28	0.38	0.48	0.58																																													
40	0.15	0.25	0.38	0.52	0.65	0.80																																													
Precautions: 1、Wear clean gloves during lens assembly to prevent contamination of the lens surface. 2、Take the lens try to avoid touching the total reflection surface. 3、When the lens surface contamination, you can only gently wipe with soft cotton sticky neat neutral solvent, not allowed to wipe with industrial solvents. 4、The working temperature of the lens should be within the temperature limit of the lens material. Exceeding the temperature limit will cause damage to the lens and affect the service life of the lens.																																																			

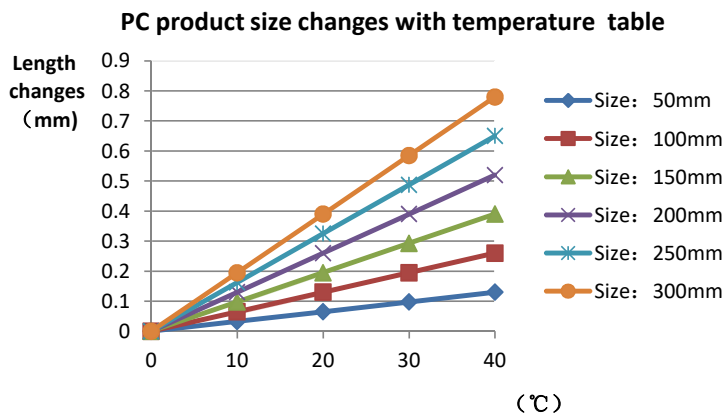


		Standard size	Upper Size limit	Lower size limit	Test result1	Test result2	Test result3	Test result4	Judgment	Remarks																																										
1.Size	diameter	30			29.94	29.94	29.96	30		Test environment: In 20℃ -25℃ environment to achieve thermal equilibrium after the test.																																										
	thickness	2			2.02	2.01	2	2.02																																												
	height	14.9			14.82	14.86	14.88	14.87																																												
	Gate shear can not affect the appearance of the lamp																																																			
	See attachment "Appearance Inspection Standards"																																																			
2.Appearance Quality		See attachment "Appearance Inspection Standards"	E	No burr	No burr	No burr	No burr	OK																																												
				No stains	No stains	No stains	No stains																																													
3.Material		PC				Color	Transparent		OK																																											
4.Optical index	Testing LED		24°-LED D6																																																	
	The recommended size and power rating of the LED light source recommended for this lens should be comparable to the source of the test, if it is required to be out of range. According to the heat dissipation capability of the lamp and the actual conditions of the use environment, the lens should be fully tested and tested to prevent the lens life.																																																			
	FWHM		See light distribution curve																																																	
	angle				24.4	23.8	23.8	23.6																																												
	K-value				4.58	4.86	4.91	4.98																																												
	Efficiency				81.60%	79.66%	80.15%	81.11%																																												
	Facula		See the signature sample																																																	
Comprehensive judgment		Qualified																																																		
Remarks: 1、 Tool Number: V-Vernier Caliper 2D-Quadratic H-Height Gauge M-Tool Microscope P-Needle T-Thick Gauge R-Radius Gauge E-Visual. 2、 Ambient temperature on the size of the product refer to the table on the right			PC product size changes with temperature table <table border="1"><caption>PC product size changes with temperature table</caption><thead><tr><th>Temperature (°C)</th><th>Size: 50mm</th><th>Size: 100mm</th><th>Size: 150mm</th><th>Size: 200mm</th><th>Size: 250mm</th><th>Size: 300mm</th></tr></thead><tbody><tr><td>0</td><td>0.00</td><td>0.00</td><td>0.00</td><td>0.00</td><td>0.00</td><td>0.00</td></tr><tr><td>10</td><td>0.02</td><td>0.05</td><td>0.08</td><td>0.12</td><td>0.15</td><td>0.20</td></tr><tr><td>20</td><td>0.04</td><td>0.10</td><td>0.15</td><td>0.22</td><td>0.28</td><td>0.38</td></tr><tr><td>30</td><td>0.06</td><td>0.15</td><td>0.22</td><td>0.32</td><td>0.42</td><td>0.58</td></tr><tr><td>40</td><td>0.08</td><td>0.20</td><td>0.30</td><td>0.42</td><td>0.55</td><td>0.78</td></tr></tbody></table>								Temperature (°C)	Size: 50mm	Size: 100mm	Size: 150mm	Size: 200mm	Size: 250mm	Size: 300mm	0	0.00	0.00	0.00	0.00	0.00	0.00	10	0.02	0.05	0.08	0.12	0.15	0.20	20	0.04	0.10	0.15	0.22	0.28	0.38	30	0.06	0.15	0.22	0.32	0.42	0.58	40	0.08	0.20	0.30	0.42	0.55	0.78
			Temperature (°C)	Size: 50mm	Size: 100mm	Size: 150mm	Size: 200mm	Size: 250mm	Size: 300mm																																											
0	0.00	0.00	0.00	0.00	0.00	0.00																																														
10	0.02	0.05	0.08	0.12	0.15	0.20																																														
20	0.04	0.10	0.15	0.22	0.28	0.38																																														
30	0.06	0.15	0.22	0.32	0.42	0.58																																														
40	0.08	0.20	0.30	0.42	0.55	0.78																																														
Precautions: 1、 Wear clean gloves during lens assembly to prevent contamination of the lens surface. 2、 Take the lens try to avoid touching the total reflection surface. 3、 When the lens surface contamination, you can only gently wipe with soft cotton sticky neat neutral solvent, not allowed to wipe with industrial solvents. 4. The working temperature of the lens should be within the temperature limit of the lens material. Exceeding the temperature limit will cause damage to the lens and affect the service life of the lens.																																																				

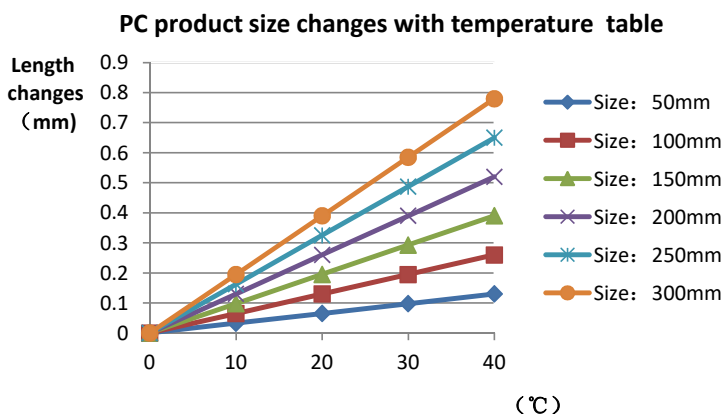

		Standard size	Upper Size limit	Lower size limit	Test result1	Test result2	Test result3	Test result4	Judgment	Remarks																																										
1.Size	diameter	30			29.96	29.97	29.96	29.94		Test environment: In 20℃ -25℃ environment to achieve thermal equilibrium after the test.																																										
	thickness	2			2.04	2.04	2.06	2.07																																												
	height	14.9			14.93	14.97	14.93	14.95																																												
	Gate shear can not affect the appearance of the lamp																																																			
	See attachment "Appearance Inspection Standards"																																																			
2.Appearance Quality		See attachment "Appearance Inspection Standards"	E	No burr	No burr	No burr	No burr	OK																																												
				No stains	No stains	No stains	No stains																																													
3.Material		PC				Color	Transparent		OK																																											
4.Optical index	Testing LED		36°-LED D6																																																	
	The recommended size and power rating of the LED light source recommended for this lens should be comparable to the source of the test, if it is required to be out of range. According to the heat dissipation capability of the lamp and the actual conditions of the use environment, the lens should be fully tested and tested to prevent the lens life.																																																			
	FWHM		See light distribution curve																																																	
	angle			34.3	33.1	33.5	33.5																																													
	K-value			2.77	2.77	2.69	2.69																																													
	Efficiency			82.35%	82.55%	81.06%	82.62%																																													
Facula		See the signature sample																																																		
Comprehensive judgment		Qualified																																																		
Remarks: 1、 Tool Number: V-Vernier Caliper 2D-Quadratic H-Height Gauge M-Tool Microscope P-Needle T-Thick Gauge R-Radius Gauge E-Visual. 2、 Ambient temperature on the size of the product refer to the table on the right			PC product size changes with temperature table <table><thead><tr><th>Temperature (°C)</th><th>Size: 50mm</th><th>Size: 100mm</th><th>Size: 150mm</th><th>Size: 200mm</th><th>Size: 250mm</th><th>Size: 300mm</th></tr></thead><tbody><tr><td>0</td><td>0.00</td><td>0.00</td><td>0.00</td><td>0.00</td><td>0.00</td><td>0.00</td></tr><tr><td>10</td><td>0.02</td><td>0.05</td><td>0.08</td><td>0.12</td><td>0.18</td><td>0.20</td></tr><tr><td>20</td><td>0.05</td><td>0.12</td><td>0.20</td><td>0.28</td><td>0.35</td><td>0.40</td></tr><tr><td>30</td><td>0.08</td><td>0.18</td><td>0.28</td><td>0.40</td><td>0.50</td><td>0.60</td></tr><tr><td>40</td><td>0.12</td><td>0.25</td><td>0.38</td><td>0.52</td><td>0.65</td><td>0.78</td></tr></tbody></table>								Temperature (°C)	Size: 50mm	Size: 100mm	Size: 150mm	Size: 200mm	Size: 250mm	Size: 300mm	0	0.00	0.00	0.00	0.00	0.00	0.00	10	0.02	0.05	0.08	0.12	0.18	0.20	20	0.05	0.12	0.20	0.28	0.35	0.40	30	0.08	0.18	0.28	0.40	0.50	0.60	40	0.12	0.25	0.38	0.52	0.65	0.78
			Temperature (°C)	Size: 50mm	Size: 100mm	Size: 150mm	Size: 200mm	Size: 250mm	Size: 300mm																																											
0	0.00	0.00	0.00	0.00	0.00	0.00																																														
10	0.02	0.05	0.08	0.12	0.18	0.20																																														
20	0.05	0.12	0.20	0.28	0.35	0.40																																														
30	0.08	0.18	0.28	0.40	0.50	0.60																																														
40	0.12	0.25	0.38	0.52	0.65	0.78																																														
Precautions: 1、 Wear clean gloves during lens assembly to prevent contamination of the lens surface. 2、 Take the lens try to avoid touching the total reflection surface. 3、 When the lens surface contamination, you can only gently wipe with soft cotton sticky neat neutral solvent, not allowed to wipe with industrial solvents. 4. The working temperature of the lens should be within the temperature limit of the lens material. Exceeding the temperature limit will cause damage to the lens and affect the service life of the lens.																																																				

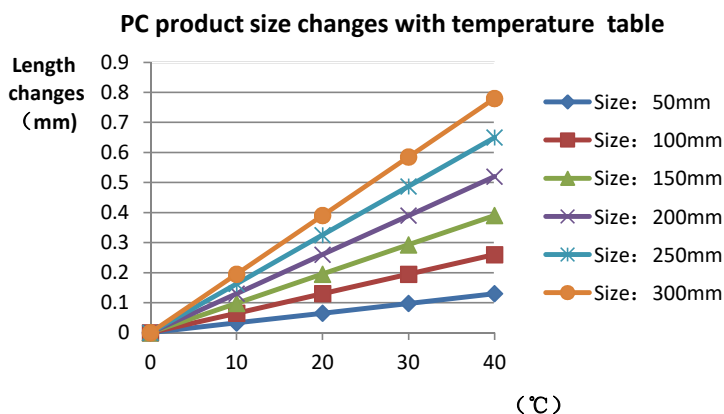

		Standard size	Upper Size limit	Lower size limit	Test result1	Test result2	Test result3	Test result4	Judgment	Remarks
1.Size	diameter	30			29.96	29.97	29.96	29.94		Test environment: In 20℃ -25℃ environment to achieve thermal equilibrium after the test.
	thickness	2			2.04	2.04	2.06	2.07		
	height	14.9			14.93	14.97	14.93	14.95		
	Gate shear can not affect the appearance of the lamp									
	See attachment "Appearance Inspection Standards"									
2.Appearance Quality		See attachment "Appearance Inspection Standards"	E	No burr	No burr	No burr	No burr	OK		
				No stains	No stains	No stains	No stains			
3.Material		PC				Color	Transparent		OK	
4.Optical index	Testing LED		50°-LED D6							
	The recommended size and power rating of the LED light source recommended for this lens should be comparable to the source of the test, if it is required to be out of range. According to the heat dissipation capability of the lamp and the actual conditions of the use environment, the lens should be fully tested and tested to prevent the lens life.									
	FWHM		See light distribution curve							
	angle				49.4	52.6	51.5	52.6		
	K-value									
	Efficiency				81.32%	81.42%	80.73%	81.71%		
	Facula		See the signature sample							
Comprehensive judgment		Qualified								
Remarks:		1、 Tool Number: V-Vernier Caliper 2D-Quadratic H-Height Gauge M-Tool Microscope P-Needle T-Thick Gauge R-Radius Gauge E-Visual. 2、 Ambient temperature on the size of the product refer to the table on the right								
Precautions:		1、 Wear clean gloves during lens assembly to prevent contamination of the lens surface. 2、 Take the lens try to avoid touching the total reflection surface. 3、 When the lens surface contamination, you can only gently wipe with soft cotton sticky neat neutral solvent, not allowed to wipe with industrial solvents. 4. The working temperature of the lens should be within the temperature limit of the lens material. Exceeding the temperature limit will cause damage to the lens and affect the service life of the lens.								

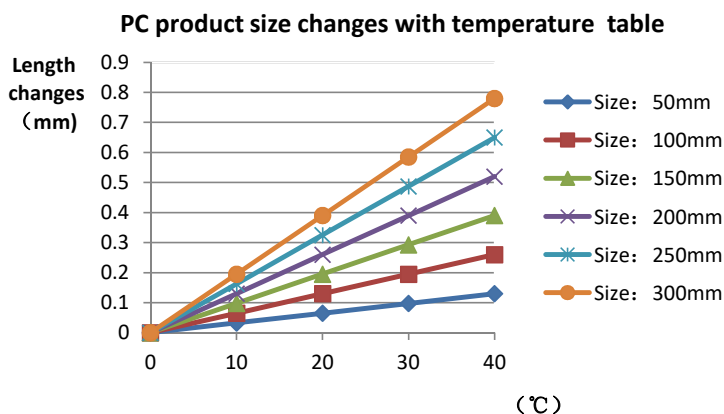







PN		HK-30@15-15-D4-01-1g-1		Product Name		HK 30@15-15°lens	
Product material		PC		Customer			
Package diagram		Single Vacuum package Box package					
Product packing		27	A/ Box	4	pcs/Layer		
		16	Layer/Box	1728	A/ Carton		
Packaging Materials	NO.	Part No	Part name	Size	Dosage	Unit	Remarks
	1	2.07.0011	Blister box	23cm*21cm	64	BAG	
	2	2.08.0001	PE film	30cm*30cm	64	PCS	
	3	2.06.0005	Reel label paper	6.2cm*8cm	64	PCS	
	4	2.06.0005	Box label paper	6.2cm*9.2cm	1	PCS	
	5	2.06.0003	big plate	46.8cm*42.8cm	17	PCS	
	6	2.06.0015	big flat carton	48cm*44cm*19cm	1	PCS	
Remarks	The loose packing is not subject to this specification. Customer's requirements shall prevail						

Special notice

When glue pass through holes, columns and other structures, or part of the thin structure, will form a weld line. The product which uses multi-point injection welding line will appear because of the combination of sol, as shown below:

Synthesis

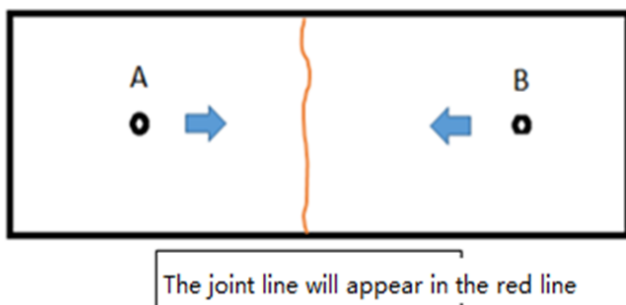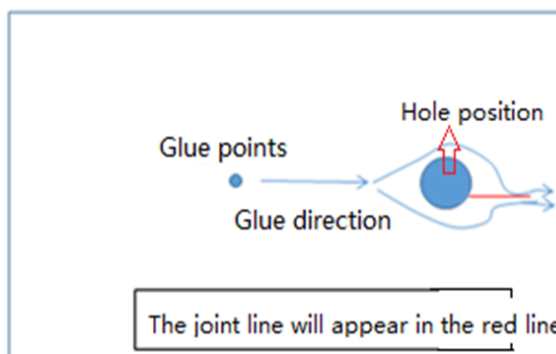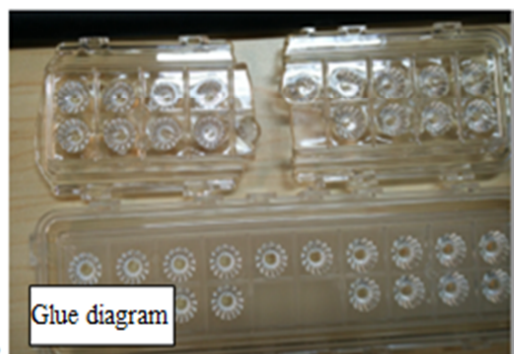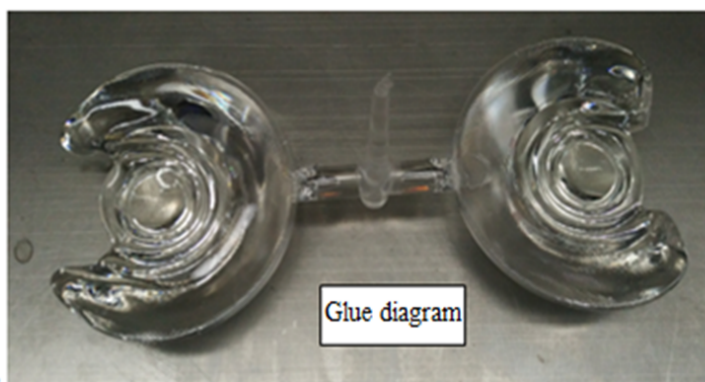

Please note:

The appearance of lines in the structure of the product as well as at the screw hole is a normal phenomenon, will not affect the actual use of the product, and can not be avoided at this stage.

Appearance inspection standards

1 Operating procedures

1.1.1 Sampling standards, sampling plan and AQL

Test level: GB/T2828.1-2012 The first part is according to the acceptance quality limit (AQL) retrieval batch inspection sampling plan, general inspection level II level, CR class defect coefficient 0, MA defect rejection level AQL = 0.65, MI class defect rejection level AQL = 1.0; defect level please see 5.4.

2 Code table

Code	Code description	Unit	Code		Code description	Unit
N	Amount/pcs	pcs	D		Diameter	mm
L	Length	mm	H		Depth	mm
W	Width	mm	DS		Distance	mm
S	Proportion	mm ²	SS		Offset	mm

3 Test conditions

3.1 Sight distance and working hours: Sight distance should be 30-35cm, each side of the inspection time does not exceed 12s, the visual angle of 45-135 degrees;

3.2 Light: 2x40w cool white fluorescent lamp, the light source is 500-550mm away from the lens surface; in order to make the appearance defect can be correctly recognized, the illumination should be 500-1000Lux, and the observation time is 10 seconds.

3.3 Visual inspection staff should be 1.0 (including corrected visual acuity) above, no color blindness, color weakness.

4 Appearance inspection standards

Test items	Judging standard	Inspection equipment	Defect level		
		Testing method	MI	MA	CR
Check the sample	When start the machine and process, all products have to check the appearance of the sample, the appearance of the sample is divided into qualified samples and limited samples.	Sample comparison , visual			√
	1: Qualified sample refers to the appearance and structure standard of the product which recognized by the client, the sample size should be confirmed before mass production;				

	2: The limited sample refers to the limit of a particular exceptionally developed sample. Limit the sample only for its specific point of exception to confirm; The priority is higher than the other criteria in this table. When there is a limited sample, the limit sample shall prevail.				
Raw edge	Not allowed to affect the size and assembly	Visual, point card		√	
Scratch	1: Non-optical surface and non-exposed surface scratches should be visually insignificant and the length is less than 1/10 of the maximum surface size.	Visual, point card, calipers		√	
Fingerprint	Fingerprints are not allowed on all products	Visual		√	
Foreign objects, black spots, white spots	The product may not be attached to foreign objects, including oil, fiber, dregs of water gap and so on				√
Deformation	Insufficient filling shall not affect the appearance of the assembly and the exposed surfaces.	Visual, feeler			√
Poor ejection	Products may not appear bad ejection, including no convex top, thimble printed on the assembly surface shall not be higher than the product surface, non-assembled surface thimble height should not exceed the product size tolerances; thimble printing should be less than the product surface and no more than 0.3; thimble surface treatment should be consistent with the product side.	Visual, point card		√	
	Ejection strain: the optical surface and the appearance of the exposed surface after assembly are not allowed to have a strain, and the structural surface does not allow visual obvious strain.				
Insufficient filling	Insufficient filling shall not affect the appearance of the assembly and the exposed surfaces, The signature sample shall prevail.	Visual, point card		√	
Shrink	When the entire surface of the product shrinks, the optical properties and dimensions must meet the requirements, and the visual will not significantly affect the appearance. Part shrink reference point defects	Visual, point card		√	
Flow marks、Welding line	1: Product does not allow the presence of flow marks and welding lines unless the structure can not be avoided;	Visual		√	
	2: The remaining flow marks shall not appear in the optical surface, a single $L \leq 10\text{mm}$, no more than two				

Bubble	No bubbles are allowed	Visual		√	
Foreign objects, black spots, white spots	Not obvious or $D \leq 0.3\text{mm}$ black spots and foreign bodies in the area of 100x100mm not more than 1; Exceeded foreign matter black spots is judged bad.	Visual, point card	√		
Damaged	No damage is allowed	Visual			√
Cold glue	Optical surface may not have cold glue, non-optical surface cold glue should meet the visual is not obvious.	Visual	√		
Bad incision	1: Do not affect the product size, shall not penetrate the optical surface, the cut should be smooth;	Visual			√
	2: Laser cutting products, the optical surface burns shall not occur after the processing is completed. Beading must not affect product installation				
	3: Three molds and hot runner gate shall not appear residue.				
Scrub	Scrub surface should be uniform, off the scrub phenomenon should not be obvious , A single off scrub imprint requires $D \leq 1\text{ mm}$ and no more than 1 area within a 50x50 mm area	Visual		√	