

ZINC ALLOY KEYLESS MECHANICAL DEADBOLT

COMMERCIAL GRADE MKDZG1B



BRAVEX LOCKS

Bravex is dedicated to providing customers with top-grade quality and innovation at an affordable price. Our stylish designs and high quality craftsmanship have graced customers doors since 2017.

Series MKDZG1B Locks are a family of high grade zinc alloy mechanical keyless deadbolts. They are ideal for residential homes, apartment buildings, offices, schools, hospitals, an other applications where restricted access to an area is needed.

Bravex is committed to providing exceptional customer service. Our Commercial Grade MKDZG1B comes with a lifetime mechanical warranty.

INSTALLATION VIDEO PAGES



Code change instructional video https://www.bravexlocks.com



Lock core change instructional video https://www.bravexlocks.com





Lock installation instructional video https://www.bravexlocks.com

CONTENTS

1. List Of Parts	02
2. Lock Assembly Diagram	03
3. Prior To Installation	04
4. Set The Passcode	04
5. Passcode Troubleshooting	07
6. How To Change Lock Core	07
7. Installing The Lock	07
8. Using The Lock	12
9. Warning	13
10. Contact Us	14


LIST OF PARTS

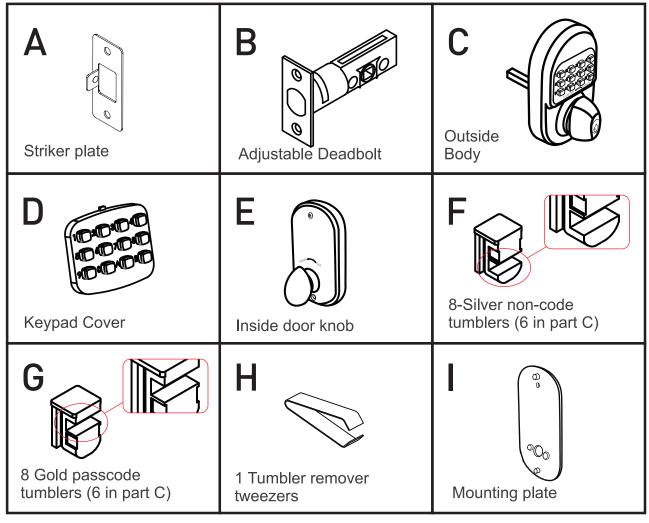

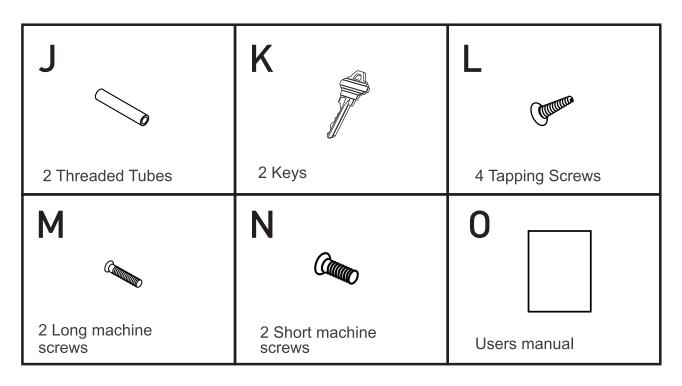

Not Included: Philips head screwdriver

LOCK INSTALLATION DIAGRAM

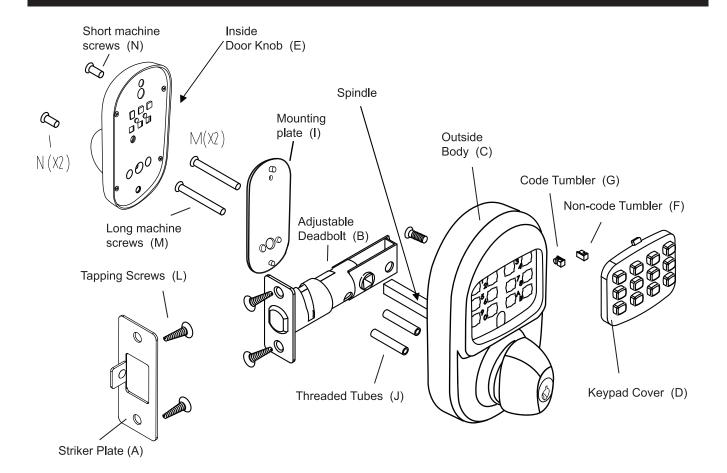

PRIOR TO INSTALLATION

Here are some key features of the Commerical Grade MKDZG1B that you will want to observe carefully before moving forward with the installation process.

MAKE SURE YOUR DOOR IS COMPATIBLE

Door thickness: 1-3/8 to 2-3/8 inches Backset length Option 1: 2-3/4 inch Backset length Option 2: 2-3/8 inch

UNDERSTAND THE OPERATION OF THIS LOCK

The MKDZG1B will not lock automatically when closed. Just like any deadbolt the knob must be turned to lock the door.


SET PASSCODE BEFORE INSTALLATION

This lock is **not battery operated** and therefore the entry code must be programmed **prior to installation**. See page 04 for Entry code programming instructions. (SET THE PASSCODE)


SET THE PASSCODE

REMOVE KEYPAD COVER (D)

The keypad cover is removed by simply unscrewing the center short machine screw on the back of the outside body(C).

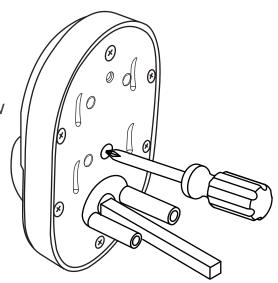

Remove the keypad cover

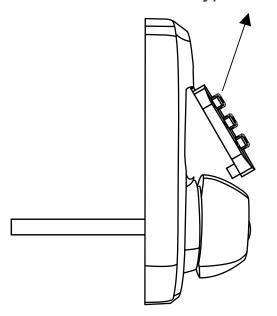


Once this is removed flip the lock over and pull the keypad cover down and out.

REARRANGE THE TUMBLERS


The preset factory code is 125690. You will notice that the gold passcode tumblers (G) are located beside 125690.

To change the passcode, first turn the knob to the left to push up the tumblers.

Use the included tweezers (H) or your fingers to simply remove the gold passcode tumblers(G) and insert them into the spaces next to your desired new code. The silver non-code tumblers(F) go in the other spots. The example shows the gold tumblers in the new passcode 1234 with the silver tumblers.

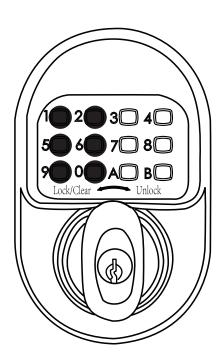



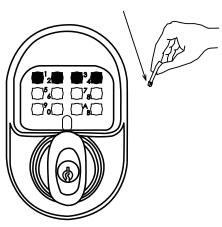

NOTE

You can adjust the length of your code by using the 4 additional tumblers we included in the bag. For a shorter code, use fewer gold tumblers (G), for a longer code use more gold tumblers(F).

Please note that this lock does not place importance on the order of the code. A code set to 1234B will also accept 4B321, 234B1, B4123 etc.

You cannot repeat a letter or digit twice. The code 19A81A cannot be chosen as a code because it repeats the digit 1 and the digit A.

TEST YOUR NEW CODE

Test to make sure your code is working properly to open the door. To do this first begin by turning the knob to the left. When this happens, all the tumblers should pop out slightly.


Then press down the gold passcode tumblers (your new code). Remember, this can be done in any order.

Then attempt to turn the knob to the right. If it turns, it means that you were successful and you can move on to the next step.

If it doesn't turn to the right, please see the troubleshooting section below, or contact our customer service number for further assistance (800-315-9607).

REINSTALL KEYPAD COVER.

Place the keypad cover back on the face of the outside body and screw the middle

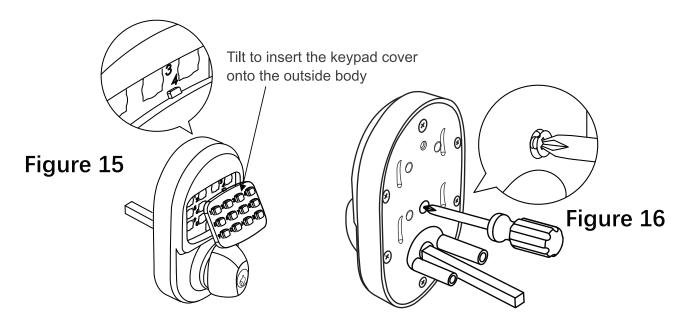

Test to make sure your code is working with the keypad cover on. Now you are ready to install the lock on the door!

PASSCODE TROUBLESHOOTING

IF YOUR PASSCODE IS NOT WORKING


- Try removing all tumblers and reinstalling them, it could be that one of the tumblers was not inserted correctly.
- Double check the color of the tumblers and that the number of gold tumblers matches the length of your code. If all of the gold tumblers are not pressed, or any of the silver tumblers are pressed, the lock will not open.
- If you have done both of these things, it could be that you received a damaged or used lock. Please call our customer service number 800-315-9607 or email us at service@bravexlocks.com for a hassle free replacement.

HOW TO CHANGE LOCK CORE


Before changing core, read this information carefully. FAILURE TO FOLLOW

INSTRUCTIONS CAN RESULT IN DAMAGE TO LOCK.


1 Enter code and turn knob to unlock, hold knob in unlocked position. An opening should be visible on the bottom side of the knob.

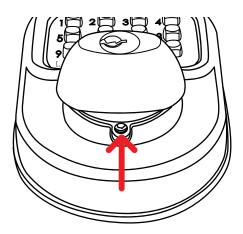


2 Insert the included hex key into the opening and unscrew. Keep the screw in a safe place as you will need it later.

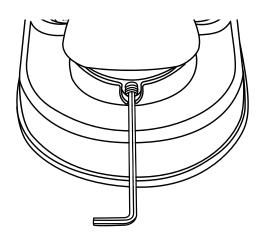

3 Carefully remove the knob by pulling outwards. This will reveal the lock core and cylinder.

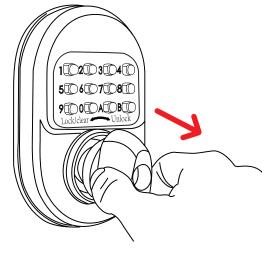


4 Pull out the core from the cylinder to replace. Please make sure the new core is thoroughly pushed in.

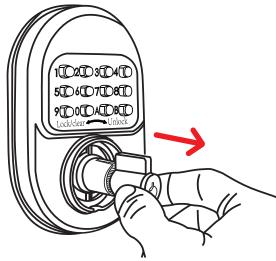

When completed changing the core, replace the knob carefully. Return knob to unlock position and fasten screw with hex key. Always test your new core before installing/re-installing the lock to the

door.

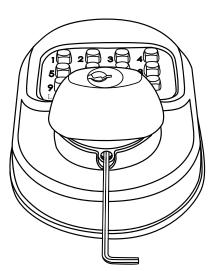


INSTALLING THE LOCK


A WARNING


Be sure to test the lock before closing the door.

This deadbolt should fit most standard sized doors. Please double check the size of the backset and the thickness of the door to make sure this lock is appropriate.

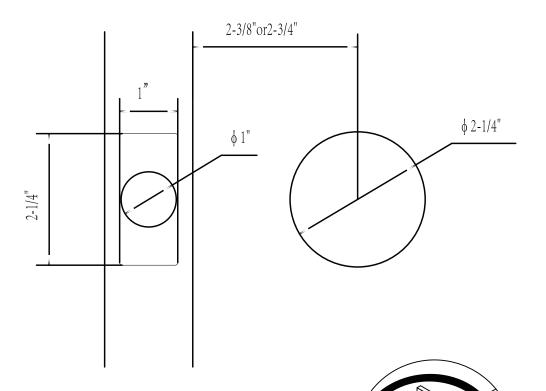


- 1 If needed bore or drill a hole according to the template provided.
- Adjust the size of the adjustable deadbolt (B) to fit your door. Twist the deadbolt to choose either a 2-3/4 inch backset or a 2-3/8 inch backset. Be sure the center square on the latch aligns with the center of the bore hole in your door.

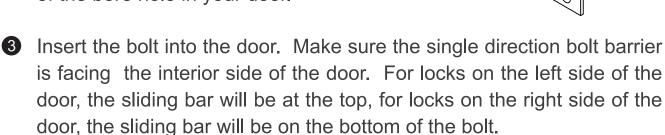


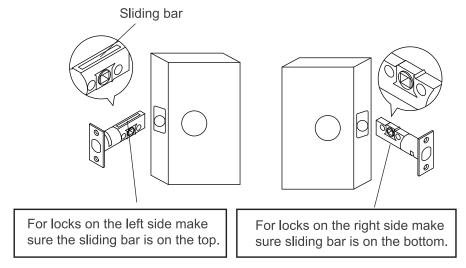


4 Be sure to use the tapping screws L to fasten the bolt to the door by using a Phillips head screwdriver. We do not recommend using a drill.

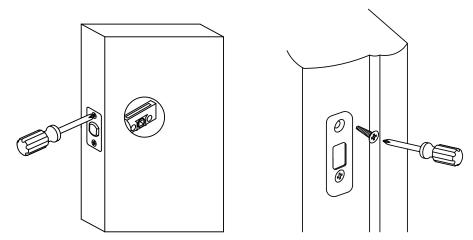


Insert the rectangular spindle of the outside body(C) into the square hole in the bolt (B) and press until flush against the door.

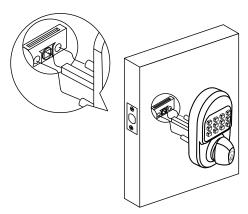

- 6 Place the black plastic sleeves onto the threaded tubes to help guide the placement of the long machine screws.
- Attach the mounting bracket to the threaded tubes from the outside body; Tighten with the 2 long machine screws. Insert the square spindle into the back door knob and press until it is flush against the door.

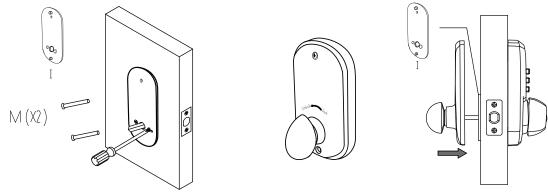

Screw the 2 short machine screws to fasten the back door knob onto the mounting plate on the door. Test the inside door knob to make sure it is working properly. When the knob is in the vertical position, the deadbolt should be out in the locking position. If the knob is vertical the deadbolt should be in.

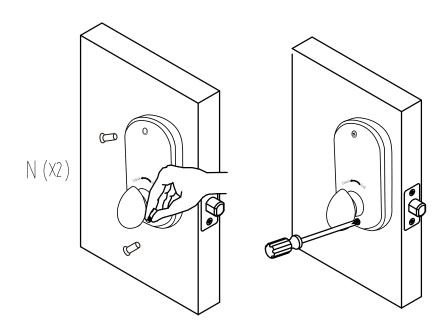

Return to the front side of the door and TEST both inputting the passcode and opening the lock with the key. Once you have confirmed that
these are working properly you are ready to use the lock.

USING THE LOCK

To lock the door from the inside simply turn the knob clockwise and counterclockwise to open.



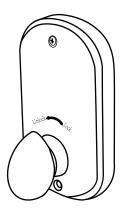


Figure 23

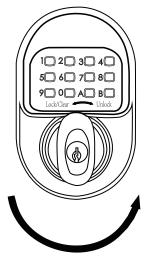

To lock the door from the outside, turn the knob counterclockwise.

To unlock the door using the key, insert the key in the horizontal position and turn the key clockwise.

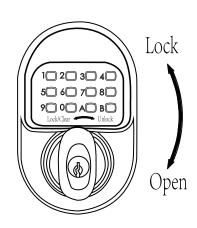

To unlock the door using the passcode, begin by turning the knob left (counterclockwise) to clear the memory. Then enter your passcode and turn the knob to the right (clockwise) to open.

Enter Code

Clear Memory



Turn Right to Open



NOTE

This lock does not automatically latch. Like any deadbolt, you must turn the knob manually in order to lock the door.

A WARNING

Our Commercial Grade MKDZG1B comes with a Lifetime Mechanical Warranty.

If you need to return or replace your item, please contact us directly to avoid unnecessary customer shipping fees.

If your product return and replacement window has expired, we will continue to provide you with great customer service. Contact us directly so we can better serve you.

For technical support, please contact us directly. Our technical support team is dedicated to making sure your technical questions are answered in a professional and timely manner.

For more information visit our website at www.bravexlocks.com



www.bravexlocks.com

CONTACT US

Facebook: https://www.facebook.com/bravexlocks Email: service@bravexlocks.com

Toll Free: (800) 315-9607

Address: 5448 Apex Peakway Box 197 Apex, NC 27502