

# LVMA

Y-700 Series A.T.S controller

## **Operating Manual**

<Read the operating manual carefully before installation>



# CONTENT

---

1.Summary .....	01
2.Performance And Characteristics .....	01
3.Type And Meaning .....	02
4.Technical Parameters .....	02
5.Operating .....	03
Operation Panel .....	03
Key Function Description .....	03
6.Lcd Display .....	04
Main Screen .....	04
Main Menu Interface .....	05
7. Commissioning .....	06
8.Parameters Configuration .....	06
Parameters Table .....	07
Input/output Function Description .....	09
9.Timing Start .....	11
10.Date And Time Setting .....	11
11.Controller Information .....	11
12.Ats Operation .....	11
Manual Operation .....	11
Automatic Operation .....	12
Ats Power Supply .....	12
13.Communication Configuration .....	13
14.Description Of Connecting Terminals .....	13
15.Typical Wiring Diagram .....	15
16.Installation .....	19
17.Fault Finding .....	20

# 1.SUMMARY

Y-700 series ATS controller is intelligent dual-supply switch module, which integrates a programmable function, automatic measurement, LCD display, and digital communication. It combines digital, intelligent, networking, measurement and control process automation, disoperation, in order to reduce the faults during operation. It is the best ideal option in ATS.

Y-700 series ATS controller is made of microprocessor as its core, can accurately detect extended-spectrum 2-way-3-phase voltage and also make accurate judgment and output passive control switch under the abnormal voltage(over and under voltage,miss phase and over and under frequency).

This controller has full consideration in various application of ATS (automatic transfer system) can be directly used for Intelligent ATS, Contactor ATS, Circuit Break ATS etc. It have compact structure, advanced circuits,simple wiring and high reliability,be widely used in Electric power, Telecommunications, Petroleum, Coal, Metallurgy, Railways, Municipal, Intelligent building, Electrical devices, Automatic control and Testing system etc.

# 2.PERFORMANCE AND CHARACTERISTICS

- System type can set for: Mains (1#) & Mains (2#), Mains (1#) & Gens (2#), Gens (1#) & Mains (2#), Gens (1#) & Gens (2#).


- The LCD 128x64, take backlit, two languages (simplified Chinese and English) display, and gentle press key for operation.

Measure and shows 2-way 3 phase voltage and frequency parameters:

Way#1	Way#2
Line-Line voltage (Uab, Ubc, Uca)	Line-Line voltage (Uab, Ubc, Uca)
Phase-Nature voltage (Ua, Ub, Uc)	Phase-Nature voltage (Ua, Ub, Uc)
Frequency (F1)	Frequency (F2)

- With over voltage, under voltage, loss of phase, reverse phase sequence, over frequency, under frequency functions.
- With the auto/manual operation mode. In manual mode, may enforce switch to close or open.
- All parameters can be set in the field. Apply for two-stage password to ensure authorized staff operation only.
- Can be set as on-load/off-load mode in the field for start genset.
- Can make switch to re-close when switch is opened accidentally or make switch to power off then re-close.
- Closing output can be set as pulse or continuous output.
- Applicable for ATS of one OFF segment, two OFF segments and none OFF segment.
- With design of two way separate of N circuitries.
- Real-time clock (RTC).
- Can start or stop genset automatic on scheduler. Also be set as single time operation, monthly or weekly, and whether with load or not.
- Can control two gensets to work in cycle, even the genset running time and interval rest time can be set.
- Widely range of DC power supply. Max.80V DC input can be endured in an instant. Also an through HWS560(85V-560VAC input 12VDC output) power mould supply power source;
- Bigger space between connecting terminals of AC input. Max.625V input voltage.
- With standard insulated RS485 communication interface port. With "remote controlling, remote measuring, remote communication" function by the ModBus communication protocol.
- Can check the status of controller (including of switch auxiliary output, over-voltage, and under-voltage etc.).
- Suitable for various AC systems (3-phase 4-wires, 3-phase 3-wires, single-phase 2-wires, and 2-phase 3-wire).
- Modular configuration design, flame-resisting ABS plastic shell, inserted type connection terminals and built-in installation. Compact structure with easy installation.

### 3. TYPE AND MEANING

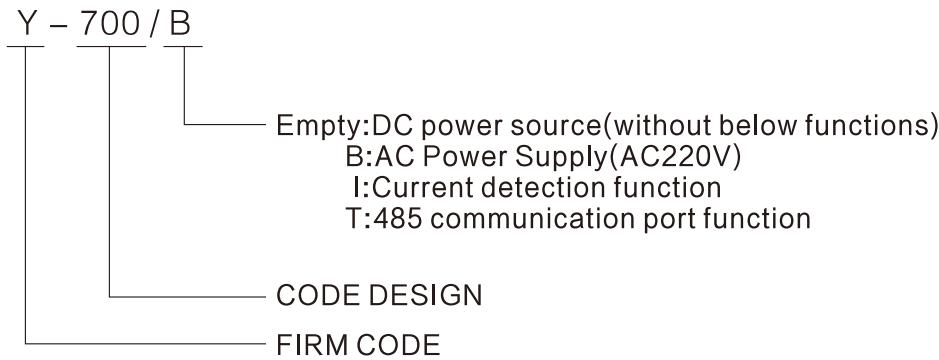


### 4. Technical parameters

Operating Voltage	1. DC 8.0V~35.0V, power supply constantly. 2. HTS220/HWS560 Power mould supply power (No battery charge) 3. AC power L1N1/L2N2 supply. Voltage range AC (160~280V) (Y-700/B、Y-700/BI)		
Power Consumption	<3W (Standby mode: ≤2W)		
AC Voltage Input	AC System	Y-700、Y-700/I	Y-700B、Y-700/BI
	3-phase 4-wire(L-L)	80V~625V	80V~480V
	3-phase 3-wire(L-L)	80V~625V	Not Used
	1-phase 2-wire(L-N)	50V~360V	50V~280V
	2-phase 3-wire(A-B)	80V~625V	80V~480V
Rated Frequency	50/60Hz		
Close And Open Trip Relay Output	16A 250VAC Free voltage relay output		
Programmable Relay Output	16A/7A 250VAC Free voltage relay output		
Digital Input	Connecting to GND is active		
Communication	RS485, MODBUS Protocol		
Dimensions	211mmx155mmx55mm		
Panel Cutout	186mm x 141mm		
Operating Temp.	Range Temperature: (-25~+70)°C; Humidity: (20~90)%		
Storage	Condition Temperature: (-30~+80)°C		
Protection Rank	IP55: when waterproof sealing gasket added between controller and screen. IP42: when waterproof sealing gasket NOT added between controller and screen.		
Insulation Strength	Object: Among the input/output/ power supply. Quoted standard: IEC688-1992. Test way: AC1.5kV/1min leak current 5mA.		
Weight	0.8kg (Y-700,Y-700/I)/1.0kg(Y-700/B,Y-700/BI)		

## 5.OPERATING

### 5.1.OPERATION PANEL

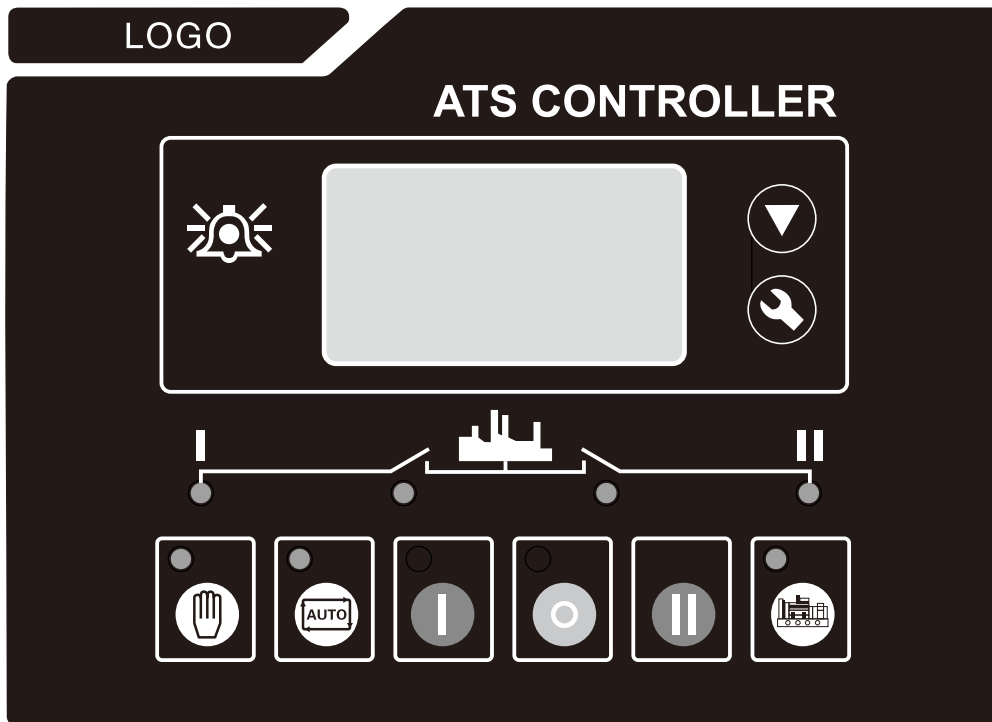

### 5.2.Key functional description

	I# Close	Used to transfer 1# power to load in manual mode.
	Open	Used to transfer 1# or 2# power to off-load in manual mode
	II# Close	Used to transfer #2 powers to load in manual mode
	Manual	Used to initiate manual operation.
	Automatic	Used to initiate automatic operation.
	Test	Pressing the key can directly enter commissioning interface.
	Menu /Confirm /Decrease	Press the key to enter menu interface; long pressing to return to the main menu interface. When an alarm occurs, long pressing the key can eliminate fault alarm.
	Page down	Page turning. In parameters adjustment menu, used to increase values.

## 6.LCD DISPLAY

### 6.1.MAIN SCREEN

<p>U1(L-L) 380 380 380V          U2(L-L) 380 380 380V          F1 50.0Hz F2 50.0Hz          Present Status: MANUAL</p>	<p>This screen will show:          line-line voltage(L1-L2, L2-L3, and L3-L1), frequency and controller present status is in manual (auto) mode.</p>
<p>U1(L-N) 219 219 219V          U2(L-N) 219 219 219V          2010-06-10 (4) 20:25:36          Present Status: MANUAL</p>	<p>This screen show:          1# and 2# of the threephase voltage (L-N), real-time clock and controller working state.</p>
<p>AMP 500 500 500A          PWR 329KW          PF 1.00 PS 329kVA          Present Status: MANUAL</p>	<p>This screen show:          3 phase load current,active power, apparent power, power factor and work state of controller.</p>
<p>1# Volt normal          2# Volt normal          Gens start signal output          Gens starting</p>	<p>LCD display I# operating state of power supply.          LCD display II# operating state of power supply.          LCD displays other operating state.          Present status is in manual (auto) mode.</p>

#### Display priority of the #1 status (upper to lower)

Num	Item	Type	Description
1	1# Fail to Close	Breaker Fault	When 1# breaker occur closing failure,this will display.
2	1# Fail to Open	Breaker Fault	When 1# breaker occur opening failure, this will display.
3	1# Over Volt	Indication	When 1# source occur over voltage, this will display.
4	1#Loss of Phase	Indication	When any of 1# three phases is miss,this will display.
5	1# Over Freq	Indication	When 1# source occur over frequency,this will display.
6	1# Under Freq	Indication	When 1# source occur under frequency, this will display.
7	1# Under Volt	Indication	When 1# source occur under voltage, this will display.
8	1# Phase Sequence Fault	Warning	When 1# phase sequence is error, this will display.
9	1# Volt Normal	Indication	When 1# source voltage is normal, this will display.

## Display priority of the #2 status (upper to lower)

Num	Item	Type	Description
1	2# Fail to Close	Breaker Fault	When 2# breaker occur closing failure,this will display.
2	2# Fail to Open	Breaker Fault	When 2# breaker occur opening failure, this will display.
3	2# Over Volt	Indication	When 2# source occur over voltage, this will display.
4	2#Loss of Phase	Indication	When any of 1# three phases is miss,this will display.
5	2# Over Freq	Indication	When 2# source occur over frequency,this will display.
6	2# Under Freq	Indication	When 2# source occur under frequency, this will display.
7	2# Under Volt	Indication	When 2# source occur under voltage, this will display.
8	2# Phase Sequence Fault	Warning	When 2# phase sequence is error, this will display.
9	2# Volt Normal	Indication	When 2# source voltage is normal, this will display.

## Display priority of the other status (upper to lower)


Num	Item	Type	Description
1	Engine starting	Indication	Display that engine has been started.
2	Breaking compulsorily	Warning	Breaking compulsorily input is active.
3	Load over current	Warning	Load current is over the setting limit and exceed the setting delay.

### NOTE:

Faults: when alarm occurs, alarm lamp will flash and this alarm signal will continue until long pressing key to reset.

Warning: when warning occurs, alarm lamp will flash and will not latch. When a warning is inactive, alarm lamp will latch.




## 6.2.MAIN MENU INTERFACE


In the screen, press  key , can enter the main menu interface.

- 1. Parameters set
- 2. Time start
- 3. Date & Time Set
- 4. Language
- 5. Information

Press  key to choose different parameters (the current line anti-black)and then press  key to confirm, can enter the corresponding display screen.

## 7.COMMISSIONING

On the main screen press  key and directly into the test generator operation interface, the screen will show as following:  
Press  key to select corresponding function, and press  key to confirm.

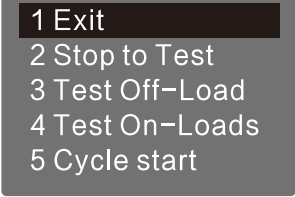

1 Exit  
2 Stop to Test  
3 Test Off-Load  
4 Test On-Loads  
5 Cycle start

**STOP TO TEST:** This will stop a start generator signal immediately.

**TEST OFF-LOAD:** This will send out a start generator signal immediately. After 2# source is normal, if 1# source is normal, the ATS will not act. The ATS will transfer the load to 2# only when 1# source is abnormal. After 1# source return normal, the ATS will transfer the load to 1#. Here the start generator signal output will keep.

**TEST ON-LOAD:** This will send out a start generator signal immediately. After 2# source is normal, the ATS will transfer the load to 2# source immediately regardless of 1# source normal whether or not.

**CYCLE START:** When choosing this mode, generator start-signal will cyclic output according to mains status, user can set the cyclic time. If generator fault of input-signal, no longer send start-signal. If in manual mode, will keep the current status and cancel cycle start.

### Conditions under this mode:










- 1.In automatic mode.
- 2.Output port setting: 1# engine start output (Normal Output) and 2 # engine start output (Normal Output).
- 3.Input port setting: 1# generator fault input and 2# generator fault input.
- 4.Must set the <Cycle run times> and the <Cycle shutdown times>.
- 5.The system type set must as 1# Gens & 2# Gens.
- 6.Set the right <generator start delay>.

### Note:

In manual mode, after choose commissioning, generator will output start-signal immediately, but the ATS will not transfer to load automatically except for operation manually by pressing key mounted on the front panel.

## 8.PARAMETERS CONFIGURATION

In the main interface, press  key, choose 1.Parameters setting and then press  key, to enter interface of confirming password.

Input password value 0.9 by  key, and to shift Right by  key. Press the  key in the fourth of password to confirm. If password correct and enter into the parameter mains interface. While error, directly exit to return to main interface.Factory Default Password is 1234. Press  key to turn over and set parameters. While setting the current configuration parameters according to press  key. Then enter current parameter model, and the current value of the first line screen display against the first black. Press  key to change number, press  key to shift position, and press  key again to confirm in the last number position. If the setting value within limits, the value is stored into the internal controller FLASH. Beyond the limits, parameters will can' t be saved. In the parameters setting interface, long time press  key will back to the main display screen.

## 7.1 Parameters Table

Num	Item	Range	Default	Description
01	1#Normal Delay	(0-9999)s	10	It is the delay of #1 power from voltage abnormal to voltage normal.
02	1#Abnormal Delay	(0-9999)s	5	It is the delay of #1 power from voltage normal to voltage abnormal.
03	2#Normal Delay	(0-9999)s	10	It is the delay of #2 powers from voltage abnormal to voltage normal.
04	2#Abnormal Delay	(0-9999)s	5	It is the delay of #2 powers from voltage normal to voltage abnormal.
05	Open Breaker	(0-20)s	5	Breaker close pulse. If it is set to zero, the output will hold.
06	Close Breaker	(1-20)s	5	Breaker open pulse.
07	Transfer Interval	(0-9999)s	1	It is the delay from #1 power opened to #2 powers starts to close or from #2 power opened to #1 power start to close.
08	Exceed Transfer Time	(0-20.0)s	0.0	After the module has received a close state input, the breaker close outputs continue to hold until the delay is expended.
09	Again Shut Time	(0-20.0)s	1.0	When the breaker fail to close for the first time, the module will open breaker, and then attempt to close for the second time, if the second time closing breaker is still failure, the module will send out closing breaker failure signal.
10	Again Break Time	(0-20.0)s	1.0	When the breaker fail to open for the first time, the module will close breaker, and then attempt to open for the second time, if the second time opening breaker is still failure, the module will send out opening breaker failure signal.
11	Gens Start Delay	(0-9999)s	1	It is the delay from #1 power is abnormal to send out start generator signal. In cyclic start, issued after start signal, began to delay, after delay ended, voltage if abnormal, will send gen-set fault alarm, and starting a gen-set, right now the user settings generator start delay value must be over units, the lowest total time start process for 30 seconds.
12	Gens Stop Delay	(0-9999)s	5	It is the delay from #1 power is normal to send out stop generator signal.
13	Cycle Run Time	(1-1440)m	720	Gens cycle start run time.
14	Cycle Stop Time	(1-1440)m	720	Gens cycle start stop time.
15	Rated Volt	(100-600)V	230	AC system rated voltage.
16	Over Volt	(100-150)%	120	The settings are used to configure the power over voltage point in the event of the voltage rising above the setting value. This value can be adjusted to suit user requirements.
17	Over Volt Return	(100-150)%	115	Normal return value of over voltage
18	Under Volt	(50-100)%	80	The settings are used to configure the power under voltage point in the event of the voltage falling below the setting value.

Num	Item	Range	Default	Description
19	Under Volt Return	(50–100)%	85	Normal return value of under voltage.
20	Over Freq	(0.0–75.0)Hz	55.0	When the frequency of power is over than the point, over frequency is active.
21	Over Freq Return	(0.0–75.0)Hz	52.0	Normal return value of over frequency.
22	Under Freq	(0.0–75.0)Hz	45.0	When the frequency of power is low than the point, low frequency is active.
23	Under Freq Return	(0.0–75.0)Hz	48.0	Normal return value of overfrequency.
24	CT Rate	(5–6000)/5	500	Current Transformer rate.
25	Rated Load Current	(5–5000)A	500	Load rated current.
26	Over Current Value	(50–150)%	120	Load over current value.
27	Over Current Delay	(0–9999)s	1296	Over current alarm delay value.
28	Equipment Address	(1–254)	1	Rs485 communication address
29	Password		1234	It applies to modify parameters.
30	System Type Set	(1–4)	1	1.1 # Mains 2# Gens      3.1# Mains 2# Mains 2.1# Gens 2# Mains      4.1# Gens 2# Gens
31	Breaking Position	(1–3)	1	1. Two Breaking, two OFF position, such as the ATS composed of two circuit breakers or two contacts. 2. One Breaking, one OFF position (three segments kind), such as SOCOMEC switch. 3. NO Breaking, no OFF position (two segments kind).
32	AC System Set	(1–4)	1	1. 3–phase 4 wires      3. Single phase 2 wire 2. 3–phase 3 wires      4. 2–phase 3 wires
33	Priority Select	(1–3)	1	1. 1# Priority 2. 2# Priority 3. NO Priority
34	Aux. Output 1	(1–28)	25	01.Not used 02.Critical failure 03.Fail of transfer 04. Warning output 05. Alarm output (delay) 06.1# normal volt 07.1# abnormal volt 08.2# normal volt 09.2# abnormal volt 10.Over current output 11. Auto state output 12. Manual state output
35	Aux. Output 2	(1–28)	28	

Num	Item	Range	Default	Description
36	Aux. Output 3	(1-28)	13	13. Gens start (N/O) 14. Gens start (N/C) 15.1# shut output 16. 1# break off output 17.2# shut output 18. 2# break off output 19. Common alarm output 20. Timing test Gen start 21.1# shutdown state 22.2# shutdown state 23.1#Gens start (N/O) 24.2#Gens start (N/O) 25.ATS power L1 26.ATS power L2 27.ATS power L3 28.ATS power N
37	Aux. Output 4	(1-28)	16	
38	Aux. Output 5	(1-28)	18	
39	Aux. Input 1	(1-9)	02	
40	Aux. Input 2	(1-9)	01	01.Not used 02.Breaking compulsorily 03.Test off-load 04.Test on-load 05. Test Lamp 06. 1# Gens Alarm 07. 2# Gens Alarm 08. Remote start 09. Reserved
41	Aux. Input 3	(1-9)	01	
42	Aux. Input 4	(1-9)	01	

## 8.2 INPUT/OUTPUT FUNCTION DESCRIPTION

Item	Description
1 Not Used	Invalid.
2 Breaking Compulsorily	When active, this will force the breaker to transfer the ATS to OFF position. It isn't suit for none OFF positionATS.
3 Test Off-Load	When active, this will send out a start generator signal immediately. After 2# source is normal, if 1# source is normal, the breaker will not act.
4 Test On-Load	When active, this will send out a start generator signal immediately. After 2# source is normal, the breaker will transfer the load to 2# immediately regardless of 1# source normal whether or not.
5 Test Lamp	When active, all Led lamps mounted on the front panel will illuminate, LCD will fill black block.
6 1# Gens Alarm	In Cycle start, if the input is active, 1 # Gens will not start
7 2# Gens Alarm	In Cycle start, if the input is active, 2 # Gens will not start
8 Remote Start Input	This input is necessary for cycle start generator.
9 Reserved	

The output function as below,

Item	Description
1 Not Used	Invalid.
2 Critical Failure	Critical fault alarm including switch transform failure.
3 Fail Of Transfer	Switch failed including 1# closed failure, 1# open failure, 2# closed failure, 2# open failure.
4 Warning Output	General warning includes 1# reverse phase sequence; 2# reverse phase sequence, and load over current and compulsory breaks.
5 Alarm Output (Delay)	Serious fault alarm output, continuous output 60 seconds.
5 Alarm Output (Delay)	Serious fault alarm output, continuous output 60 seconds.
7 1# Abnormal Volt	It will output when #1 voltage is abnormal.
8 2# Normal Volt	It will output when #2 voltages is normal.
9 2# Abnormal Volt	It will output when #2 voltages is abnormal.
10 Over Current Output	Set limits on more load current and exceeds delay.
11 Auto State Output	In auto state output.
12 Manual State Output	In manual state output.
13 Gens Start (N/O)	When generator starts output (Relay closed).
14 Gens Start (N/C)	When generator starts output (Relay released).
15 1# Shut Output	#1 shut output.
16 1# Break Off Output	#1 breaks off output.
17 2# Shut Output	#2 Switch close output.
18 2# Break Off Output	#2 Switch open output.
19 Common Alarm Output	It is include serious fault alarm and common alarm.
20 Timing Test Gen Start	Schedulers start generator function.
21 1# Shutdown State	#1 Switch auxiliary shutdown output.
22 2# Shutdown State	#2 Switch auxiliary shutdown output.
23 1# Gens Start (N/O)	1# Gens start output.
24 2# Gens Start (N/O)	2# Gens start output.
25 ATS Power L1	ATS power supply.
26 ATS Power L2	
27 ATS Power L3	
28 ATS Power N	

## 9. TIMING START


On the main screen press  key and select **2 Time start**, and then pressing  key, the screen will show the time start interface as follow:

Time start cycle: Include inhibit start; single time, weekly or monthly.

Load set: Starting generator with load or without load.



Start time: Generator start date and time.

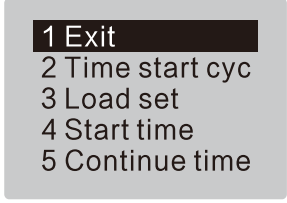



Continue time: Generator continuously run time can be set on the duration of maximum time for 99 hours 59 minutes.




1 Exit  
2 Time start cyc  
3 Load set  
4 Start time  
5 Continue time

## 10. DATE AND TIME SETTING

On the main screen press  key and select **3 Date & Time set**, and then pressing  key, the screen will show the Date & Time Set interface as follow:

Press  key according to the corresponding bit input values 0–9, pressing  key to carry through the right of bit shift, right shift to the end of pressing  key, according to the key  on the date and time can be updated controller.

Date and time format set: year–month–date (week) and hour: minute.

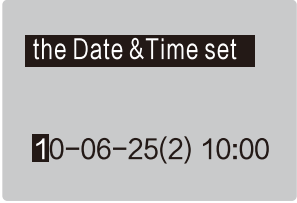


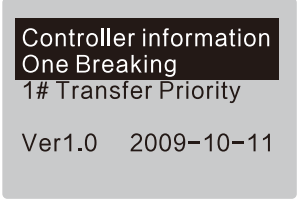
the Date & Time set  
10-06-25(2) 10:00

## 11. CONTROLLER INFORMATION

On the main screen press  key and select **5 Controller information**, and then pressing  key, the screen will show the controller information interface as follow:

Display content includes off positions setting and switching priority choice and controller version, date.

Pressing key  will exit and return to main screen.





Controller information  
One Breaking  
1# Transfer Priority  
Ver1.0 2009-10-11


## 12. ATS OPERATION

### 12.1 MANUAL OPERATION

Press  key and manual operation indicator light, the controller in manual mode.

Press  key, 1# close relay outputs immediately, begin to monitor 1# closing input, if active, the 1# source LED light, the 1# source connect to load.

Press  key, 2# close relay outputs immediately, begin to monitor 2# closing input, if active, the 2# source LED light, the 2# source connect to load.

Press  key and 1# or 2# open relay outputs immediately, begin to monitor 1# or 2# closing input, if inactive, the 1# and 2# source LED extinguish, and 1# and 2# source disconnect with load.

\*1: For the ATS of no OFF position, press  key is invalid.


## 12.2 AUTOMATIC OPERATION

Press the  key and the automatic LED illuminates, enter AUTO mode and controller can automatically switch load to 1# or 2#.

## 12.3 ATS POWER SUPPLY

The power of ATS is supplied by controller, so long as one power is normal, this can guarantee ATS voltage power supply normally and can be transferred normally.

Users should select power supply voltage (phase voltage or line voltage) based on ATS type. If power supplied by phase voltage, connect the phase A1 to Pin5 in AUX. output1 and A2 to Pin7, and connect the phase N1 to Pin8 in AUX. output2 and N2 to Pin10, then connect the common output of AUX. output1&2 to ATS power supplies. Then controller power on, enter parameters setting menu, and set the AUX output1 as "ATS power L1". If the ATS power supplied by Line voltage, set as same as above, and only need to change phase N to phase B. Wiring diagrams are shown as following:

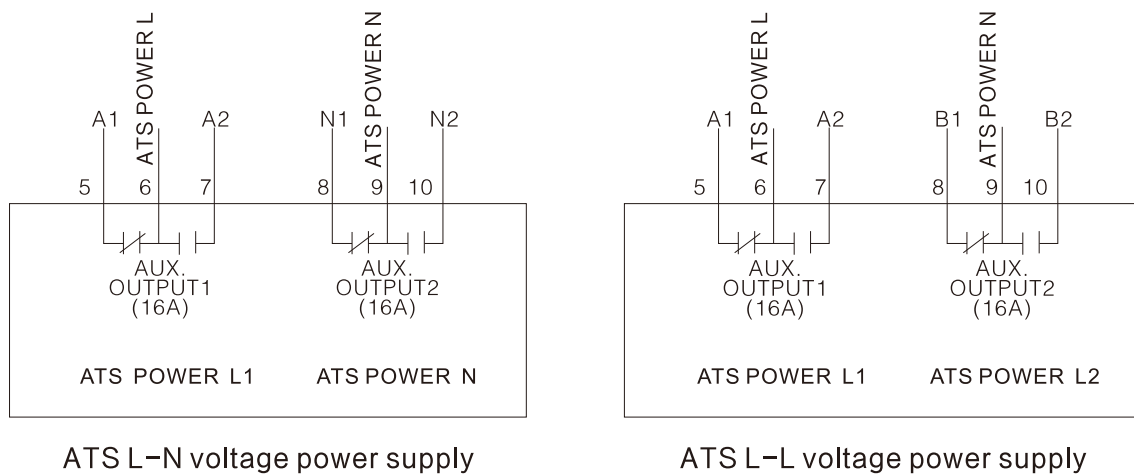

Note: Normal Closed input voltage must come from the same one circuit voltage.

### 13. COMMUNICATION CONFIGURATION (OPTION)


Y-700 series has RS485 serial port, be allowed to connect the local area network with open structure. Its apply protocols of ModBus communication with PC or data acquisition system running on software. Also can provide a simple and practical to factories, telecom, industrial and civil buildings dual power switching management plan, achieve dual power monitor and “remote controlling, remote measuring, remote communication” functions.

More information of Communication Protocol, see the “Y-700 communication protocol” .

Communication parameters,

- Module address 1 (range: 1-254, User can set it)
- Baud rate 9600 bps
- Data bit 8bit
- Parity bit None
- Stop bit 1 bit or 2-bits(set via PC)

### 14. DESCRIPTION OF CONNECTING TERMINALS

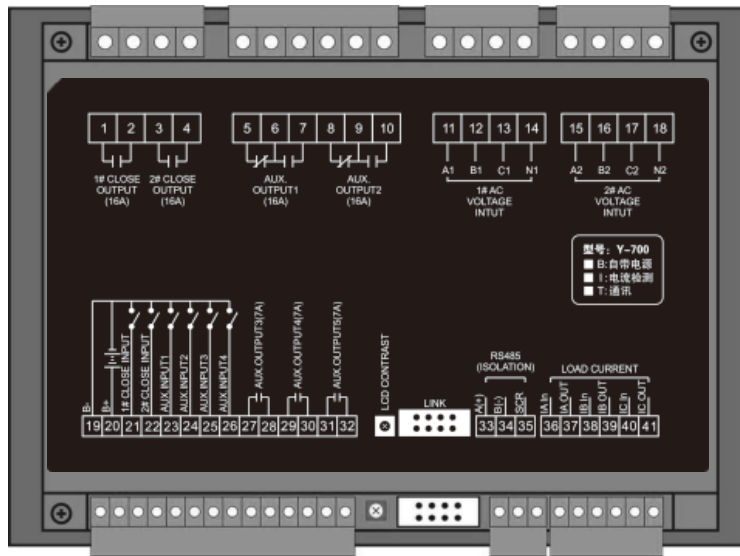


Port functional description

Terminal	Item	Description	Remark
1	1# Closed Output	Passive relay contact output	Rated 250V16A
2			
3	2# Closed Output	Passive relay contact output	Rated 250V16A
4			
5	Aux. Output 1	NC	The default is ATS power of L1 output. Free voltage relay contracts Rated 250V16A
6		Common	
7		NO	
8	Aux. Output 2	NC	The default is ATS power of N output. Free voltage relay contracts Rated 250V16A
9		Common	
10		NO	
11	A1	1# AC 3-phase 4 wire voltage input	If the input for single-phase, only connect A1,N1
12	B1		
13	C1		
14	N1		


Terminal	Item	Description	Remark
15	A2	2# AC 3-phase 4 wire voltage input	If the input for single-phase, only connect A2,N2
16	B2		
17	C2		
18	N2		
19	GND	connect the generator battery	DC Negative pole
20	DC Power Input	When you need to start generator, connect the terminal to the generator battery positive pole	DC positive input 8-35V controller power supply
21	1# Closed Input	Detection of 1 # switch closing state, voltage free contact input	It is active to GND
22	2# Closed Input	Detection of 2 # switch closing state, voltage free contact input	It is active to GND
23	Aux. Input 1	It is active to GND	
24	Aux. Input 2	It is active to GND	
25	Aux. Input 3	It is active to GND	
26	Aux. Input 4	It is active to GND	
27	Aux. Output 3	Voltage free relay contacts output	Rated 250V7A
28			
29	Aux. Output 4	Voltage free relay contacts output	Rated 250V7A
30			
31	Aux. Output 5	Voltage free relay contacts output	Rated 250V7A
32			
33	Rs485 A+	Rs485 communications port	
34	RS485 B		
35	Rs485 ND-		
36	Ia Input	Sensing from Secondary phase A current	Only suitable for Y-700/I, Y-700/BI
37	IA Output		
38	IB Input	Sensing from Secondary phase B current	
39	IB Output		
40	IC Input	Sensing from Secondary phase C current	
41	IC Output		
LCD CONTRAST	LCD display	Adjust the LCD contrast	
INK	Program Port	Factory update	

# 15.TYPICAL WIRING DIAGRAM


Y-700/ATYS3 Diagram

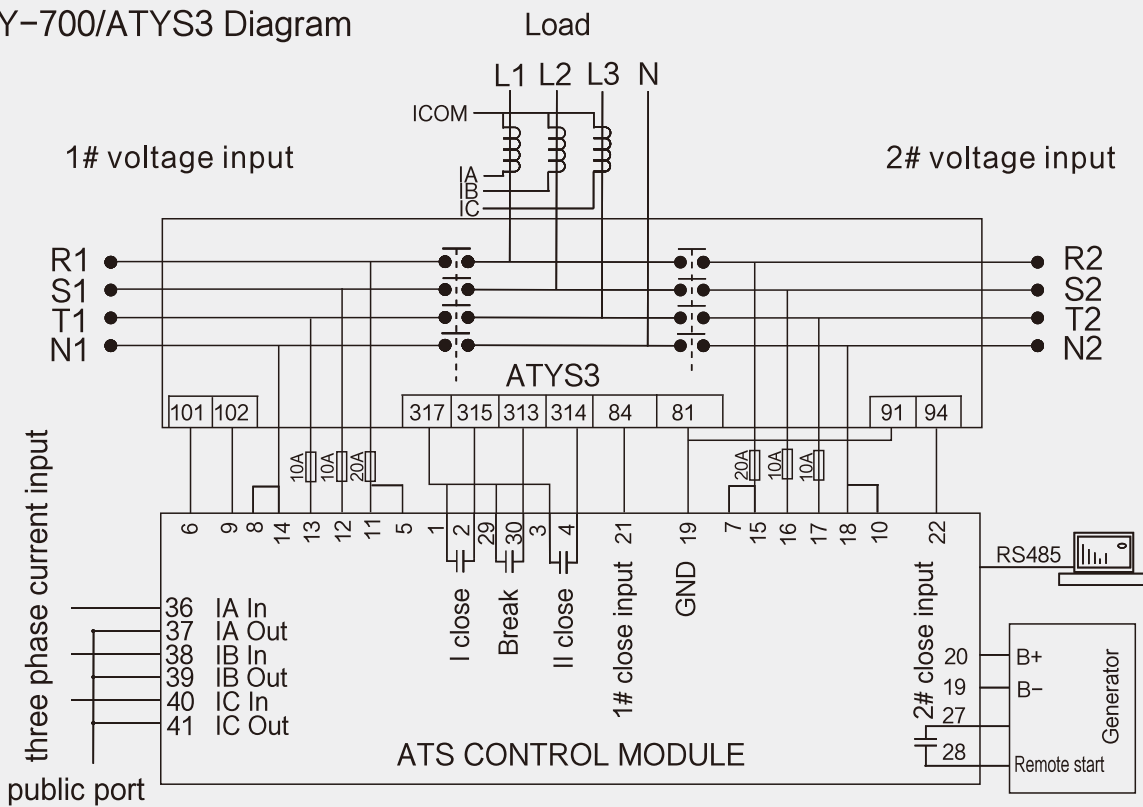


Y-700/N/T Diagram

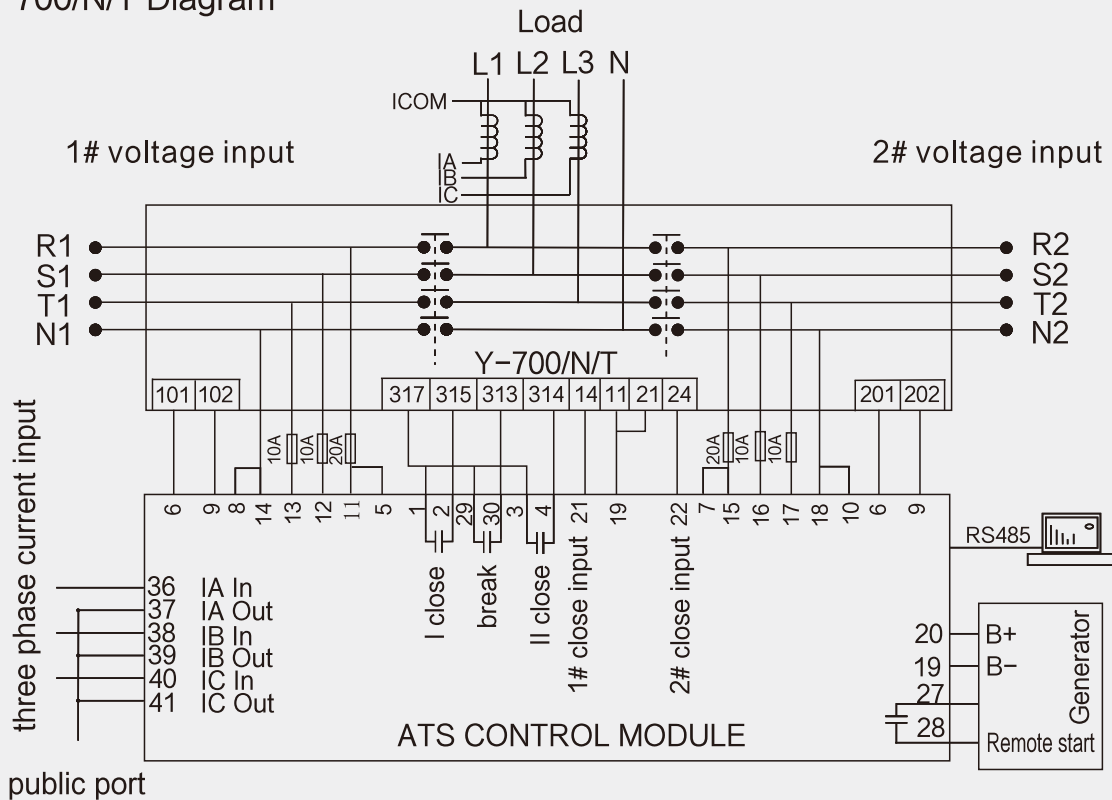


### Y-700/M Diagram

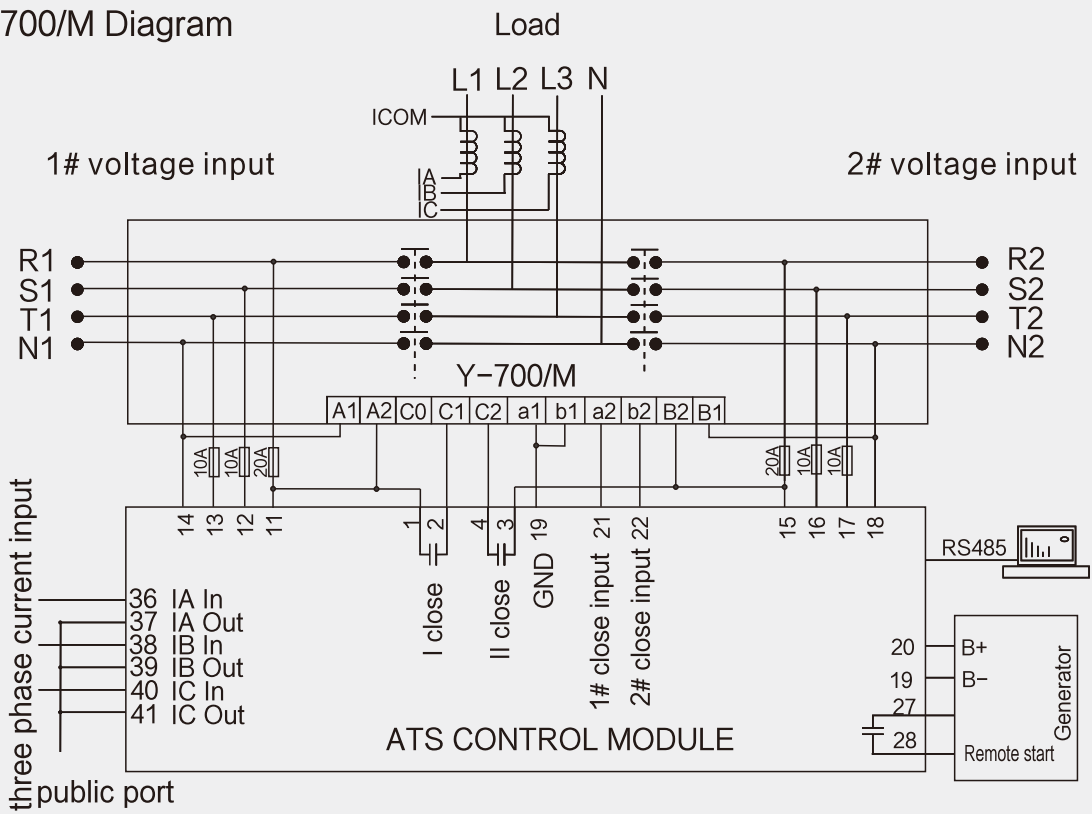


### Y-700/VITZRO Diagram

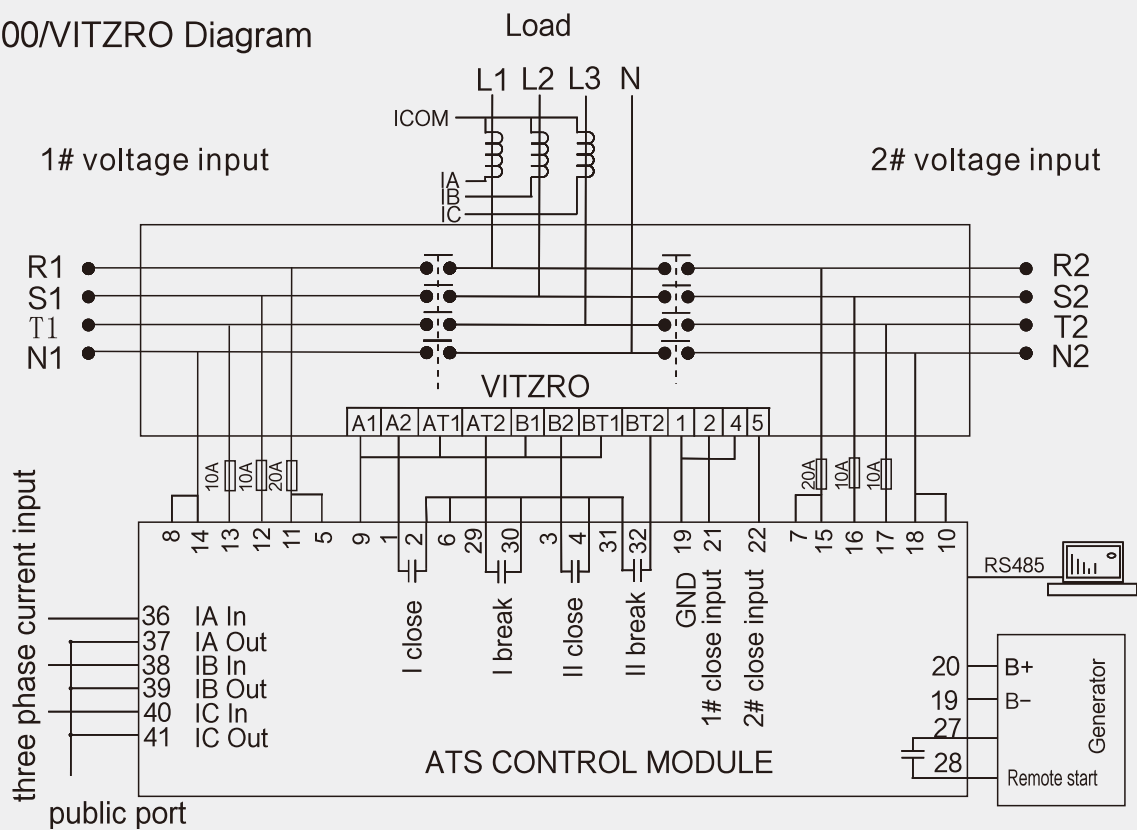


### Y-700/Contactor Diagram

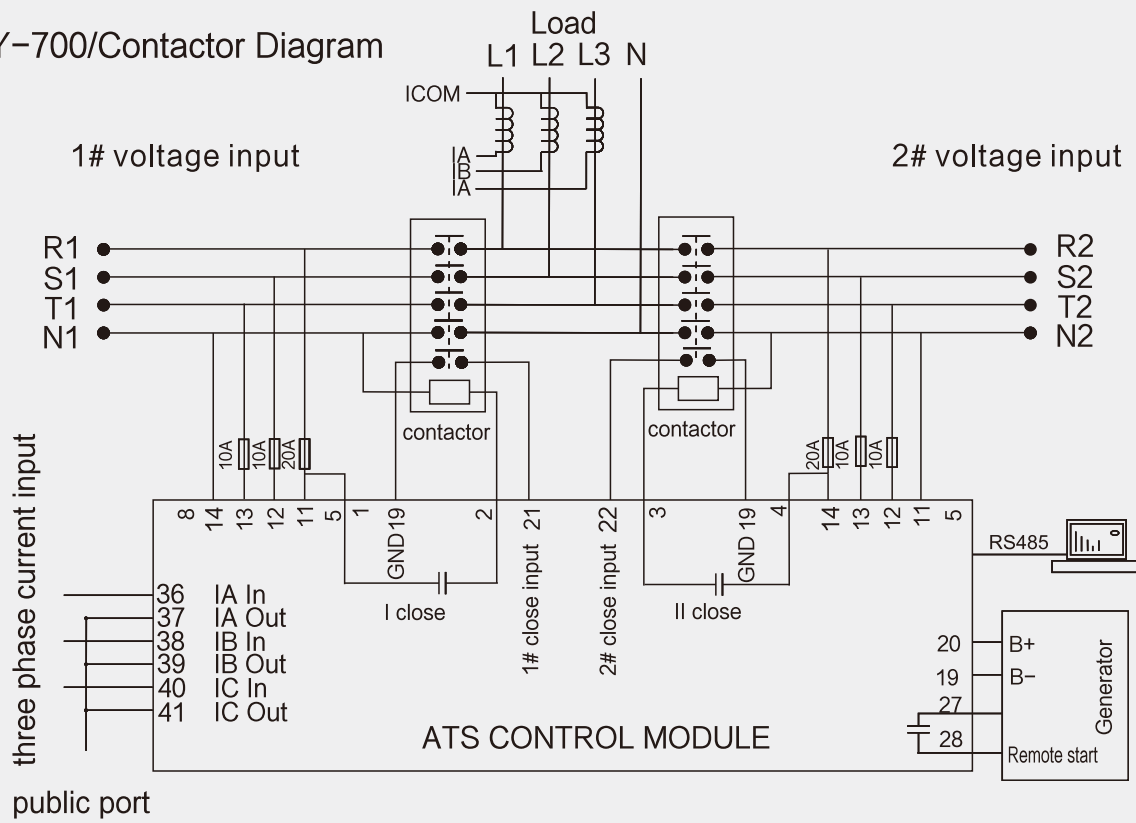


### Y-700/ATYSM3S Diagram

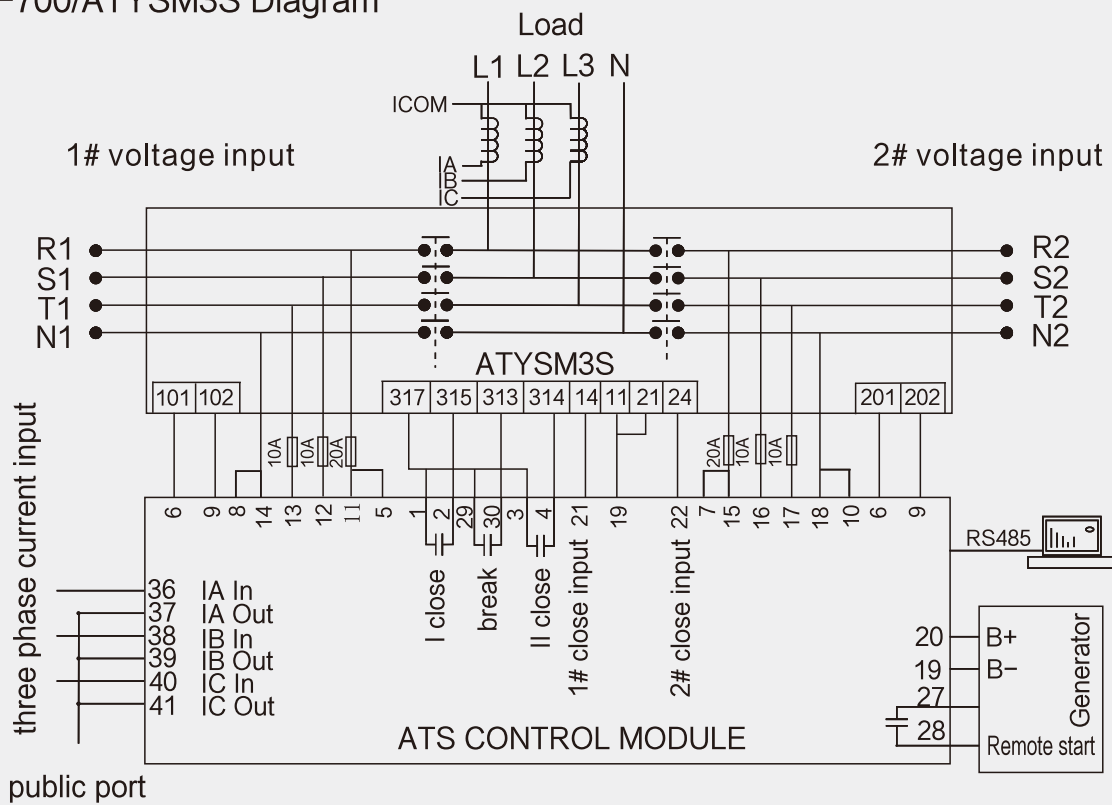


### Y-700/GA Diagram

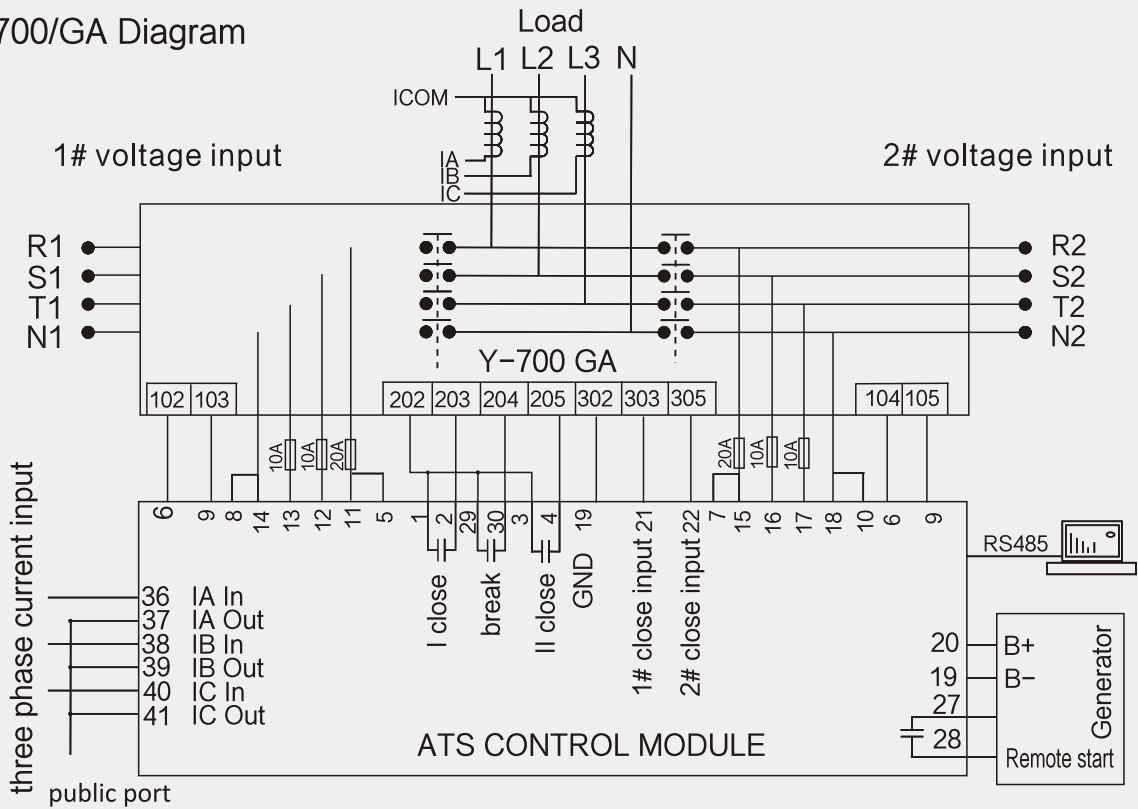

### Y-700/DW45 Diagram

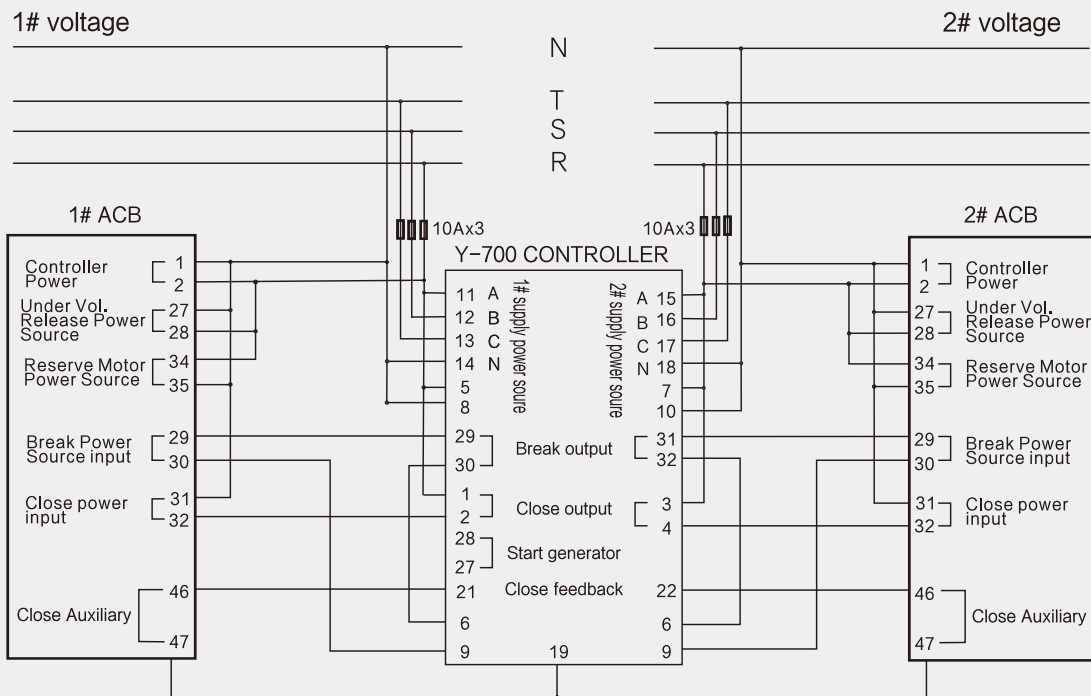


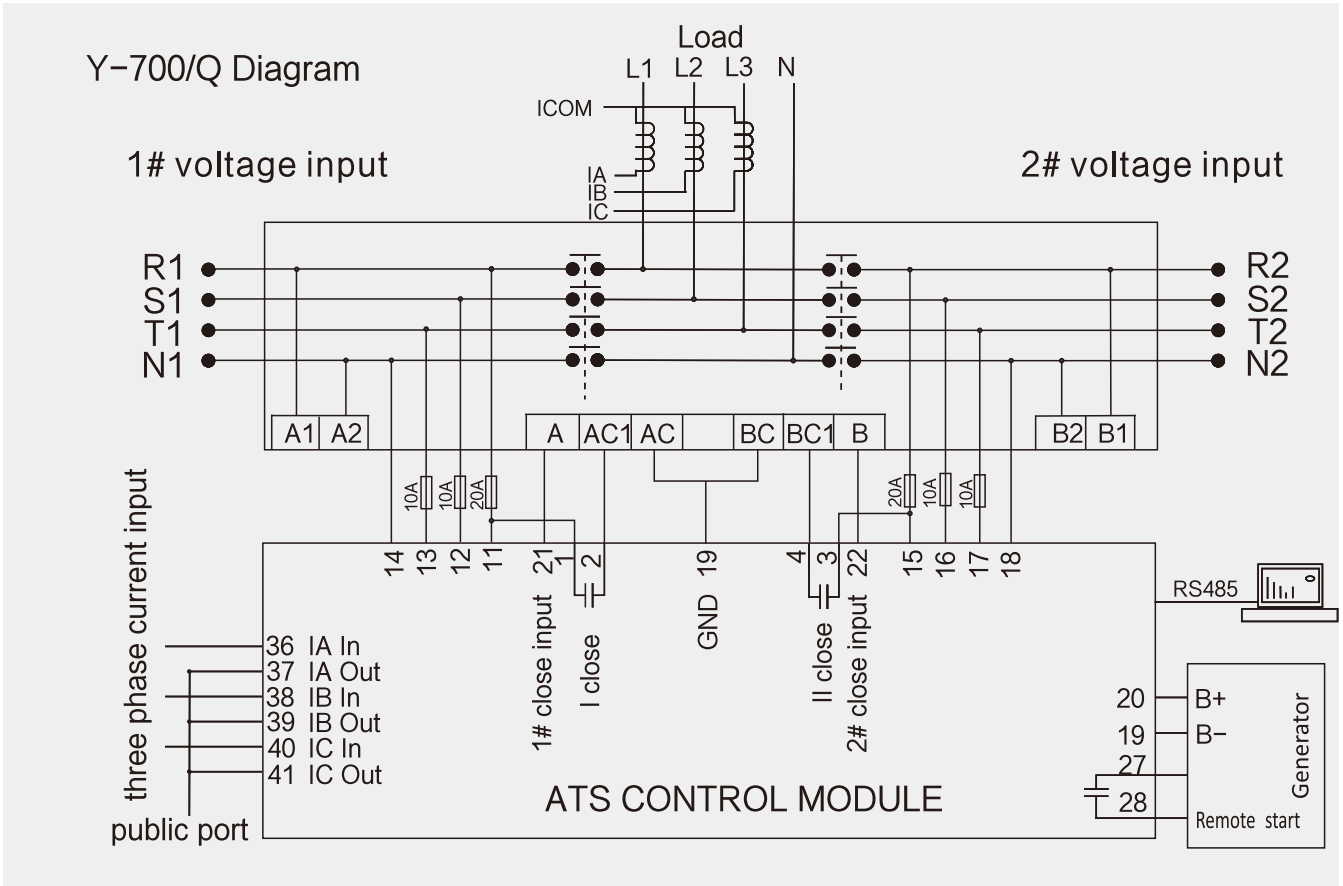

NOTE:

All above are application diagram of Y-700 series ATS controllers. However, Y-700、Y-700/B have no sample current input, please skip over the current part of the diagram.

## 15. INSTALLATION

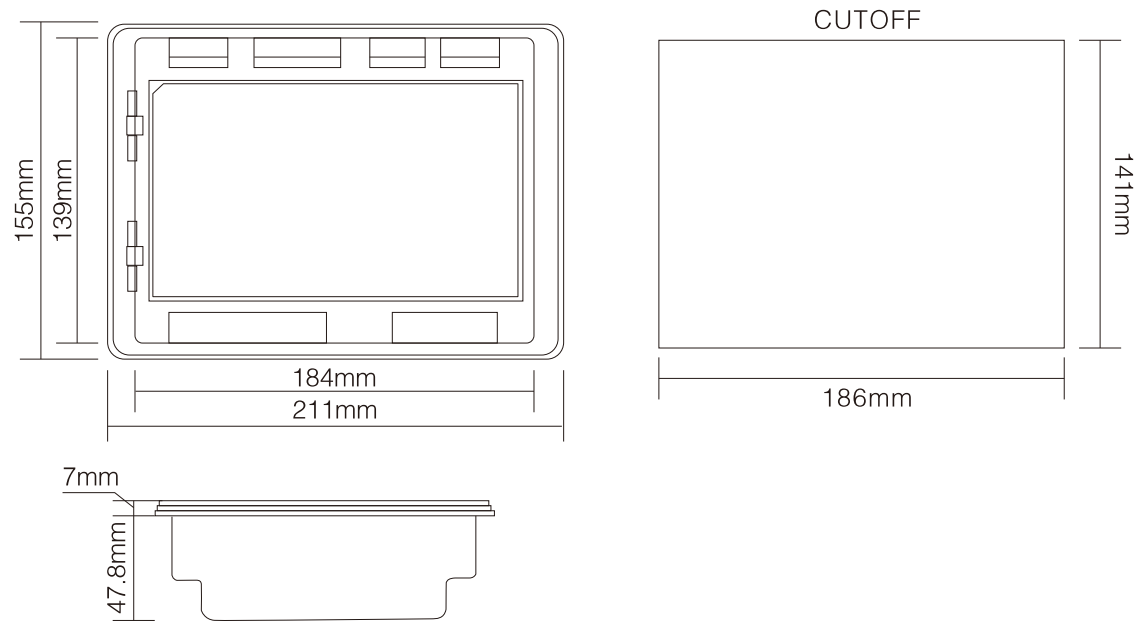

## 17. FAULT FINDING

Controller no operation	Check the Phase A1, N1 or Phase A1, N1 voltage. Check connection wirings from the controller to ATS. Check DC fuse.
Rs485 communication failure	Check whether the RS485 is wrong connection between negative and positive. Check whether the RS485 adapt is abnormal. Check whether the parameter settings in the module addresses are incorrect. If the above methods are no using, you can try to connect the GND of controller with RS485 GND (or PC GND). Recommend that the A and B lines of the 485 network should be terminated at each end with a 120 $\Omega$ resistor.
Programmable output error	Check programmable output connections, pay attention to Normally opened and closed.
	Check the output parameters settings.
Programmable input abnormal	Ensure that the programmable input connect to GND reliably when it' s active, and hung up when it is inactive. (Note: The input will be possibly destroyed when connected with voltage)
ATS not work while Generator running	Check ATS. Check the connection wirings between the controller and the ATS. Ensure that the ATS OFF position numbers are same as the setting OFF position numbers.

**ZHEJIANG LVMA IMPORT AND EXPORT CO., LTD.**

Mobile: 18157733126

E-mail: [info@lvma-ele.com](mailto:info@lvma-ele.com)

Http: [www.lvma-ele.com](http://www.lvma-ele.com)

ADD: No. 6688, Xuyang Road, Chengdong Street,  
Yueqing City, Wenzhou City, Zhejiang Province  
(9th Floor, Building 5, Headquarters Economic Park)

Suggest sending the manual to the final user!